

[Manuals.plus](#) /

› [EUREKA ERGONOMIC](#) /

› EUREKA ERGONOMIC 61-inch L-Shaped Electric Standing Desk (Model ERK-DL60L-LB) User Manual

EUREKA ERGONOMIC ERK-DL60L-LB

EUREKA ERGONOMIC 61-inch L-Shaped Electric Standing Desk User Manual

Model: ERK-DL60L-LB

Brand: EUREKA ERGONOMIC

1. PRODUCT OVERVIEW

The EUREKA ERGONOMIC L-Shaped Electric Standing Desk is designed to provide a versatile and ergonomic workspace. Featuring a solid wood desktop, dual motors for smooth height adjustment, and integrated accessories, this desk supports both sitting and standing postures to enhance comfort and productivity.



Image 1.1: The EUREKA ERGONOMIC L-Shaped Electric Standing Desk, showcasing its design and features in an office environment.

Key Features:

- **L-Shaped Solid Wood Desktop:** Crafted from solid oak wood for durability and a natural aesthetic.
- **Powerful Smart Dual Motor:** Enables smooth and quiet height adjustment (under 40 dB) from 29.8" to 48.3".
- **Strong 220 lbs Support:** Sturdy carbon steel frame and solid wood tabletop ensure stability and a high weight capacity.
- **Ergonomic Keyboard Tray & Monitor Stand:** Includes a slide-out keyboard tray with an integrated wrist rest and a monitor stand to raise displays to eye level.
- **Memory Controller:** Features 3 memory presets for easy switching between preferred sitting and standing heights, plus a built-in USB charging port.
- **Smart Anti-Collision Technology:** Built-in Hall Sensor & AI Control for safe operation.

Your browser does not support the video tag.

Video 1.1: An overview of the EUREKA ERGONOMIC Solid Wood L Shaped Standing Desk, highlighting its design and functionality.

2. SETUP AND ASSEMBLY

Assembly is required for this product. The desk comes disassembled and needs to be put together by the user. The assembly process involves attaching the legs, the keyboard tray, the monitor stand, and connecting the electric components. Please follow the instructions carefully to ensure proper setup and functionality.

Assembly Steps:

1. Unpack all components and verify against the parts list provided in the packaging.
2. Assemble the desk frame, ensuring all connections are secure.
3. Attach the L-shaped desktop sections to the frame.
4. Install the keyboard tray and monitor stand according to the diagrams.
5. Connect all electrical components, including the dual motors and control panel.
6. Perform initial calibration as described in the operating instructions.

Your browser does not support the video tag.

Video 2.1: Detailed installation guide for the EUREKA ERGONOMIC Solid Wood L Shaped Standing Desk.

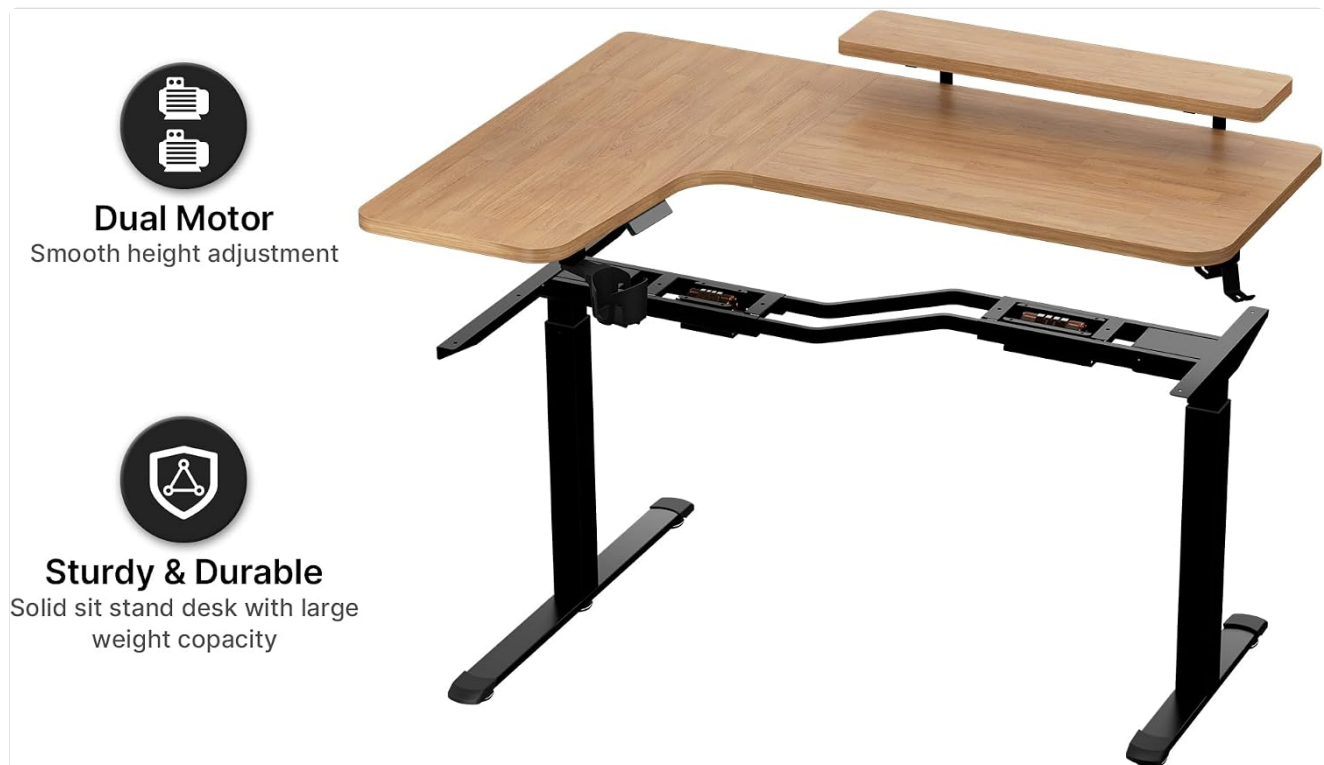


Image 2.1: The desk's dual motor system and sturdy carbon steel frame, highlighting its robust construction.

3. OPERATING INSTRUCTIONS

Height Adjustment:

The desk features a powerful dual motor system for electric height adjustment. Use the 'Up' and 'Down' buttons on the control panel to smoothly raise or lower the desk to your desired height between 29.8" and 48.3".

Memory Presets:

The memory controller allows you to save up to 3 preferred height settings. To set a memory position:

1. Adjust the desk to your desired height using the 'Up' or 'Down' buttons.
2. Press the 'M' button, then press one of the number buttons (1, 2, or 3) within 3 seconds. The display will show

'S-' followed by the number, indicating the height is saved.

3. To recall a saved height, simply press the corresponding number button (1, 2, or 3).

Control Panel and Smart App:

The desk is equipped with a touch screen control panel for intuitive operation. Additionally, you can connect to the "Eureka Smart" app via Wi-Fi for remote control and advanced settings.



Image 3.1: The touch screen control panel, showing the digital display, up/down controls, memory/lock function, and 3 customizable preset height buttons.

Anti-Collision Technology:

The built-in smart anti-collision technology with Hall Sensor & AI Control detects obstacles during height adjustment. If an obstruction is encountered, the desk will automatically stop and slightly reverse direction to prevent damage.

Keyboard Tray and Monitor Stand:

The slide-out keyboard tray provides an ergonomic typing position and helps keep the main desktop clear. It includes a soft gel wrist rest for comfort. The integrated monitor stand raises your display to a comfortable eye level, reducing neck strain. The monitor stand also features RGB lighting for customizable ambiance.



29" keyboard tray with integrated wrist

Image 3.2: The 29-inch keyboard tray with an integrated wrist rest, designed for ergonomic use.



Image 3.3: The ergonomic monitor stand featuring RGB lighting, which can be set to single or multi-color modes.

4. MAINTENANCE

To ensure the longevity and optimal performance of your EUREKA ERGONOMIC L-Shaped Electric Standing Desk, follow these maintenance guidelines:

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish or electronic components.
- **Cable Management:** Regularly check and organize cables using the provided cable management tray to prevent tangling and interference with desk movement.
- **Motor Care:** The dual motors are designed for long-term use. Avoid overloading the desk beyond its 220 lbs capacity. Do not attempt to disassemble the motor units.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Environmental Conditions:** Keep the desk in a dry environment and avoid extreme temperature fluctuations.

5. TROUBLESHOOTING

If you encounter issues with your EUREKA ERGONOMIC L-Shaped Electric Standing Desk, refer to the following common troubleshooting steps:

Desk Not Moving / Unresponsive Controls:

- **Power Check:** Ensure the power cord is securely plugged into both the desk and a working wall outlet.
- **Reset:** Unplug the desk from the power outlet for 10-15 seconds, then plug it back in. This can often resolve minor electronic glitches.
- **Control Panel Lock:** Check if the control panel is locked. Some models have a lock function (often indicated by a 'L' on the display or a specific button combination). Refer to the full manual for specific lock/unlock procedures.

Anti-Collision System Triggering Frequently:

- **Obstruction Check:** Ensure there are no physical obstructions (e.g., cables, furniture, objects under the desk) that could be triggering the anti-collision sensor.
- **Sensitivity Adjustment:** Some models allow adjustment of the anti-collision sensitivity via the control panel or app. Consult the full manual for instructions.

Uneven Height Adjustment:

- **Weight Distribution:** Ensure the weight on the desk is evenly distributed and not exceeding the maximum capacity.
- **Recalibration:** Perform a full reset and recalibration of the desk. This typically involves lowering the desk to its lowest point and holding the 'Down' button until it cycles through a reset procedure. Refer to the full manual for precise steps.

If these steps do not resolve the issue, please contact customer support.

6. SPECIFICATIONS

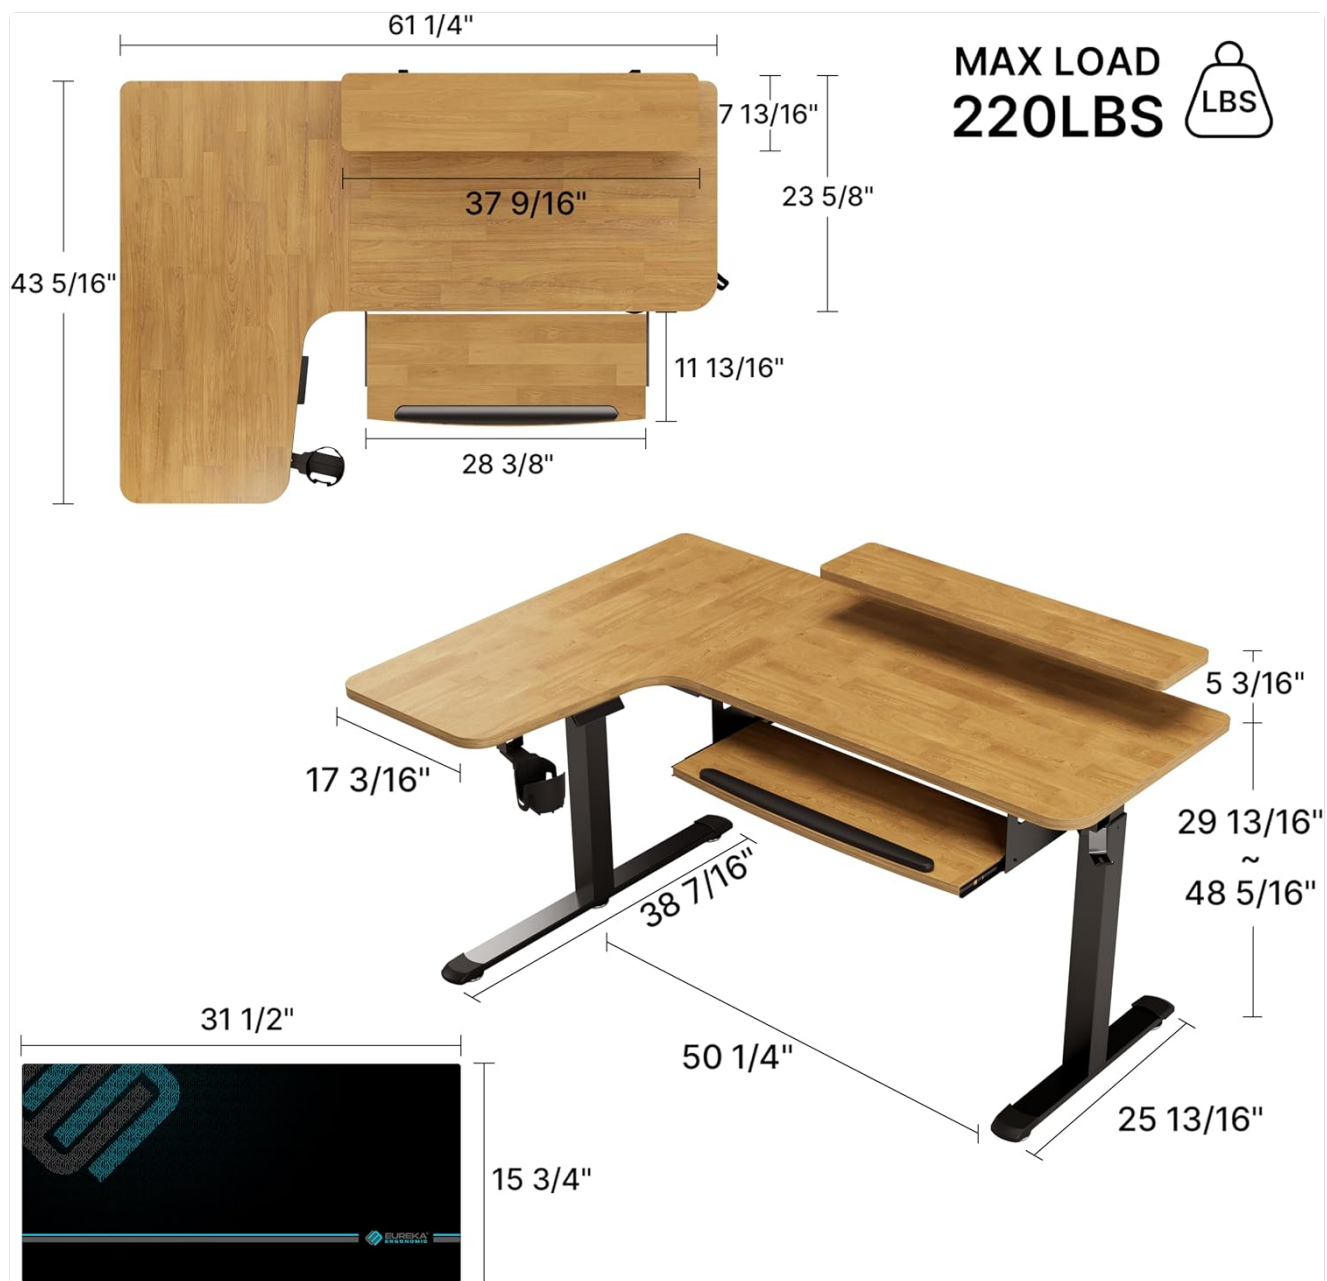


Image 6.1: Detailed dimensions of the EUREKA ERGONOMIC 61-inch L-Shaped Electric Standing Desk.

Feature	Detail
Brand	EUREKA ERGONOMIC
Model Number	ERK-DL60L-LB
Shape	L-Shape
Product Dimensions (D x W x H)	43"D x 61"W x 30"H
Color	Oak
Style	Modern
Base Material	Carbon Steel
Top Material Type	Oak Wood
Finish Type	Solid Wood

Feature	Detail
Special Features	Adjustable Height, Electric, Ergonomic, Keyboard Tray Included, Monitor Stand
Item Weight	123.2 Pounds
Tabletop Thickness	1 Inch
Minimum Height	29.8 Inches
Maximum Height	48.3 Inches
Maximum Weight Recommendation	220 Pounds
Included Components	Cable Management Tray, Cup Holder, Headphone Hook
Required Assembly	Yes

7. WARRANTY AND SUPPORT

Warranty Information:

This product is typically covered by a manufacturer's warranty. For specific details regarding warranty duration and coverage, please refer to the warranty card included with your product or visit the official [EUREKA ERGONOMIC](#) website. Standard return policy allows for returns within 30 days of purchase.

Customer Support:

For technical assistance, missing parts, or any other inquiries, please contact [EUREKA ERGONOMIC](#) customer support. Contact information can typically be found on the product packaging, the official website, or through your retailer.

Online Resources: Visit the [EUREKA ERGONOMIC Store on Amazon](#) for additional product information and support.