

[Manuals.plus](#) /

› [TDLOL](#) /

› TDLOL X65 30000mAh Portable Misting Fan User Manual

TDLOL X65

TDLOL X65 30000mAh Portable Misting Fan User Manual

Model: X65

[Instructions](#) [Setup](#) [Operation](#) [Product Overview](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The TDLOL X65 is a versatile 30000mAh portable misting fan designed for both indoor and outdoor use. It features a powerful fan with multiple speed settings, various mist modes, automatic oscillation, and an RGB ambient light. Its large battery capacity ensures extended operation, making it ideal for camping, travel, and other outdoor activities.

Package Contents

- 1 × TDLOL X65 Misting Fan (with built-in water tank and portable handle)
- 1 × 12V Charger Adapter
- 1 × User Manual

30000mAh Large Battery Capacity Fan

30000mAh



Image: The TDLOL X65 Misting Fan, showcasing its overall design and the DC input connector for charging.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the fan in water or other liquids.
- Keep out of reach of children and pets.

- Use only the provided 12V charger adapter.
- Ensure the water tank is securely closed before operating the misting function.
- Always use clean water in the misting tank to prevent clogging and ensure proper function.
- Do not block the fan blades or air inlets/outlets during operation.
- Avoid placing the fan on unstable surfaces.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support if needed.

3. SETUP

3.1 Charging the Fan

Before first use, fully charge the fan. The 30000mAh battery requires approximately 4-6 hours for a full charge using the provided 12V charger adapter. The fan features built-in protection against overcharging and overheating.

1. Connect the 12V charger adapter to the DC input connector on the fan.
2. Plug the adapter into a standard wall outlet.
3. The charging indicator lights will show the charging status.
4. Once fully charged, disconnect the adapter.

30000mAh Large Battery Capacity Fan

30000mAh



DC Input Connector

Image: The DC input connector located on the fan base for charging.

3.2 Filling the Water Tank for Misting

The fan is equipped with a 2L water tank for the misting function. Always use clean water to prevent nozzle clogging.

1. Locate the water filling port on the side of the fan.
2. Open the leak-proof cover of the filling port.
3. Carefully pour clean water into the 2L water tank. Do not overfill.

4. Securely close the leak-proof cover to prevent spills.

Easy to Add Water Portable Spray Fan

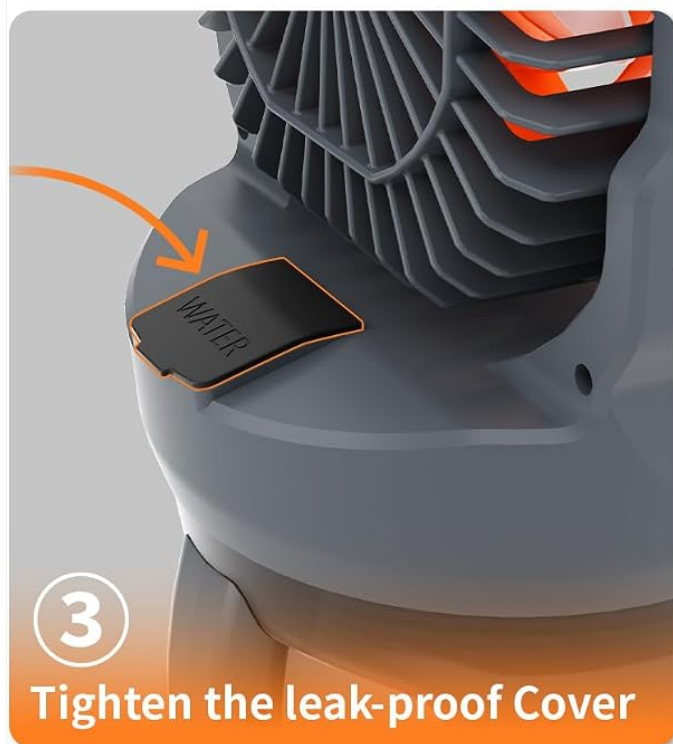
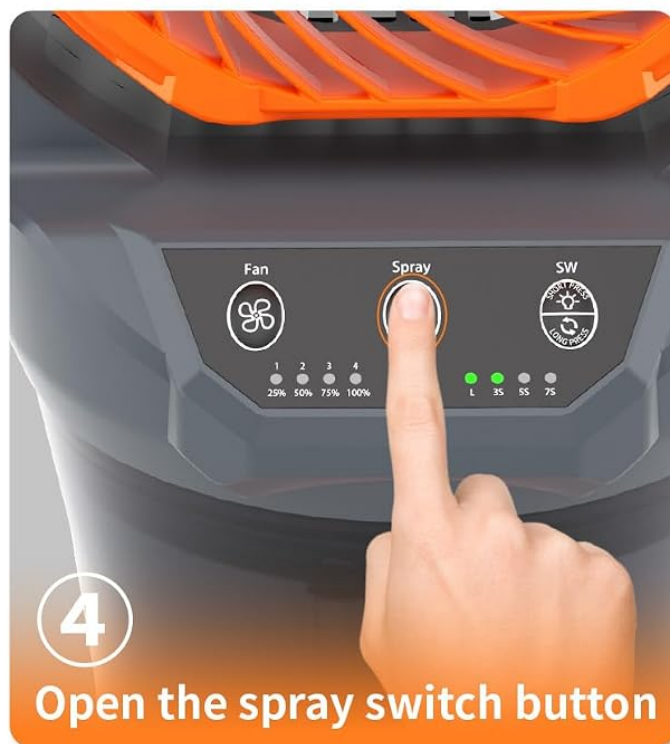


Image: A visual guide demonstrating the four steps to easily add water to the portable spray fan's tank.

4. OPERATING INSTRUCTIONS

The control panel is located on the front of the fan, featuring buttons for fan, spray, and light functions.

4.1 Fan Operation

- **Power On/Off:** Press the **Fan** button once to turn on the fan at Speed 1. Press again to cycle through speeds. Long press to turn off.
- **Adjusting Wind Speed:** Repeatedly press the **Fan** button to cycle through 4 wind speeds (Speed 1, Speed 2, Speed 3, Speed 4).

All-Daily Lasting Cooling Battery Fan

Adjustable Speeds Fan



Image: The fan displaying its adjustable speeds and estimated battery life for each setting (e.g., Speed 1 up to 60H, Speed 4 up to 26H).

4.2 Misting Function

- **Activate Mist:** Press the **Spray** button once to activate the continuous mist mode.
- **Change Mist Mode:** Repeatedly press the **Spray** button to cycle through 4 spray mist modes:
 - Mode 1: Continuous Spraying (approx. 30 minutes)
 - Mode 2: 3 Seconds Spray, 3 Seconds Stop
 - Mode 3: 5 Seconds Spray, 3 Seconds Stop
 - Mode 4: 7 Seconds Spray, 3 Seconds Stop
- **Deactivate Mist:** Continue pressing the **Spray** button until the mist function turns off.

Air Conditioner Cooling Mist Humidifier Fan

Is the perfect choice for spray battery operated fan in summer



4 Spray Mode Working Fan

Mode 1: Continuous Spraying

Mode 2: 3 Spray 3 Stop

Mode 3: 5 Spray 3 Stop

Mode 4: 7 Spray 3 Stop

Image: The fan illustrating its four distinct spray mist modes, from continuous to intermittent.

4.3 Oscillation and Angle Adjustment

- **Automatic Oscillation:** Long press the **SW** button for 2 seconds to activate 120° automatic left/right oscillation. Long press again to stop.
- **Manual Vertical Adjustment:** The fan head can be manually adjusted up to 270° vertically to direct airflow.

Wider Cooling Range Oscillating Fan

Perfect for hot summer days in all directions



270°
Manually Adjustment
the fan head Up/Down



120°
Automatic
Left/Right Rotation

Image: The fan demonstrating its 120-degree automatic oscillation and 270-degree manual vertical adjustment capabilities.

Your browser does not support the video tag.

Video: An official product video from TDLOL demonstrating the fan's features, including oscillation and misting.

4.4 RGB Ambient Light

- **Activate Light:** Press the **SW** button once to turn on the RGB light.
- **Change Light Mode:** Repeatedly press the **SW** button to cycle through different RGB light modes (Fixed color, Gradient, Flash).

- **Deactivate Light:** Continue pressing the **SW** button until the light turns off.



Image: The fan displaying its RGB ambient lighting feature, creating a colorful atmosphere.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the fan before cleaning.
- Wipe the exterior of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- For the water tank, regularly empty and rinse it with clean water to prevent mineral buildup and bacterial growth.
- If misting nozzles become clogged, gently clean them with a small brush or cotton swab. Using only clean water helps prevent this.

5.2 Storage

- When not in use for extended periods, ensure the water tank is empty and dry.
- Store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided adapter.
Misting function not working or weak mist.	Water tank is empty. Nozzles are clogged. Water tank not properly sealed.	Refill the water tank. Clean the misting nozzles. Ensure the water tank cover is securely closed.
Water leakage from tank.	Water tank cover not sealed properly. Tank damage (e.g., cracks).	Ensure the water tank cover is securely closed. If the tank is damaged, discontinue use and contact customer support.
Fan makes unusual noise.	Obstruction in fan blades. Unit not on a stable surface.	Check for and remove any obstructions. Place the fan on a flat, stable surface.

7. SPECIFICATIONS

Feature	Detail
Brand	TDLOL
Model Name	X65
Battery Capacity	30000mAh
Water Tank Capacity	2 Liters (2000ML)
Wind Speeds	4 Levels
Spray Modes	4 Modes (Continuous, 3s Spray/3s Stop, 5s Spray/3s Stop, 7s Spray/3s Stop)
Oscillation	120° Automatic Horizontal
Vertical Adjustment	270° Manual
Special Features	RGB Light, Portable, Quiet Operation

Feature	Detail
Power Source	Battery Powered (Rechargeable)
Charging Time	4-6 hours for full charge
Runtime (Fan only)	26-60 hours (depending on speed)
Material	Plastic
Dimensions (D x W x H)	1"D x 1"W x 1"H <i>(Note: These dimensions are generic; actual product size may vary.)</i>

8. WARRANTY & SUPPORT

TDLOL products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your product or contact TDLOL customer service directly. Please have your model number (X65) and purchase details ready when contacting support.

Contact Information: Please refer to the official TDLOL website or your purchase documentation for the most up-to-date customer support contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

