

[Manuals.plus](#) /

› [Devoko](#) /

› Devoko 3.28 x 3.28m Pop-Up Gazebo Instruction Manual

Devoko 3.28*3.28

Devoko 3.28 x 3.28m Pop-Up Gazebo Instruction Manual

Model: 3.28*3.28 | Brand: Devoko

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Devoko 3.28 x 3.28m Pop-Up Gazebo. Please read these instructions carefully before use to ensure safe and correct operation.



Image: The Devoko Pop-Up Gazebo providing shade and shelter in an outdoor setting.

SAFETY INFORMATION

- Ensure all parts are securely fastened before and during use.
- Do not use the gazebo in extreme weather conditions such as strong winds, heavy rain, or snow.
- Keep children and pets away from the gazebo during assembly and disassembly.
- Always anchor the gazebo using the provided ground pegs and tension ropes to prevent tipping.
- Avoid placing heat sources or open flames inside or near the gazebo.

PACKAGE CONTENTS

Verify that all components listed below are present in your package before beginning assembly.

Devoko

Small canopy fabric


Large canopy fabric



Side walls*4



Top cloth*2

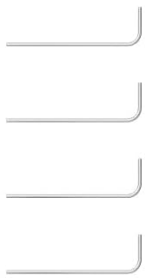

Ground pegs*8



Tension ropes*4



Iron frame



Wheeled carry bag

Image: All components of the Devoko Pop-Up Gazebo, including frame, canopy fabrics, side walls, ground pegs, tension ropes, and wheeled carry bag.

- Iron Frame (1)
- Large Canopy Fabric (1)
- Small Canopy Fabric (1)
- Side Walls (4)
- Ground Pegs (8)
- Tension Ropes (4)
- Wheeled Carry Bag (1)

SETUP INSTRUCTIONS

Assembly typically takes 1 to 5 minutes with two people. Follow these steps for quick and secure setup.

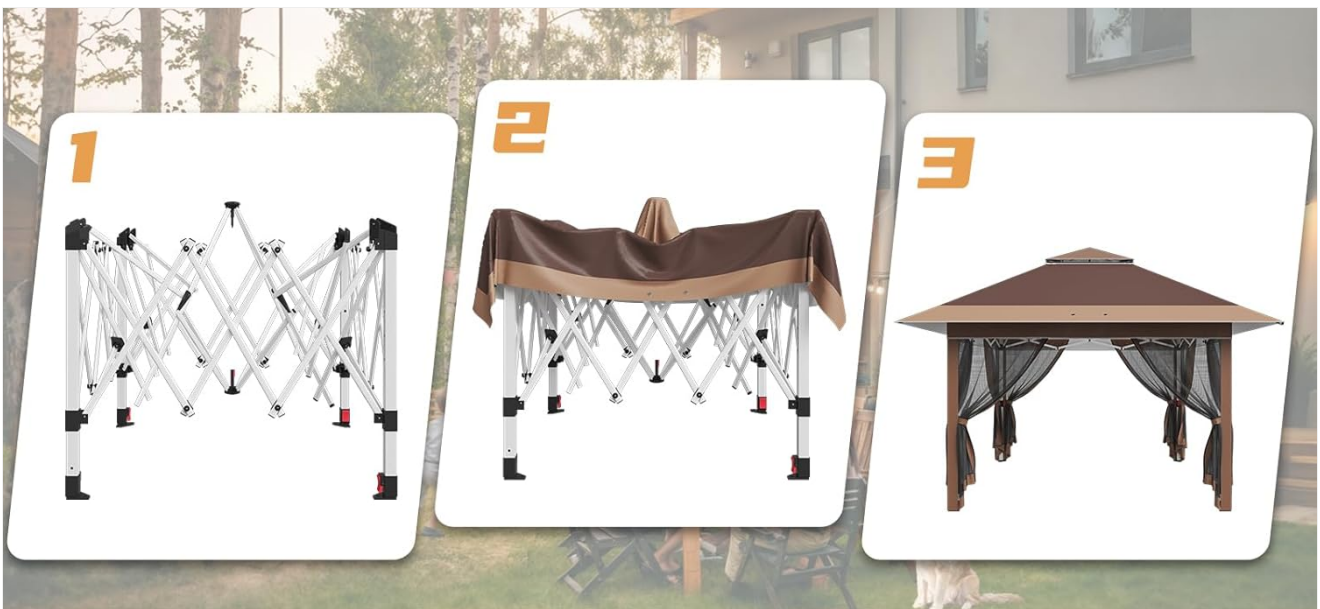


Image: Visual representation of the gazebo setup process, from folded frame to fully assembled structure.

1. Step 1: Expand the Frame

Place the folded iron frame in the desired location. With a partner, gently pull the outer legs of the frame outwards until it is partially expanded. Do not fully extend yet.

2. Step 2: Attach the Canopy Fabric

Unfold the large canopy fabric and drape it over the partially expanded frame. Secure the corners of the canopy to the frame's corner posts. Ensure the small canopy fabric is also correctly positioned on top, aligning with the double roof design.

3. Step 3: Fully Extend and Secure

From each corner, push up on the frame's central locking mechanism until it clicks into place, fully extending the gazebo. Adjust the height of the legs using the 3-level adjustment system (260 cm, 270 cm, or 280 cm) by pressing the red button on each leg and sliding it to the desired height. Finally, attach the side walls if desired, and secure the gazebo to the ground using the provided ground pegs and tension ropes for stability.



Image: Close-up of the gazebo's robust structure and simplified installation mechanism.

OPERATING INSTRUCTIONS

Adjusting Height

The gazebo features a 3-level height adjustment system. To adjust, locate the red button on each leg. Press the button and slide the inner leg to one of the three available height settings: 260 cm, 270 cm, or 280 cm. Ensure all four legs are set to the same height for stability.

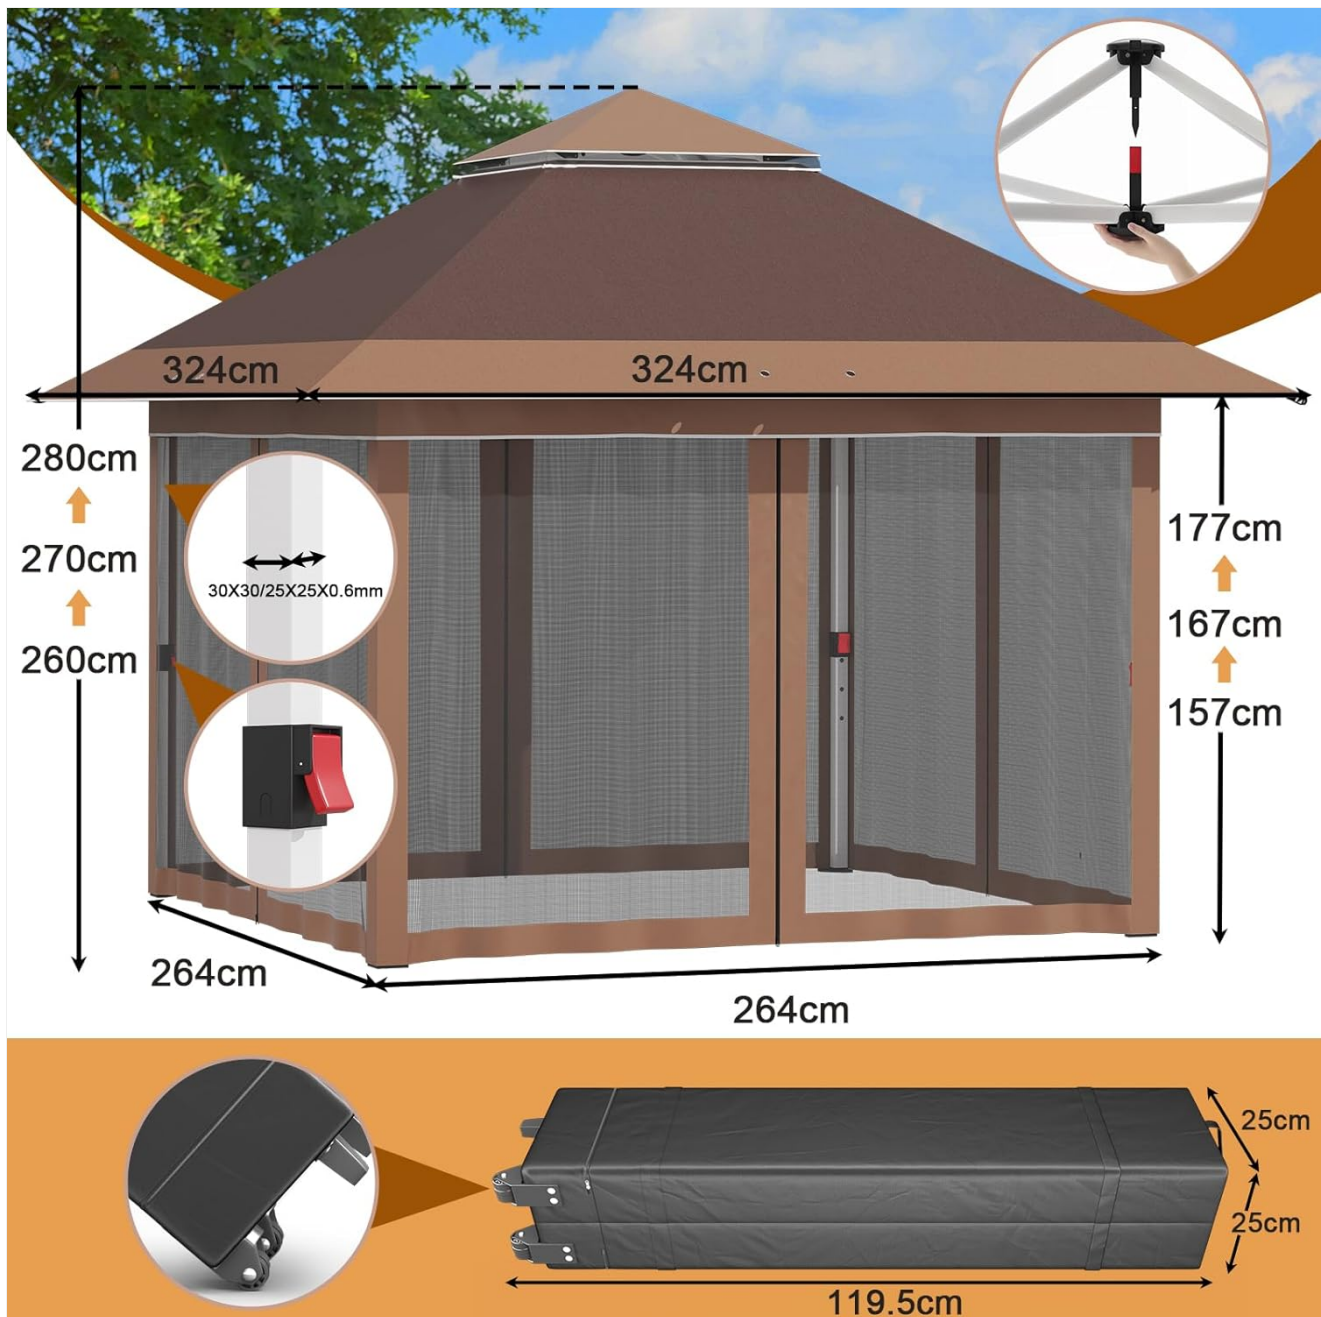


Image: Detailed dimensions and height adjustment points of the Devoko Pop-Up Gazebo.

Using Mesh Side Walls

The gazebo is equipped with four breathable mesh side walls. These walls provide protection against insects while allowing for optimal air circulation. They feature double-sided zippers for convenient entry and exit. Attach the mesh walls to the gazebo frame using the integrated fasteners.

Double Roof and Drainage

The unique double roof design includes 8 drainage holes. This feature effectively prevents water accumulation during heavy rain, protecting the structure from deformation and ensuring a comfortable climate inside by optimizing ventilation.

MAINTENANCE

- **Cleaning:** Clean the canopy fabric and mesh walls with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow all parts to dry completely before storage.
- **Frame Care:** Inspect the aluminum frame periodically for any signs of damage or corrosion. Clean any dirt or debris from the frame.

- **Storage:** When not in use, disassemble the gazebo and store it in the provided wheeled carry bag in a dry, cool place, away from direct sunlight and extreme temperatures.
- **UV Protection:** The canopy fabric offers UV protection, but prolonged exposure to intense sunlight may cause fading over time.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Gazebo is unstable or wobbly.	Not properly anchored; legs not fully extended or unevenly adjusted.	Ensure all ground pegs and tension ropes are securely fastened. Verify that all legs are fully extended and locked at the same height setting.
Water accumulates on the canopy.	Drainage holes are blocked or canopy is not taut.	Clear any debris from the 8 drainage holes on the double roof. Ensure the canopy fabric is stretched tightly over the frame.
Difficulty expanding or collapsing the frame.	Frame joints are stiff or misaligned.	Apply a silicone-based lubricant to the moving joints if necessary. Ensure no fabric is caught in the frame mechanism.

SPECIFICATIONS

Product Dimensions (L x W x H)	330 x 330 x 280 cm (3.3L x 3.3W x 2.8H meters)
Item Weight	17 Kilograms
Material	Aluminum (Frame)
Water Resistance Level	Waterproof
UV Protection	Yes
Assembly Required	Yes
Color	Beige / Brown
Model Number	3.28*3.28
Manufacturer	Devoko

WARRANTY AND SUPPORT

Devoko stands behind the quality of its products. Your Devoko Pop-Up Gazebo comes with the following assurances:

- **Warranty:** A 3-year warranty covers manufacturing defects.
- **Returns:** Free exchange within 30 days for quality defects.
- **Customer Service:** 24-hour customer service is available to assist with any questions or issues, with a guaranteed solution within one business day.

For support, please refer to the contact information provided with your purchase or visit the official Devoko website.