

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AEEZO](#) /

› [AEEZO 11-inch Android 14 Tablet User Manual](#)

## AEEZO 11 inch Tablet

# AEEZO 11-inch Android 14 Tablet User Manual

Model: 11 inch Tablet

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your AEEZO 11-inch Android 14 Tablet. Please read it thoroughly before using the device and keep it for future reference.

The AEEZO 11-inch Android 14 Tablet is designed for a versatile user experience, featuring an Octa-Core processor, a vibrant FHD IPS display, and the latest Android 14 operating system for enhanced security and performance.

## 2. PRODUCT OVERVIEW

### 2.1. Components and Features

Your AEEZO tablet comes equipped with advanced features for optimal performance and user convenience.

- **Operating System:** Android 14 (latest version for enhanced security and user experience).
- **Processor:** Octa-Core (A523 Octa-core ARM CortexTM-A55) for high performance and low power consumption.
- **Display:** 11-inch FHD IPS display with 1280\*800p resolution and Widevine L1 certification for HD video playback.
- **Memory & Storage:** 16GB RAM (14GB total, including 3GB+11GB intelligent storage) and 64GB internal storage, expandable up to 1TB via TF card.
- **Battery:** Built-in 6800mAh battery for extended use.
- **Connectivity:** WiFi 6 (2.4GHz and 5.0GHz support) and Bluetooth 5.3.
- **Cameras:** Front 5MP and Rear 8MP with autofocus and flashlight.
- **Audio:** Built-in 8Ω/1.2W speaker x 2 for immersive dual stereo sound.
- **Security:** Face Unlock feature.

### 2.2. Package Contents

Upon unboxing, please verify that all items are present:

- AEEZO 11-inch Android 14 Tablet
- Charging Cable (Type-C)
- User Manual (this document)

## 3. SETUP

### 3.1. Initial Charging

Before first use, fully charge the tablet. Connect the provided Type-C cable to the tablet's charging port and the other end to a compatible USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status.

**Slim & Stylish Design**  
Smooth and insensitive, more comfortable to hold.  
The color creates personal experience of fashion.

**Classic Black**  
thin body

**Rounded Edges**  
comfortable feel

**Charge Fast & Power for Hours**

**6800mAh**  
(large battery)

**Type-C**  
(convenient charging)

The advertisement features the AEEZO 11-inch tablet in a sleek black color. The top half highlights the tablet's slim design and rounded edges. The bottom half focuses on its battery life, showing a battery icon and the text '6800mAh (large battery)'. It also emphasizes the convenience of Type-C charging. The background is a dark, futuristic design with glowing lines and a stylized battery icon.

Image: AEEZO tablet connected to a Type-C charging cable, illustrating the charging process and the 6800mAh battery capacity.

### 3.2. Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the AEEZO logo appears on the screen.

- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.
- **To Restart:** From the power-off menu, select "Restart" to reboot the device.

### 3.3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password, or Face Unlock).
- Review and accept terms and conditions.

## 4. OPERATING INSTRUCTIONS

### 4.1. Navigating the Android 14 Interface

The Android 14 operating system offers an intuitive interface. Common gestures include:

- **Tap:** To select an item or open an application.
- **Swipe:** To scroll through screens or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move icons.

### 4.2. Connecting to Wi-Fi

1. Go to **Settings**.
2. Tap **Network & internet**.
3. Tap **Internet** or **Wi-Fi**.
4. Turn on Wi-Fi if it's off.
5. Select your desired network from the list and enter the password if prompted.

### 4.3. Using Face Unlock

The tablet supports intelligent face recognition for unlocking the device.

1. Go to **Settings**.
2. Tap **Security & privacy**.
3. Select **Face unlock** and follow the on-screen instructions to register your face.
4. Ensure good lighting and hold the tablet at eye level during registration for optimal performance.

# Touch. Enjoy. Pleasure

Android 14 | A523 Octa-core CPU | Thin & Light

A7


10.95"



Coole Optik  
4modes Leuchtmodus  
Technische Atemlampe



14GB RAM(3GB+11GB Intelligent Storage)

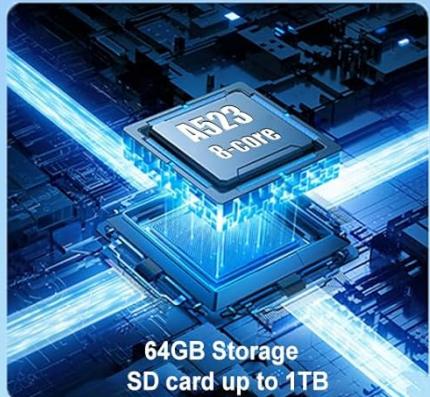

64GB Storage  
SD card up to 1TB



Entschließung 1280\*800




Zweikameras und Lautsprecher



WiFi 6



Android 14  
Neuestes Betriebssystem

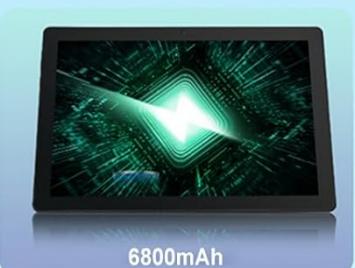

6800mAh

Image: A user demonstrating the face unlock feature on the AEEZO tablet, highlighting the dynamic halo effect.

## 4.4. Camera Operation

The tablet features a 5MP front camera and an 8MP rear camera with autofocus and a flashlight for capturing photos and videos.

1. Open the **Camera** application.
2. Switch between front and rear cameras using the camera switch icon.
3. Tap the shutter button to take a photo or start/stop video recording.
4. Access settings within the camera app to adjust modes (e.g., Portrait, Panorama) or camera parameters.

# Immersive Dual Speaker

## Deliver crisp and clear stereo sound



## Catch More Great Moments



**Front 5MP**  
HD video calling



**Rear 8MP**  
Auto focus



**Flash Light**  
Low light capture

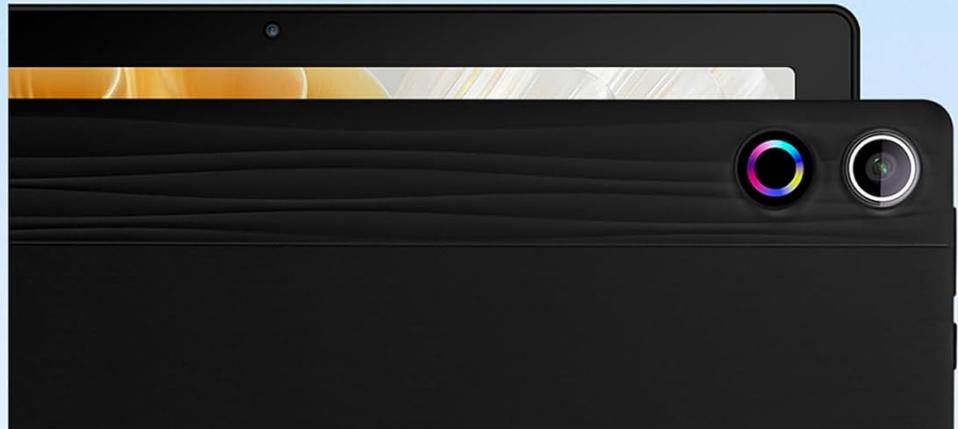


Image: Illustration of the tablet's camera capabilities (Front 5MP, Rear 8MP, Flashlight) and the immersive dual speaker system.

## 4.5. Storage Expansion

You can expand the tablet's storage up to 1TB using a TF (microSD) card.

1. Locate the TF card slot on the side of the tablet.
2. Gently insert the TF card into the slot until it clicks into place.
3. The tablet will recognize the new storage. You may be prompted to format the card for optimal use with the device.

## 5. MAINTENANCE

### 5.1. Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics.

- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

## 5.2. Battery Care

- To prolong battery life, avoid exposing the tablet to extreme temperatures.
- It is recommended to keep the battery charge between 20% and 80% for long-term health, though occasional full charges/discharges are fine.
- Use only the provided charging cable or a certified compatible Type-C cable.

## 5.3. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements.

1. Go to **Settings**.
2. Tap **System**.
3. Tap **System update** or **Software update**.
4. Follow the on-screen instructions to check for and install updates.

# 6. TROUBLESHOOTING

## 6.1. Common Issues and Solutions

Problem	Possible Solution
Tablet does not power on.	Ensure the tablet is fully charged. Connect it to a power source for at least 30 minutes before attempting to power on again.
Wi-Fi connection issues.	Restart your Wi-Fi router. Go to Settings > Network & internet > Wi-Fi, forget the network, and then reconnect. Ensure you are within range of the Wi-Fi signal.
Applications are slow or crashing.	Close unused applications. Clear app cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the tablet.
Face Unlock not working.	Ensure you are in a well-lit environment. Re-register your face in Settings > Security & privacy > Face unlock. Clean the front camera lens.
Battery drains quickly.	Reduce screen brightness. Close background apps. Disable unnecessary features like Bluetooth or GPS when not in use. Check battery usage in Settings > Battery to identify power-hungry apps.

## 6.2. Factory Reset

If issues persist, a factory reset can resolve many software-related problems. **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

1. Go to **Settings**.
2. Tap **System**.
3. Tap **Reset options**.
4. Select **Erase all data (factory reset)**.
5. Confirm your decision and follow the prompts.

## 7. SPECIFICATIONS

Detailed technical specifications for your AEEZO 11-inch Android 14 Tablet:

Feature	Specification
Model Name	11 inch Tablet
Operating System	Android 14
Processor	Octa-Core (A523 Octa-core ARM CortexTM-A55)
Display Size	11 inches
Max Screen Resolution	1280*800p
RAM	16GB (14GB total, 3GB+11GB intelligent storage)
Internal Storage	64GB
Expandable Storage	Up to 1TB via TF card
Battery Capacity	6800mAh Lithium Ion
Front Camera	5MP
Rear Camera	8MP with autofocus
Connectivity	Wi-Fi 6 (2.4GHz/5.0GHz), Bluetooth 5.3
Speakers	Built-in 8Ω/1.2W speaker x 2
Dimensions (LxWxH)	9.64 x 6.42 x 0.35 inches
G-sensor	Gravity Acceleration Sensor

## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official AEEZO website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

- **Official AEEZO Store:** [Visit the AEEZO Store on Amazon](#)
- For further assistance, please contact AEEZO customer support.