



[Manuals.plus](#) /

> [Olycism](#) /

> Olycism MP3 Player User Manual

## Olycism 002

# Olycism MP3 Player User Manual

Model: 002

## INTRODUCTION

Thank you for choosing the Olycism MP3 Player. This device is a versatile digital audio player designed for high-quality music playback, featuring Bluetooth 5.0 connectivity, a built-in speaker, and a 2.4-inch display. It offers a range of functions including voice recording, FM radio, video playback, and e-book reading. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your MP3 player to ensure optimal performance and longevity.

## SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Use only the provided charging cable and adapter.
- Listen at moderate volume levels to prevent hearing damage.

## PACKAGE CONTENTS

Please check the package contents upon unboxing:

- Olycism MP3 Player x 1
- USB Cable x 1
- User Manual x 1

## PRODUCT OVERVIEW

Familiarize yourself with the device's components and controls.



Figure 1: Front and Back View of the MP3 Player. The front features a 2.4-inch screen displaying time and date, with luminous touch buttons for navigation (OK, Play/Pause, Next, Previous, Volume Up/Down). The back shows regulatory markings.

# 2025業界新設計・多機能

## 「光るタッチボタン」MP3プレーヤー



Figure 2: Key Features of the Olycism MP3 Player. This image highlights the device's main functionalities including Bluetooth 5.0, recording capability, e-book support, HiFi sound quality, FM radio, a 2.4-inch TFT screen, 64GB built-in storage, and expandability up to 128GB.

### Controls and Ports:

- **Power Button:** Located on the side, press and hold to turn on/off.
- **Volume Buttons (+/-):** Adjust volume during playback.
- **Navigation Buttons (Luminous Touch Buttons):** Used for menu navigation and media control (Play/Pause, Next/Previous Track, OK/Enter).
- **3.5mm Headphone Jack:** For wired headphone connection.
- **USB-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For memory expansion.
- **Built-in Speaker:** For audio playback without headphones.

### SETUP

## 1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB cable to the device's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge provides up to 40 hours of music playback via headphones.

# 最大60時間再生可能

## 450mAhスタミナたっぷり長時間バッテリー

高速な Type-C充電技術

音楽連続イヤホン 60 時間

充電時間 2 時間

音楽連続スピーカー 30 時間

### 様々なシーンで活躍

通勤/通学

運動

ビデオ会議

Figure 3: Charging and Battery Life. The image illustrates the MP3 player being charged via its USB-C port, highlighting its 450mAh battery for extended playback and suitability for various activities.

## 2. Turning On/Off

- **To Turn On:** Press and hold the Power button until the screen lights up.
- **To Turn Off:** Press and hold the Power button until the "Power Off" prompt appears, then confirm.

## 3. Inserting/Removing MicroSD Card

The device has 64GB of built-in storage and supports MicroSD cards up to 128GB for expanded storage.

# 64GB大容量付き & 128GB容量拡張可能

お気に入りの音楽をより多く保存し、思う存分音楽を楽しめます。



Figure 4: Storage Capacity. This image visually represents the MP3 player's 64GB internal storage and its ability to expand up to 128GB using a MicroSD card.

- **To Insert:** Gently push the MicroSD card into the card slot until it clicks into place.
- **To Remove:** Gently push the MicroSD card again until it pops out, then pull it out.

## 4. Connecting to a Computer (OTG Function)

The MP3 player supports OTG (On-The-Go) function, allowing direct transfer of files from compatible smartphones or tablets.

# OTG伝送対応

OTG機能をサポートしており、スマホやタブレットの写真、フォルダ、曲ファイルなどをプレーヤーに転送して保存、削除、再生などができます



Figure 5: OTG Functionality. This image shows the MP3 player connected to a smartphone via an OTG cable, illustrating its capability to transfer photos, folders, and music files directly from the phone for storage, deletion, or playback.

- Connect the MP3 player to your computer using the provided USB cable. The device will appear as a removable disk.
- Drag and drop music, video, image, or e-book files into the appropriate folders on the player.
- For OTG connection, ensure your smartphone/tablet supports OTG and use a compatible OTG cable (not included).

## OPERATING INSTRUCTIONS

### 1. Basic Navigation

Use the luminous touch buttons to navigate through menus:

- **Up/Down Arrows:** Scroll through menu options.
- **Left/Right Arrows:** Navigate between sub-menus or adjust settings.

- **OK Button:** Select an option or confirm an action.
- **Back Button (Curved Arrow):** Return to the previous screen/menu.

## 2. Music Playback (HiFi Lossless Audio)

The player supports various audio formats including MP3, AAC, FLAC, WAV, WMA, OGG, providing HiFi lossless sound quality.



Figure 6: HiFi Lossless Audio Playback. This image showcases the MP3 player's music interface and its compatibility with various lossless audio formats, ensuring a high-fidelity listening experience.

1. From the main menu, select "Music".
2. Browse by Artist, Album, Song, or Folder.
3. Select a song and press the OK button to play.
4. Use the Play/Pause, Next, Previous, and Volume buttons to control playback.
5. The built-in speaker allows for direct audio output without headphones.

### 3. Bluetooth Connectivity

Connect your MP3 player to Bluetooth headphones or speakers for wireless audio.



The advertisement features a dark blue background with a glowing blue circuit board pattern. At the top left is the Bluetooth logo. The main headline reads '業界最先端のbluetooth 5.0技術' (Industry's most advanced Bluetooth 5.0 technology). Below this are three benefits: '接続がより安定し' (Connections are more stable), '伝送速度が速くなり' (Transmission speed is faster), and '音質も向上し' (Sound quality is also improved). Three inset images show a black Bluetooth speaker, a pair of black earbuds in their case, and a pair of black over-ear headphones. A central image shows an MP3 player with a screen displaying '12:00' and '2024.6.19', and a circular control pad with 'OK', '+', and '-' buttons. At the bottom right, a dark blue box contains the text 'ご注意：車載スマホ/PC/Bluetoothは非対応です' (Note: Car-mounted smartphone/PC/Bluetooth is not supported).

Figure 7: Bluetooth 5.0 Connectivity. This image illustrates the MP3 player's advanced Bluetooth 5.0 chip, enabling stable and fast connections to Bluetooth headphones, speakers, and other audio devices. Note: Not compatible with car Bluetooth, smartphones, or PCs.

1. From the main menu, select "Bluetooth".
2. Turn on Bluetooth. The player will search for nearby devices.
3. Select your desired Bluetooth device from the list to pair.
4. Once paired, audio will be routed through the connected Bluetooth device.

**Note:** This MP3 player does not support connection to car Bluetooth systems, smartphones, or PCs via Bluetooth.

### 4. FM Radio

Listen to your favorite FM radio stations.

- Plug in wired headphones; they act as the antenna for FM radio.

- From the main menu, select "FM Radio".
- Use the navigation buttons to scan for stations or manually tune.

## 5. Voice Recorder

Record lectures, meetings, or personal notes.

- From the main menu, select "Recorder".
- Choose "Start Recording" to begin.
- Press OK to pause/resume, and the Back button to stop and save.

## 6. E-book Function

Read text files on the go.

- Transfer TXT format e-books to the "E-book" folder on the device.
- From the main menu, select "E-book".
- Select the desired file to open and read.

## 7. Other Functions

- **Video Playback:** Supports MP4 and AVI formats. Transfer video files to the "Video" folder.
- **Image Viewer:** View image files.
- **A-B Repeat:** Repeat a specific section of an audio track for language learning or transcription.
- **Random Play:** Shuffle playback of your music library.
- **Calendar:** Access the built-in calendar.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Device does not turn on.	Battery may be depleted. Charge the device for at least 30 minutes. If unresponsive, try pressing the reset button (if available, usually a small pinhole).
Cannot transfer files to the device.	Ensure the USB cable is securely connected. Try a different USB port or cable. Ensure the device is in data transfer mode (if prompted). For OTG, ensure your device supports it.
Bluetooth connection issues.	Ensure both devices are in pairing mode and within range. Delete previous pairings and try reconnecting. Ensure the MP3 player's Bluetooth is turned on. Remember, it does not connect to smartphones/PCs/car Bluetooth.
No sound from headphones/speaker.	Check volume level. Ensure headphones are properly plugged in. If using Bluetooth, ensure it's connected and the volume on both devices is up. Test with different headphones.

Problem	Possible Cause / Solution
Screen is unresponsive or frozen.	Press and hold the Power button for 10-15 seconds to force a restart. If available, use a pin to press the reset button.
Files are not sorted correctly.	File sorting can sometimes be based on transfer order or metadata. Ensure file names are consistent. Some players may not support advanced sorting.

## SPECIFICATIONS

Feature	Detail
Brand	Olycism
Model Number	002
Display Size	2.4 inches
Display Technology	OLED
Internal Storage	64 GB
Expandable Storage	Up to 128GB (MicroSD card)
Bluetooth Version	5.0
Supported Audio Formats	MP3, AAC, FLAC, WAV, WMA, OGG
Supported Video Formats	MP4, AVI
Battery Life (Continuous Playback)	Up to 40 hours (via headphones)
Battery Capacity	450mAh
Dimensions	12.6 x 10.1 x 1.9 cm
Weight	140 g
Color	Black

## WARRANTY AND SUPPORT

Olycism products come with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your package or contact Olycism customer support. If you encounter any issues not covered in this manual, please reach out to our support team for assistance.

For support inquiries, please visit the official Olycism website or contact the seller directly through your purchase platform.

