



[Manuals.plus](#) /

> [GUESS](#) /

> [GUESS Trend Analog Watch U1449G1M User Manual](#)

GUESS U1449G1M

GUESS Trend Analog Watch U1449G1M User Manual

Model: U1449G1M

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

[Support](#)

INTRODUCTION

This manual provides instructions for the GUESS Trend Analog Watch, Model U1449G1M. Please read this manual carefully before using your watch to ensure proper operation and care. Keep this manual for future reference.



Image: Front view of the GUESS Trend Analog Watch U1449G1M, featuring a silver dial and stainless steel band.

SETUP

Setting the Time

1. **Pull out the crown:** Locate the crown on the right side of the watch case. Gently pull the crown out to the first or second position (depending on the model, usually the second position for time setting).
2. **Rotate the crown:** Turn the crown clockwise or counter-clockwise to adjust the hour and minute hands to the correct time.
3. **Push in the crown:** Once the time is set, push the crown back into its original position against the watch case. This will start the watch movement.

Note: For watches with a date function (if applicable), the first crown position is typically for setting the date, and the second position for setting the time. This model is an analog watch, primarily focused on time display.

OPERATING THE WATCH

Basic Timekeeping

The GUESS Trend Analog Watch operates using a Quartz movement, providing accurate timekeeping. Once the time is set, the watch will continuously display the current time.

Water Resistance

This watch has a water resistance depth of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet or submerged.

- **Do not:** Press buttons or pull the crown when the watch is underwater.
- **Avoid:** Hot water, steam, or extreme temperature changes, as these can compromise the watch's water resistance seals.

MAINTENANCE AND CARE

Cleaning Your Watch

- **Case and Crystal:** Wipe the watch case and mineral glass crystal with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Stainless Steel Band:** The stainless steel band can be cleaned with a soft brush and mild soapy water. Ensure to rinse thoroughly with clean water and dry completely to prevent water spots or corrosion.

Battery Replacement

The Quartz movement is powered by a battery. When the watch stops or the second hand begins to skip, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

General Care

- **Avoid Impacts:** Protect your watch from strong impacts or drops.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, as these can damage the case, band, or seals.
- **Magnetic Fields:** Avoid exposing the watch to strong magnetic fields, which can affect the accuracy of the Quartz movement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch has stopped or is running slow.	Low battery.	Replace the battery by a professional watch technician.
Condensation appears under the crystal.	Exposure to extreme temperature changes or compromised water resistance.	Seek professional service immediately to prevent internal damage. Avoid further exposure to water.
Time is incorrect after setting.	Crown not fully pushed in after setting.	Ensure the crown is fully pushed back into the watch case. Reset the time if necessary.

SPECIFICATIONS

Feature	Detail
Model Number	U1449G1M
Brand	GUESS
Display Type	Analog
Movement Type	Quartz
Case Diameter	42 mm
Case Thickness	9.9 mm
Band Width	26 mm
Case Shape	Round
Dial Colour	Silver
Band Material	Stainless Steel
Band Colour	Silver
Crystal Material	Mineral Glass
Clasp Type	Deployment Clasp
Water Resistance Depth	50 Metres (5 ATM)
Item Weight	95 Grams
Product Dimensions (LxWxH)	12 x 4.2 x 1 cm

WARRANTY INFORMATION

This GUESS watch, Model U1449G1M, comes with a **1 Year manufacturer's warranty** against manufacturing defects. The warranty covers defects in materials and workmanship under normal use. It does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the watch was not used according to its water resistance guidelines.
- Battery replacement.
- Unauthorized repairs or modifications.

For warranty claims, please retain your proof of purchase and contact the authorized service center.

CUSTOMER SUPPORT

For technical assistance, service, or warranty inquiries, please contact the manufacturer or an authorized service center.

Manufacturer Information:

Manufacturer: Timex Group India Limited

Address: Plot No. 10, Industrial Area- Katha, Bhatoli Kalan, Baddi, Himachal Pradesh – 173205

Please refer to the official GUESS website or your purchase documentation for the most current contact information and service procedures.

