

FunXplore PD-1022

FunXplore Wooden Kids Sandbox with Lid and Picnic Table (Model PD-1022) Instruction Manual



1. INTRODUCTION

Thank you for choosing the FunXplore Wooden Kids Sandbox with Lid and Picnic Table, Model PD-1022. This product is designed to provide a versatile outdoor play and dining solution for children. It features a 2-in-1 design, allowing it to function as both a sandbox and a picnic table with benches. The durable construction and thoughtful design ensure a safe and enjoyable experience for children aged 3 years and up.

Please read this manual carefully before assembly and use to ensure proper installation, safe operation, and effective maintenance of your sandbox.

Safety Warnings

- Adult supervision is required at all times when children are using the sandbox.
- Ensure all fasteners are securely tightened before use. Regularly check for loose parts.
- Do not allow children to climb on the sandbox walls or picnic table in an unsafe manner.
- Keep the sandbox covered when not in use to protect the sand from contaminants and weather.
- This product is intended for outdoor use only.

2. PARTS LIST

Before beginning assembly, verify that all components are present and undamaged. Refer to the included hardware pack and assembly diagram for specific part identification.

- Wooden panels for sandbox frame
- Wooden panels for picnic table/benches
- Foldable hinge mechanisms
- Bottom liner (sand screen)
- Hardware pack (screws, bolts, nuts, washers)
- Assembly tools (e.g., Allen wrench, screwdriver - typically included or required)




Image 2.1: Overview of the FunXplore Wooden Kids Sandbox with Lid and Picnic Table.

3. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of the FunXplore Wooden Kids Sandbox is designed to be straightforward, typically taking approximately 30 minutes with pre-drilled pieces and clear instructions. It is recommended that two adults perform the assembly.

1. **Prepare the Area:** Choose a flat, level outdoor surface for the sandbox. Ensure adequate space for both sandbox and picnic table configurations.
2. **Assemble the Sandbox Frame:** Connect the wooden side panels of the sandbox using the provided hardware. Ensure all connections are secure.
3. **Install the Bottom Liner:** Place the sand screen liner inside the assembled sandbox frame. The liner is designed to prevent sand leakage while allowing for drainage and airflow.
4. **Assemble the Picnic Table:** Construct the picnic table and benches according to the detailed instructions in your assembly guide. This typically involves attaching the table top and bench seats to the support legs and hinge mechanisms.
5. **Attach the Picnic Table to Sandbox:** Securely attach the picnic table assembly to the sandbox frame using the designated bolts and hinge points. Ensure the folding mechanism operates smoothly.
6. **Final Checks:** Double-check all bolts and screws to ensure they are tightly fastened. Test the conversion mechanism between the sandbox and picnic table modes.

OPEN BOTTOM WITH LINER

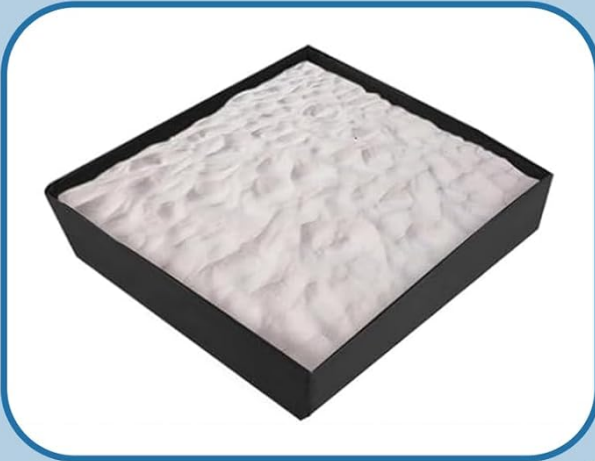

✓ ALL AOUND SAND SCREEN
Prevent Sand Leakage

VS

✗ Easily Leak FLAT Sand Screen

Image 3.1: The sandbox features an open bottom with a durable liner to contain sand and allow drainage.

EASY TO CONVERT

Change the Table into the Cover

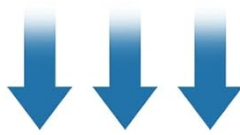


Image 3.2: Visual guide demonstrating the conversion of the picnic table into a sandbox cover.

4. OPERATING INSTRUCTIONS

The FunXplore Wooden Kids Sandbox offers dual functionality for enhanced outdoor play and activity.

4.1. Sandbox Mode

- Ensure the picnic table is folded away or positioned to allow full access to the sandbox area.
- Fill the sandbox with appropriate play sand. The integrated bottom liner will contain the sand.
- Children can sit on the built-in benches around the sandbox for comfortable play.

4.2. Picnic Table Mode

- To convert from sandbox cover to picnic table, carefully lift and unfold the table sections.
- Secure the table in its upright position using the locking mechanisms or bolts as indicated in the assembly guide.
- The table and benches can accommodate up to 6 children, with benches supporting up to 220 lbs.

4.3. Folding and Covering

- To convert the picnic table into a sandbox cover, release the locking mechanisms or remove the 4 side bolts that secure the picnic table in its open position.
- Carefully fold the table sections inward until they lie flat over the sandbox opening, forming a protective lid.
- This cover helps keep the sand clean, dry, and free from debris or pests when not in use.

2-in-1 FUNCTIONAL AREA



Image 4.1: The product's dual functionality as a sandbox and an outdoor picnic table.

Your browser does not support the video tag.

Video 4.1: Demonstration of the 2-in-1 Kids Sandbox & Picnic Table functionality, showing conversion between modes.

5. MAINTENANCE

Regular maintenance will extend the life and ensure the safety of your FunXplore Wooden Kids Sandbox.

- **Cleaning the Wood:** Wipe down wooden surfaces with a damp cloth and mild soap as needed. Avoid harsh chemicals that could damage the non-toxic finish.
- **Wood Protection:** While crafted from premium cedar wood with a weather-resistant finish, prolonged

exposure to extreme weather conditions can affect the wood. Consider applying a wood sealant annually to maintain its condition.

- **Sand Care:** Regularly rake the sand to remove debris. Replace sand periodically to ensure hygiene.
- **Liner Maintenance:** The sand screen liner can be cleaned with water. Ensure it is dry before refilling with sand to prevent mold or mildew growth.
- **Hardware Check:** Periodically inspect all screws, bolts, and hinges for tightness. Tighten any loose fasteners to maintain structural integrity.
- **Cover Usage:** Always use the wooden cover when the sandbox is not in use to protect the sand from rain, leaves, and animals. If the wood becomes wet, allow it to dry thoroughly before covering to prevent moisture buildup and potential mold growth.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your FunXplore Wooden Kids Sandbox.

Problem	Possible Cause	Solution
Difficulty folding/unfolding the picnic table.	Hinges are stiff or bolts are too tight/loose.	Ensure the 4 side bolts are properly loosened or removed for conversion. Lubricate hinges if necessary. If the table feels stuck, gently apply pressure or check for obstructions.
Sand leaking from the bottom liner.	Liner not properly secured or damaged.	Ensure the liner is correctly positioned and secured around the edges of the sandbox frame. If the liner is torn, it may need to be repaired or replaced.
Wood developing mold or mildew.	Moisture trapped under the cover.	Always allow the sandbox and its wooden components to dry completely after rain or washing before covering. Ensure adequate airflow around the sandbox. Clean affected areas with a mild wood cleaner.
Hinge mechanism detaching or splintering wood.	Excessive force during conversion or loose fasteners.	Always operate the folding mechanism gently. Ensure all hinge screws are tight. If wood is splintered, repair with wood glue and clamps, or replace the affected part if damage is severe.

7. SPECIFICATIONS

- **Model Number:** PD-1022
- **Brand:** FunXplore
- **Product Dimensions:** 72.2 x 47.2 x 17 inches (L x W x H)
- **Material:** Premium Cedar Wood with non-toxic, zero-VOC finish
- **Recommended Age:** 3 years and up
- **Seating Capacity:** Up to 6 children
- **Bench Weight Capacity:** Up to 220 lbs
- **Features:** 2-in-1 Sandbox and Picnic Table, Foldable Lid, Bottom Liner for drainage and sand containment

PRODUCT DETAILS



Image 7.1: Detailed product dimensions for the FunXplore Wooden Kids Sandbox.

8. WARRANTY AND SUPPORT

Specific warranty information for the FunXplore Wooden Kids Sandbox (Model PD-1022) is not included in this manual. For details regarding warranty coverage, claims, or technical support, please refer to the product packaging or contact FunXplore customer service directly through their official website or the retailer where the product was purchased.

When contacting support, please have your product model number (PD-1022) and proof of purchase readily available.

