



Manuals.plus /

› Hisense /

› Hisense HV693A65AD Fully Integrated Dishwasher Instruction Manual

## Hisense HV693A65AD

# Hisense HV693A65AD Fully Integrated Dishwasher Instruction Manual

Model: HV693A65AD

[Overview](#)   [Safety Instructions](#)   [Setup & Installation](#)   [Operating Instructions](#)   [Wash Programs](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. PRODUCT OVERVIEW

The Hisense HV693A65AD is a fully integrated dishwasher designed for seamless integration into your kitchen cabinetry. It offers a generous capacity of 16 place settings, making it suitable for large families and frequent entertaining. This appliance combines advanced cleaning technology with energy efficiency to deliver sparkling clean dishes while minimizing environmental impact.

Key features include a quiet operation at 41 dB, an inverter motor for reliable performance, and a range of specialized wash programs to handle various types of dishes and soil levels. The touch control panel and LED display ensure intuitive operation.

Your browser does not support the video tag.

**Video Description:** This video provides a general overview of a fully integrated dishwasher, demonstrating its loading capacity and internal features. It highlights the convenience and efficiency of modern dishwashers for daily use.

## 2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before installing, operating, or performing maintenance on your dishwasher. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not use extension cords or adapters. Disconnect power before any maintenance or cleaning.
- **Water Safety:** The dishwasher is equipped with an anti-flood protection system. However, always turn off the water supply if the appliance will be unused for an extended period.
- **Child Safety:** Keep children away from the dishwasher when it is operating. Detergents are corrosive; keep them out of reach of children.

- **Installation:** Installation must be performed by a qualified technician. Ensure all connections are secure and leak-free.
- **Usage:** Only use detergents and rinse aids specifically designed for automatic dishwashers. Do not open the door during a wash cycle to avoid hot water spray.

### 3. SETUP & INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your Hisense dishwasher. Follow these steps carefully.

#### 3.1 Unpacking and Inspection

1. Carefully remove all packaging materials.
2. Inspect the dishwasher for any damage during transit. Report any damage immediately to your retailer.
3. Ensure all accessories and parts listed in the packing list are present.

#### 3.2 Site Preparation

The dishwasher is designed for full integration. Ensure the cabinet opening dimensions are suitable: 598mm (width), 555mm (depth), and 816mm (height). The minimum integrated compartment height is 820mm and width is 600mm.

#### 3.3 Water and Electrical Connections

Connect the water inlet hose to a cold water supply with a minimum pressure of 0.04 MPa and a maximum of 1 MPa. Connect the drain hose to the kitchen sink drain or a dedicated drain pipe. Ensure the electrical connection meets local regulations and the appliance's requirements (220-240V, 50Hz).

Your browser does not support the video tag.

**Video Description:** This video demonstrates the installation process for a fully integrated dishwasher, including securing it within the cabinet and connecting water and electrical supplies. It provides visual guidance for proper setup.

#### 3.4 Securing the Appliance

Slide the dishwasher into the prepared opening. Use the provided brackets and screws to secure the appliance to the adjacent cabinets or countertop. Ensure the dishwasher is level using a spirit level.



# ENERG




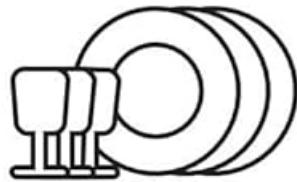 
**HISENSE**

HV693A65AD







**49 kWh** / 



**16 x**

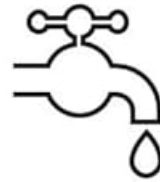 

**9,5 L**

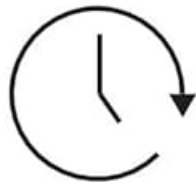 

**4:40**



**A BCD**

2019/2017

**Image Description:** A diagram illustrating the installation steps for a fully integrated dishwasher, showing how to secure it to the surrounding cabinetry and connect the water and power.

## 4. OPERATING INSTRUCTIONS

Your Hisense dishwasher features intuitive touch controls and a clear LED display for easy operation.

### 4.1 Loading the Dishwasher

Load dishes according to the rack design. Ensure dishes do not block the spray arms. The dishwasher features a third basket for cutlery and adjustable upper baskets for flexible loading.

Scheda informativa del prodotto				
REGOLAMENTO DELEGATO (UE) 2019/2017 DELLA COMMISSIONE per quanto riguarda l'etichettatura energetica delle lavastoviglie per uso domestico				
Nome o marchio del fornitore: HISENSE				
Indirizzo del fornitore: Gorenje gospodinjnski aparati, d.o.o., Partizanska cesta 12, 3320 Velenje, SI				
Identificativo del modello: HV693A65AD				
Parametri generali del prodotto:				
Parametro	Valore	Parametro	Valore	
Capacità nominale <sup>(a)</sup> (ps)	16	Dimensioni in cm	Altezza	82
			Larghezza	60
			Profondità	56
EEI <sup>(a)</sup>	28,0	Classe di efficienza energetica <sup>(a)</sup>	A	
Indice di efficienza di lavaggio <sup>(a)</sup>	1,121	Indice di efficienza di asciugatura <sup>(a)</sup>	1,061	
Consumo di energia in kWh [per ciclo] con il programma eco con acqua fredda. Il consumo energetico effettivo dipende dalle modalità d'uso dell'apparecchio.	0,490	Consumo di acqua in litri [per ciclo] con il programma eco. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua.	9,5	
Durata del programma <sup>(a)</sup> (ore:min)	4:40	Tipo	Da incasso	
Emissioni di rumore aereo <sup>(a)</sup> (dB(A) re 1 pW)	41	Classe di emissione di rumore aereo <sup>(a)</sup>	B	
Modo spento (W) (se applicabile)	-	Modo stand-by (W) (se applicabile)	0,49	
Avvio ritardato (W) (se applicabile)	3,99	Modo stand-by in rete (W) (se applicabile)	1,99	
Durata minima della garanzia offerta dal fornitore: 24 mesi				
Informazioni supplementari:				
Link al sito web del fornitore che riporta le informazioni di cui all'allegato II, punto 6, del regolamento (UE) 2019/2022 della Commissione: <a href="http://global.hisense.com/">http://global.hisense.com/</a>				

<sup>(a)</sup> per il programma eco.

Pagina 1 / 2

Modello immesso sul mercato dell'Unione da 30/01/2025



Numero di registrazione EPREL: 2104974

<https://eprel.ec.europa.eu/qr/2104974>

Fornitore: GORENJE GOSPODINJSKI APARATI D.O.O. (Fab  
bricante)

Sito web: [www.gorenje.com](http://www.gorenje.com)

Servizio di assistenza alla clientela:

Nome: Gorenje gospodinjnski aparati, d.o.o.

Sito web:

E-mail: [eprel.notifications@gorenje.com](mailto:eprel.notifications@gorenje.com)

Telefono: 0038638997381

Indirizzo:  
Partizanska cesta 12  
3320 Velenje  
Slovenia

**Image Description:** The interior view of the Hisense HV693A65AD dishwasher, showcasing its spacious racks, adjustable upper basket, and third cutlery tray for efficient loading.

## 4.2 Adding Detergent and Rinse Aid

Fill the automatic detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill if necessary. The dishwasher features an automatic water softening system, so ensure the salt indicator is also monitored.

## 4.3 Selecting a Program

Use the touch control panel to select your desired wash program. Refer to the 'Wash Programs' section for details on each program. The LED display will show the selected program and remaining time.

## 4.4 Starting a Cycle

Close the dishwasher door firmly. Press the 'Start' button to begin the cycle. You can use the 'Delay Start' function to postpone the start of the cycle by 3, 6, or 24 hours.

## 4.5 Smart Features (IoT Function)

This dishwasher supports IoT functionality, allowing for remote control and monitoring via a compatible app. Follow the app's instructions to connect your appliance.

Your browser does not support the video tag.

**Video Description:** This video explains how to use the IoT function of a dishwasher, demonstrating the steps to connect the appliance to a smart home system and control it remotely via an application.

# 5. WASH PROGRAMS

The Hisense HV693A65AD offers 7 wash programs and 7 temperature settings to cater to all your dishwashing needs:

- **Automatic Program:** Automatically adjusts water temperature and time based on soil level.

- **Intensive Program:** Ideal for heavily soiled items and pots/pans.
- **Eco Program:** Energy-efficient program for normally soiled dishes. (Duration: 280 min, Water: 9.5 L, Energy: 0.49 kWh)
- **Hygiene Program:** Provides a thorough, high-temperature wash for maximum hygiene.
- **Crystal Glasses:** Gentle program for delicate glassware.
- **1h Wash:** Quick wash for lightly soiled dishes.
- **Night Program:** Operates at a lower noise level for quiet overnight washing.

The dishwasher also features an 'Extra Dry' option for enhanced drying results.

Your browser does not support the video tag.

**Video Description:** This video demonstrates the 'EfficientDry' feature of a dishwasher, which includes automatic door opening at the end of the cycle to improve drying performance and save energy.

## 6. MAINTENANCE

Regular maintenance ensures your dishwasher continues to perform efficiently.

### 6.1 Cleaning the Filters

The dishwasher has a self-cleaning filter. Regularly check and clean the filter system to prevent blockages and ensure optimal washing results. Refer to the detailed instructions in the full user manual for filter removal and cleaning.

### 6.2 Cleaning the Spray Arms

Periodically check the spray arm nozzles for any blockages. Remove any debris to ensure water is sprayed effectively.

### 6.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. For the interior, use a dishwasher cleaner periodically to remove grease and limescale buildup.

### 6.4 Refilling Salt and Rinse Aid

Monitor the salt and rinse aid indicators on the LED display. Refill as needed to ensure proper water softening and streak-free drying.

## 7. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your dishwasher. The appliance features an auto-diagnostic function to help identify problems.

- **Dishwasher not starting:** Check power supply, ensure the door is fully closed, and verify the 'Start' button was pressed.
- **Dishes not clean:** Check spray arms for blockages, ensure proper loading, verify detergent dispenser is

filled, and select an appropriate wash program.

- **Water not draining:** Check the drain hose for kinks or blockages, and clean the filter system.
- **Excessive noise:** Ensure dishes are loaded correctly and not interfering with spray arms. Check for foreign objects in the pump area.
- **Error codes:** If an error code appears on the LED display, consult the full user manual for specific meanings and troubleshooting steps.

## 8. SPECIFICATIONS

Feature	Value
Appliance Placement	Fully Integrated
Size	Full-size (60 cm)
Place Settings	16
Energy Efficiency Class	A
Energy Consumption (100 cycles)	49 kWh
Water Consumption (per cycle)	9.5 L
Noise Emission Class	B
Noise Level	41 dB
Control Type	Touch
Display Type	LED
Motor Type	Inverter
Dimensions (H x W x D)	816 mm x 598 mm x 555 mm
Net Weight	32.0 kg
Anti-flood Protection	Yes
Self-cleaning Filter	Yes
Automatic Water Softening	Yes



**Image Description:** The official EU energy label for the Hisense HV693A65AD dishwasher, displaying its energy efficiency class A, energy consumption of 49 kWh per 100 cycles, water consumption of 9.5 L per cycle, and noise level of 41 dB.

For more detailed information, please visit the [EPREL database](#).

## 9. WARRANTY & SUPPORT

Your Hisense HV693A65AD dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions.

For technical support, service requests, or to order spare parts, please contact Hisense customer service. You can find contact information on the official Hisense website or in the full user manual.

The availability of spare parts information is currently unavailable. For further information, please refer to the official Hisense website: [global.hisense.com](http://global.hisense.com).