

BERGNER OLIVAR

BERGNER OLIVAR 1000W Immersion Blender Instruction Manual

INTRODUCTION

Thank you for choosing the BERGNER OLIVAR 1000W Immersion Blender. This appliance is designed to simplify your food preparation tasks, offering powerful and versatile blending, chopping, and whisking capabilities. To ensure safe and optimal performance, please read this instruction manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Only the detachable blending shaft, whisk, and chopper bowl are submersible.
- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from blades during operation to prevent injury and/or damage to the appliance.
- Blades are sharp. Handle with care when cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Do not use outdoors.

- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not process hot liquids without extreme caution. Splashing can occur.
- Always ensure the lid of the chopper bowl is securely locked before operating.

PRODUCT COMPONENTS

Your BERGNER OLIVAR Immersion Blender comes with several components designed for various food preparation tasks. Familiarize yourself with each part:



1. Main Unit (Motor Body): This houses the powerful 1000W motor and control buttons. It features a comfortable grip and a sleek design.



2. Detachable Blending Shaft: Made of durable stainless steel, this shaft attaches to the main unit for blending directly in pots, bowls, or the included measuring cup. It features a splash-proof dome design.



3. Chopper Attachment (600 ml): Includes a bowl, a sharp chopping blade, and a lid. Ideal for chopping nuts, herbs, vegetables, and more.



4. Whisk Attachment: For whipping cream, beating eggs, and preparing light batters. Attaches to the main unit via a gearbox.



5. Measuring Cup (600 ml): A convenient cup for blending smaller quantities or measuring ingredients.

SETUP AND ASSEMBLY

Before first use, wash all detachable parts (blending shaft, chopper bowl, chopper blade, whisk, measuring

cup) in warm soapy water, rinse thoroughly, and dry. Wipe the motor unit with a damp cloth.

Assembling the Immersion Blender:

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place.
3. To disassemble, twist counter-clockwise and pull apart.

Assembling the Chopper Attachment:

1. Place the chopping blade onto the central pin inside the chopper bowl. Ensure it sits correctly.
2. Add your ingredients to the chopper bowl. Do not overfill.
3. Place the chopper lid onto the bowl, aligning the tabs.
4. Attach the motor unit to the chopper lid by aligning and twisting clockwise until it locks.
5. To disassemble, twist counter-clockwise and pull apart.

Assembling the Whisk Attachment:

1. Insert the whisk into the whisk gearbox.
2. Attach the whisk gearbox to the motor unit by aligning and twisting clockwise until it locks.
3. To disassemble, twist counter-clockwise and pull apart.

OPERATING INSTRUCTIONS

Always ensure the appliance is correctly assembled and plugged into a suitable power outlet before operation.

Using the Immersion Blender:

1. Attach the blending shaft to the motor unit.
2. Immerse the blending shaft into the ingredients you wish to process. Ensure the liquid level is below the maximum fill line if using the measuring cup, and that the blade guard is fully submerged to prevent splashing.
3. Plug in the appliance.
4. Press and hold the desired speed button:
 - **Normal Speed Button:** For general blending tasks.
 - **TURBO Button:** For maximum power and faster results, ideal for tougher ingredients or achieving smoother textures.
5. Move the blender gently up and down in the mixture to ensure even blending.
6. Release the button to stop operation.
7. Unplug the appliance before removing the blending shaft or cleaning.

***Tip:** For best results, process ingredients in batches if necessary. Do not operate continuously for more than 1 minute to prevent overheating. Allow a short break between cycles.*

Using the Chopper Attachment:

1. Assemble the chopper attachment with the blade and ingredients.
2. Attach the motor unit to the chopper lid.

3. Plug in the appliance.
4. Press and hold the desired speed button (Normal or TURBO) in short pulses until the desired consistency is achieved.
5. Release the button to stop.
6. Unplug the appliance, then carefully remove the motor unit, lid, and blade before emptying the bowl.

Caution: *The chopper blade is extremely sharp. Handle with care.*

Using the Whisk Attachment:

1. Assemble the whisk attachment with the gearbox and motor unit.
2. Place the whisk into the ingredients you wish to whisk (e.g., eggs, cream) in a suitable bowl.
3. Plug in the appliance.
4. Press and hold the Normal speed button to start whisking. Use the TURBO button for faster whipping if needed.
5. Move the whisk gently to incorporate air and achieve the desired texture.
6. Release the button to stop.
7. Unplug the appliance before removing the whisk attachment or cleaning.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your BERGNER OLIVAR Immersion Blender.

- **Always unplug the appliance before cleaning.**
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or any other liquid.
- **Blending Shaft, Chopper Bowl, Chopper Blade, Whisk, Measuring Cup:** These parts are detachable and can be washed in warm soapy water. Rinse thoroughly and dry immediately. The stainless steel blending shaft is designed for easy cleaning.
- **Dishwasher Safety:** The blending shaft, chopper bowl, chopper blade, whisk, and measuring cup are generally dishwasher safe (top rack only), but hand washing is recommended to prolong their lifespan. The motor unit and whisk gearbox are NOT dishwasher safe.
- **Storage:** Store the appliance and its accessories in a dry place, away from direct sunlight and out of reach of children.
- Do not use abrasive cleaners or scouring pads, as these may scratch the surfaces.

TROUBLESHOOTING

If you encounter issues with your immersion blender, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; improper assembly; power outage.	Ensure the appliance is securely plugged into a working outlet. Check if attachments are correctly locked into place. Verify power supply.

Problem	Possible Cause	Solution
Motor runs, but blades do not move.	Attachment not properly secured; food jammed.	Unplug the appliance. Re-attach the blending shaft or chopper lid/blade securely. If food is jammed, carefully remove it (ensure appliance is unplugged).
Appliance stops during operation.	Overheating; too much food; ingredients too hard.	Unplug and let cool down for 15-20 minutes. Reduce the amount of ingredients or cut hard ingredients into smaller pieces. Do not operate continuously for too long.
Splashing during blending.	Blender not fully submerged; too much liquid.	Ensure the blade guard of the blending shaft is fully submerged before starting. Reduce liquid volume if necessary. Use a deeper container.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** OLIVAR
- **Brand:** BERGNER
- **Power:** 1000 W
- **Speeds:** 2 (Normal, TURBO)
- **Shaft Material:** Stainless Steel
- **Chopper Bowl Capacity:** 600 ml
- **Measuring Cup Capacity:** 600 ml
- **Special Features:** Detachable shaft, Splash-proof dome, Two speeds
- **Color:** Black

WARRANTY AND SUPPORT

Your BERGNER OLIVAR Immersion Blender is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact the BERGNER customer service department or your local retailer. Keep your proof of purchase for warranty validation.

For more information, visit the official BERGNER website or contact their customer support channels.