

## Zep R49312

# Zep Fume Free Air Fryer & Oven Cleaner R49312 User Manual

Model: R49312

## 1. INTRODUCTION

---

Thank you for choosing the Zep Fume Free Air Fryer & Oven Cleaner. This professional-strength formula is designed to effectively remove baked-on grease, grime, and food residue from various cooking surfaces without harsh fumes. Its biodegradable ingredients work on contact to simplify your cleaning routine. This manual provides essential information for safe and optimal use of your cleaner.



Image 1.1: Front view of the Zep Fume Free Air Fryer & Oven Cleaner bottle, showing the Zep logo and product name.

## 2. SAFETY INFORMATION

---

Please read and understand all safety information before using this product.

- **CAUTION: EYE IRRITANT.** Avoid contact with eyes. In case of eye contact, flush thoroughly with water for several minutes. Remove contact lenses if present and easy to do. Continue rinsing. If irritation persists, seek medical attention.
- **KEEP OUT OF REACH OF CHILDREN AND PETS.** Store in a cool, dry place away from direct sunlight.

- Do not ingest. If swallowed, do not induce vomiting. Call a poison control center or doctor immediately.
- Use in a well-ventilated area.
- Although the formula is fume-free, it is recommended to avoid prolonged skin contact. Wash hands thoroughly after use.

## 2.1. Ingredients

This product contains biodegradable cleaning agents. For specific ingredient details, refer to the product label or manufacturer's safety data sheet.

## 3. PRODUCT OVERVIEW AND INTENDED USE

---

The Zep Fume Free Air Fryer & Oven Cleaner is formulated for cleaning various cooking surfaces.

- **Intended Use:** Air fryers, ovens, microwaves, grills, and other cooking surfaces.
- **Not for Use On:** Glass, acrylic, plastic, or natural stone surfaces.



Image 3.1: Back view of the Zep Fume Free Air Fryer & Oven Cleaner bottle, displaying usage instructions and warnings.

## 4. OPERATING INSTRUCTIONS

---

Follow these steps for effective cleaning:

1. **Preparation:** Ensure the appliance is cool and unplugged. Remove any loose food debris.
2. **Application:** Spray the cleaner directly onto the soiled surface. For heavy grease buildup, spray removable parts thoroughly.
3. **Dwell Time:** Allow the cleaner to sit for 2-3 minutes. This allows the formula to break down baked-on grease and grime.
4. **Wipe & Rinse:** Thoroughly wipe the treated surface with a damp cloth or sponge. Rinse the cloth frequently with water. Repeat wiping and rinsing if necessary until all residue is removed.
5. **Drying:** Allow the cleaned surface to air dry completely before reassembling or using the appliance.

### 4.1. Cleaning Specific Appliances

- **Air Fryers:** For best results on air fryer baskets or surfaces with non-stick coatings, use a stiff brush or scrubber sponge before cleaning.
- **Ovens & Microwaves:** Apply directly to interior surfaces. Avoid spraying on electrical components or

heating elements.



Image 4.1: Demonstrates spraying the cleaner inside a microwave oven to remove grime.



Image 4.2: Illustrates applying the cleaner to an air fryer basket for deep cleaning.

## 5. MAINTENANCE AND STORAGE

---

Regular cleaning helps prevent odor buildup and maintains appliance efficiency.

- **Regular Use:** For best results, use the cleaner after every use of your air fryer or oven to prevent heavy grease accumulation.
- **Storage:** Store the bottle upright in a cool, dry place, away from direct sunlight and out of reach of children and pets.
- **Disposal:** Dispose of the empty container according to local regulations.

## 6. TROUBLESHOOTING

---

If you encounter issues with the cleaner's performance, consider the following:

- **Stubborn Grease:** For extremely baked-on or thick grease, a second application and a slightly longer dwell time (e.g., 5 minutes) may be necessary. Agitation with a stiff brush or scrubber sponge can also improve results.

- **Residue After Wiping:** Ensure thorough rinsing with a clean, damp cloth. Multiple wipes with a fresh cloth may be needed to remove all cleaner residue.
- **Sprayer Malfunction:** Check if the nozzle is clogged. If the sprayer is not functioning, ensure it is properly attached and clear of any blockages.
- **Ineffective Cleaning:** Confirm the cleaner is being used on appropriate surfaces (not glass, acrylic, plastic, or natural stone). Ensure the surface is cool before application.

## 7. SPECIFICATIONS

---

<b>Product Name</b>	Zep Fume Free Air Fryer & Oven Cleaner
<b>Model Number</b>	R49312
<b>Brand</b>	Zep
<b>Item Form</b>	Spray
<b>Scent</b>	Unscented
<b>Volume</b>	24 fl oz (709 mL)
<b>Material Feature</b>	Biodegradable, Fume Free, Professional Strength
<b>Specific Uses</b>	Air Fryer, Kitchen Appliances, Oven
<b>Manufacturer</b>	Zep

## 8. WARRANTY AND SUPPORT

---

For specific warranty information or product support, please contact Zep customer service directly.

- **Manufacturer:** Zep
- **Contact Information:** Refer to the product packaging or the official Zep website for the most current customer support details.
- **Poison Control:** In case of accidental ingestion, contact a poison control center immediately. The product label provides a phone number for the Poison Control Center.

© 2025 Zep. All rights reserved.

This manual is for informational purposes only. Zep is not responsible for any damages or injuries resulting from improper use of this product.