

NACON 50-1789-01

NACON Wired Controller for PlayStation 4 and PC - Instruction Manual

Model: 50-1789-01

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the setup, operation, and maintenance of your NACON Wired Controller for PlayStation 4 and PC. This controller is officially licensed for PlayStation and offers a reliable gaming experience with its wired connection.



Image 1.1: Front view of the NACON Wired Controller.

Key features include:

- **Official PlayStation 4 Licensing:** Ensures full compatibility and functionality with PlayStation 4 consoles.
- **PC Compatibility:** Can be used with personal computers for a versatile gaming experience.
- **Integrated Touch Pad:** Provides interactive control for compatible games.
- **Immersive Vibration Motors:** Enhances gameplay feedback.
- **Dedicated SHARE and OPTIONS Buttons:** Standard PlayStation controller functionality.
- **Ergonomic Design:** Features larger face buttons and a smooth rubber coating for comfort during extended use.
- **3-Meter Wired Connection:** Offers a low-latency, plug-and-play experience without the need for charging.
- **3.5mm Audio Port:** Supports seamless game audio and chat when a headset is connected.

2. SETUP INSTRUCTIONS

2.1 Connecting to PlayStation 4

1. Ensure your PlayStation 4 console is powered on.
2. Locate an available USB port on your PlayStation 4 console.
3. Plug the USB connector of the NACON Wired Controller's 3-meter cable into the USB port on your PS4.
4. The controller will automatically be recognized by the console. The LED player status indicator will illuminate to confirm connection and assigned player number.

2.2 Connecting to PC

1. Ensure your PC is powered on.
2. Locate an available USB port on your PC.
3. Plug the USB connector of the NACON Wired Controller's 3-meter cable into the USB port on your PC.
4. Your PC operating system should automatically detect and install the necessary drivers. This is typically a plug-and-play process.
5. The controller will be ready for use with compatible PC games.

2.3 Headset Connection

1. Locate the 3.5mm audio port on the bottom of the controller.
2. Connect your compatible headset (e.g., RIG headset) to this port.
3. Audio and chat functions will be routed through the controller. Adjust volume settings via your console or PC system settings.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The NACON Wired Controller features the standard PlayStation 4 button layout:

- **Directional Pad (D-Pad):** For precise directional input.
- **Left and Right Analog Sticks:** For movement and camera control.

- **Action Buttons (Triangle, Circle, Cross, Square):** For in-game actions.
- **SHARE Button:** Access sharing features on PS4.
- **OPTIONS Button:** Access in-game menus or system options.
- **PS Button:** Access the PlayStation Home screen or system menu.
- **L1, L2, R1, R2 Buttons:** Shoulder and trigger buttons for various in-game functions.



Image 3.1: Detail of the touchpad and action buttons.

3.2 Touch Pad Functionality

The integrated touch pad supports gestures and input for games that utilize this feature. Its surface is textured for improved tactile feedback.

3.3 Vibration Feedback

Dual vibration motors provide haptic feedback, allowing you to feel in-game events such as impacts, explosions, and environmental effects. This feature is automatically enabled when supported by the game.

3.4 LED Player Status Indicator

The LED light bar on the controller indicates the assigned player number (on PS4) and provides visual feedback for certain in-game events or controller status.



Image 3.2: Detail of the L1, L2, R1, R2 trigger buttons.

4. MAINTENANCE

4.1 Cleaning

- To clean the controller, use a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish and internal components.
- Do not allow liquids to enter the controller's openings.

4.2 Storage

- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the controller or bending the cable sharply, which could cause damage.

5. TROUBLESHOOTING

If you encounter issues with your NACON Wired Controller, please refer to the following common solutions:

Problem	Possible Solution
Controller not recognized by PS4/PC	Ensure the USB cable is securely connected to both the controller and the console/PC. Try a different USB port. Restart your console or PC. On PC, check Device Manager to see if the controller is listed.
No vibration feedback	Verify that the game you are playing supports vibration. Check in-game settings or console/PC system settings to ensure vibration is enabled.
No audio from headset	Ensure your headset is fully plugged into the 3.5mm audio port on the controller. Check audio output settings on your PS4 or PC to ensure audio is routed to the controller/headset. Adjust headset volume controls.
Buttons or sticks unresponsive	Disconnect and reconnect the controller. Test the controller on another console or PC if possible to isolate the issue. Ensure no debris is obstructing button movement.

6. SPECIFICATIONS






- **Model Number:** 50-1789-01
- **Compatibility:** PlayStation 4, PC
- **Connectivity:** Wired USB
- **Cable Length:** 3 meters (approximately 9.8 feet)
- **Audio Port:** 3.5mm stereo headset jack
- **Dimensions:** 2.36 x 6.1 x 4.13 inches (6 x 15.5 x 10.5 cm)
- **Weight:** 10.6 ounces (300 grams)
- **Color:** Black

7. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official NACON website or contact their customer service department. Keep your proof of purchase for warranty claims. You can typically find support resources, FAQs, and contact information on the manufacturer's official website:

[Visit NACON Gaming Support](#)

Related Documents - 50-1789-01

	<p>NACON DAIJA Arcade Stick : Guide de Démarrage Rapide pour PS5, PS4 et PC</p> <p>Ce guide de démarrage complet pour le NACON DAIJA Arcade Stick détaille le contenu de l'emballage, la description des composants, les instructions de compatibilité et de connexion pour PlayStation 5, PlayStation 4 et PC. Il offre également des conseils sur la personnalisation et l'utilisation pour une expérience de jeu optimale.</p>
	<p>Nacon Asymmetric Wireless Controller for PS4 User Guide</p> <p>Official user guide for the Nacon Asymmetric Wireless Controller for PlayStation 4. Learn about setup, charging, synchronization, features, and safety precautions.</p>
	<p>Nacon RIG 400HS Gaming Headset Quick Start Guide</p> <p>A concise guide to setting up and fitting the Nacon RIG 400HS gaming headset for PlayStation consoles, including connection instructions and usage tips.</p>
	<p>Nacon Asymmetric Wireless Controller for PS4 User Guide</p> <p>Comprehensive user guide for the Nacon Asymmetric Wireless Controller for PS4, covering setup, charging, synchronization, multiplayer mode, notices, safety precautions, and technical information.</p>
	<p>Nacon RIG 600 PRO Wireless Gaming Headset User Guide</p> <p>Comprehensive user guide for the Nacon RIG 600 PRO wireless gaming headset, covering setup for PS5, PS4, PC, and Nintendo Switch, pairing instructions, mode explanations, customization via the Companion App, safety precautions, and support information.</p>



[Nacon RIG M100 HS Streaming Microphone - Setup, Specifications, and Guide](#)

Official product guide for the Nacon RIG M100 HS streaming microphone. Includes setup instructions for PlayStation consoles, product specifications, usage tips, warranty information, and safety precautions.