

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GROSERY](#) /

› [GROSERY Kitchen Trolley Instruction Manual - Model GROSERY](#)

## GROSERY GROSERY

# GROSERY Kitchen Trolley Instruction Manual - Model GROSERY

## 1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your GROSERY Kitchen Trolley, Model GROSERY. Please read this manual thoroughly before assembly and use to ensure safe and correct operation. Keep this manual for future reference.

## 2. SAFETY INFORMATION

**WARNING: To prevent the trolley from tipping over, this product must be used with the provided wall attachment device. Always secure the trolley to a wall as instructed during assembly.**

- Ensure all parts are securely fastened before use.
- Do not overload the shelves. Refer to specifications for weight limits.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Use on a level surface to maintain stability.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Engineered wood panels (top, shelves, side panels)
- Steel frame components
- 4 Castors (2 with brakes)
- Adjustable feet (alternative to castors)
- Assembly hardware (screws, bolts, nuts, Allen key)
- Wall attachment device
- Instruction manual

## 4. ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully. It is recommended to assemble the trolley on a soft, clean surface to prevent scratches.

- 1. Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out and compare them against the package contents list to ensure everything is present.
- 2. Assemble the Steel Frame:** Connect the steel frame components using the provided hardware. Ensure all connections are snug but do not overtighten until all frame pieces are in place.
- 3. Attach Wood Panels:** Secure the engineered wood shelves and side panels to the assembled steel frame using the appropriate screws.
- 4. Choose Installation Method:**
  - **Option A (With Castors):** Attach the 4 castors to the bottom of the trolley frame. Ensure the 2 castors with brakes are positioned on the same side for easier locking.
  - **Option B (With Adjustable Feet):** If you prefer a stationary unit or need to stabilize on uneven surfaces, attach the adjustable feet to the bottom of the trolley frame instead of the castors.
- 5. Secure to Wall:** Position the trolley in its desired location. Using the provided wall attachment device, secure the trolley to a sturdy wall. This step is crucial for preventing tipping.
- 6. Final Check:** Once assembled, gently shake the trolley to ensure all connections are secure and the unit is stable.



Image 1: Front view of the GROSERY Kitchen Trolley, showcasing its structure without any items on the shelves.



Image 2: Side view of the GROSERY Kitchen Trolley, illustrating the depth and arrangement of the shelves.

## 5. OPERATING INSTRUCTIONS

Your GROSERY Kitchen Trolley is designed for versatile storage and mobility.

- **Mobility (with Castors):** To move the trolley, ensure the brakes on the two lockable castors are disengaged. Push the trolley to your desired location.
- **Stability (with Castors):** To keep the trolley stationary, engage the brakes on the two lockable castors by pressing down on the lever.
- **Stability (with Adjustable Feet):** If using adjustable feet, rotate them clockwise or counter-clockwise to level the trolley on uneven surfaces.
- **Storage:** Utilize the various shelves to organize kitchen items, spices, books, or other household goods. Distribute weight evenly across the shelves.



Image 3: The GROSERY Kitchen Trolley in a kitchen setting, demonstrating its ample storage capacity with various items.

## 6. MAINTENANCE

To ensure the longevity and appearance of your kitchen trolley, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the engineered wood or steel finish.
- **Spills:** Clean up spills immediately to prevent staining or moisture damage to the wood.
- **Hardware:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Castors:** Keep castors free of debris to ensure smooth movement.

## 7. TROUBLESHOOTING

If you encounter any issues with your GROSERY Kitchen Trolley, refer to the following common solutions:

- **Trolley is unstable/wobbly:**
  - Ensure all assembly hardware is tightened.
  - If using adjustable feet, adjust them to level the trolley on uneven floors.

- Verify the wall attachment device is securely installed.
- **Castors not rolling smoothly:**
  - Check for debris (hair, lint) wrapped around the castor wheels and remove it.
  - Ensure castor brakes are disengaged.
- **Missing parts:** If you find any parts missing during assembly, do not proceed. Contact customer support immediately for assistance.

## 8. SPECIFICATIONS

| Attribute              | Detail                               |
|------------------------|--------------------------------------|
| Brand                  | GROSERY                              |
| Model                  | GROSERY                              |
| Color                  | Black                                |
| Material               | Engineered wood, steel               |
| Dimensions (L x W x H) | 39.4" x 17.7" x 35.2" (with castors) |
| Item Weight            | 57.9 pounds                          |
| Castors                | 4 (2 with brakes)                    |
| Assembly Required      | Yes                                  |

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact the GROSERY customer service department. Keep your proof of purchase for any warranty claims.