

## RadioShack 3304399

# RadioShack Live Sound Wireless Bluetooth Earbuds User Manual

Model: 3304399

## 1. INTRODUCTION

Thank you for choosing the RadioShack Live Sound Wireless Bluetooth Earbuds. These earbuds are designed to provide a high-quality audio experience with advanced features such as noise cancellation and IPX5 waterproofing. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

## 2. PACKAGE CONTENTS

- RadioShack Live Sound Wireless Bluetooth Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

## 3. PRODUCT OVERVIEW

The RadioShack Live Sound Earbuds feature a compact design for comfortable wear and portability. The charging case protects the earbuds and provides additional battery life.



Image: RadioShack Live Sound Wireless Bluetooth Earbuds in their open charging case.



**Designed for efficiency.**  
Extended use with minimal power consumption.

Image: A single RadioShack Live Sound earbud, showcasing its design and in-ear form factor.

#### 4. SETUP

## 4.1 Charging the Earbuds and Case

1. Place the earbuds into the charging case. Ensure they are correctly seated; magnetic contacts will hold them in place.
2. Connect the USB charging cable to the charging port on the case and to a compatible USB power source.
3. The indicator light on the charging case will illuminate to show charging status. A full charge typically takes approximately 1.5 hours for the earbuds and 2 hours for the case.
4. Once fully charged, the indicator light will change or turn off, depending on the model. Disconnect the charging cable.

The earbuds have a 35mAh battery capacity, and the charging case has a 460mAh capacity, providing extended usage.

## 4.2 Bluetooth Pairing

Your earbuds utilize Bluetooth AB5636F Bluetooth 5.4 chipset for instant and stable connectivity.

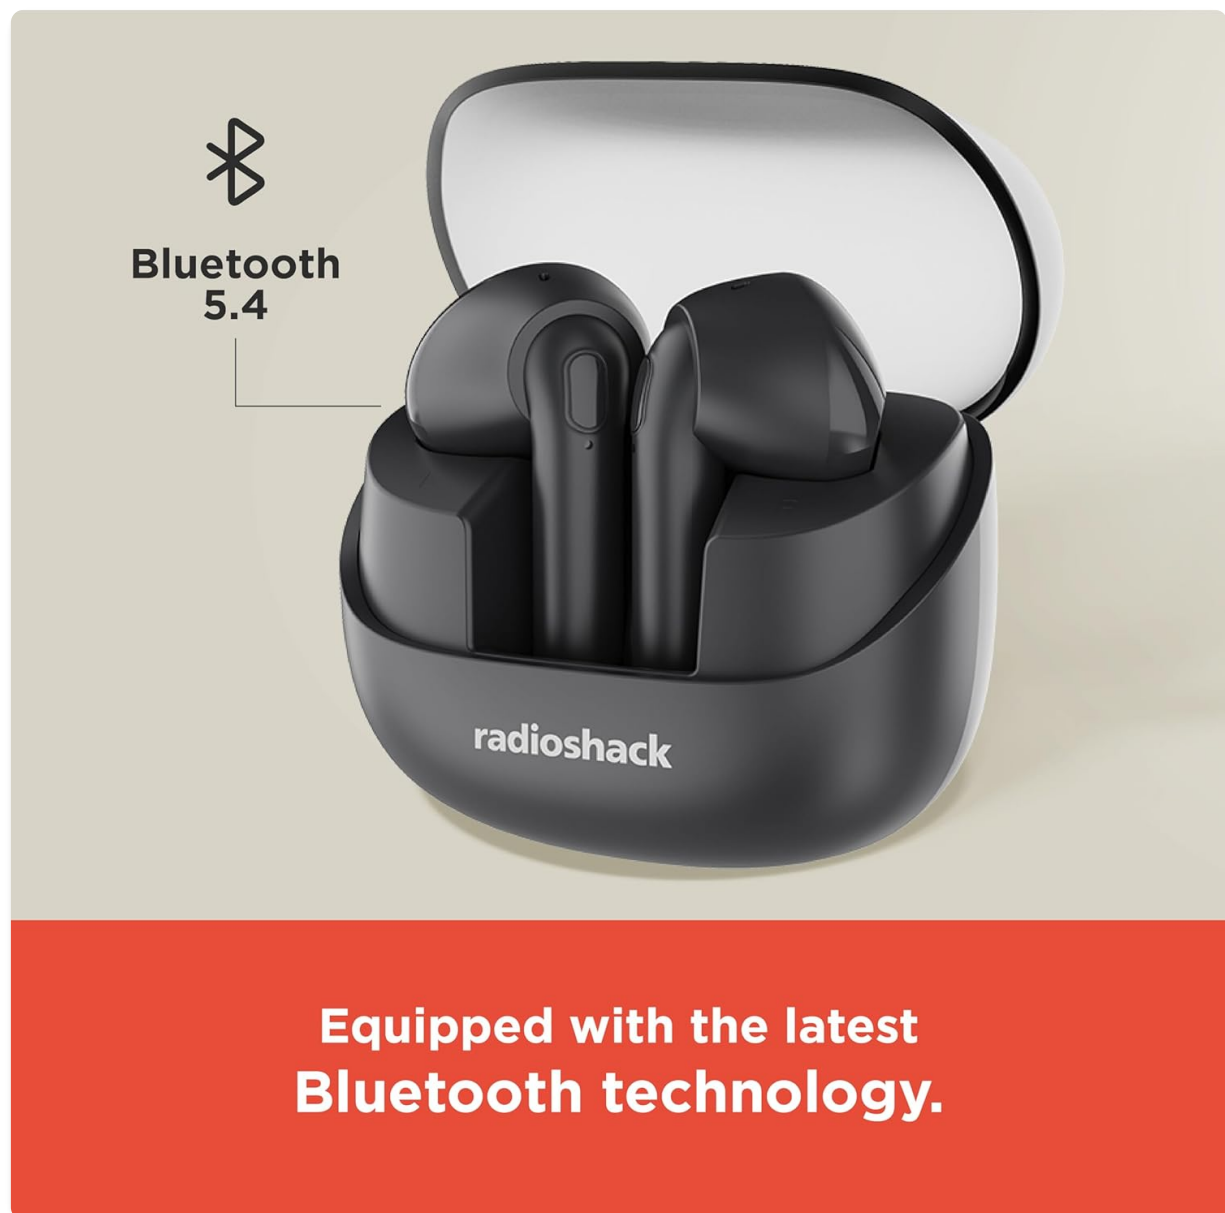


Image: Graphic illustrating Bluetooth 5.4 technology for enhanced connectivity.

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing

LED light on one or both earbuds.

3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "RadioShack Live Sound" from the list of found devices.
5. Once connected, the earbud LED lights will stop flashing, and you may hear a confirmation tone.
6. The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

### 5.2 Music Playback

The earbuds feature touch controls for easy management of your audio.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.

### 5.3 Call Management

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.

### 5.4 Noise Cancellation

These earbuds are equipped with advanced noise cancellation technology to reduce ambient sounds, allowing for a more immersive listening experience.

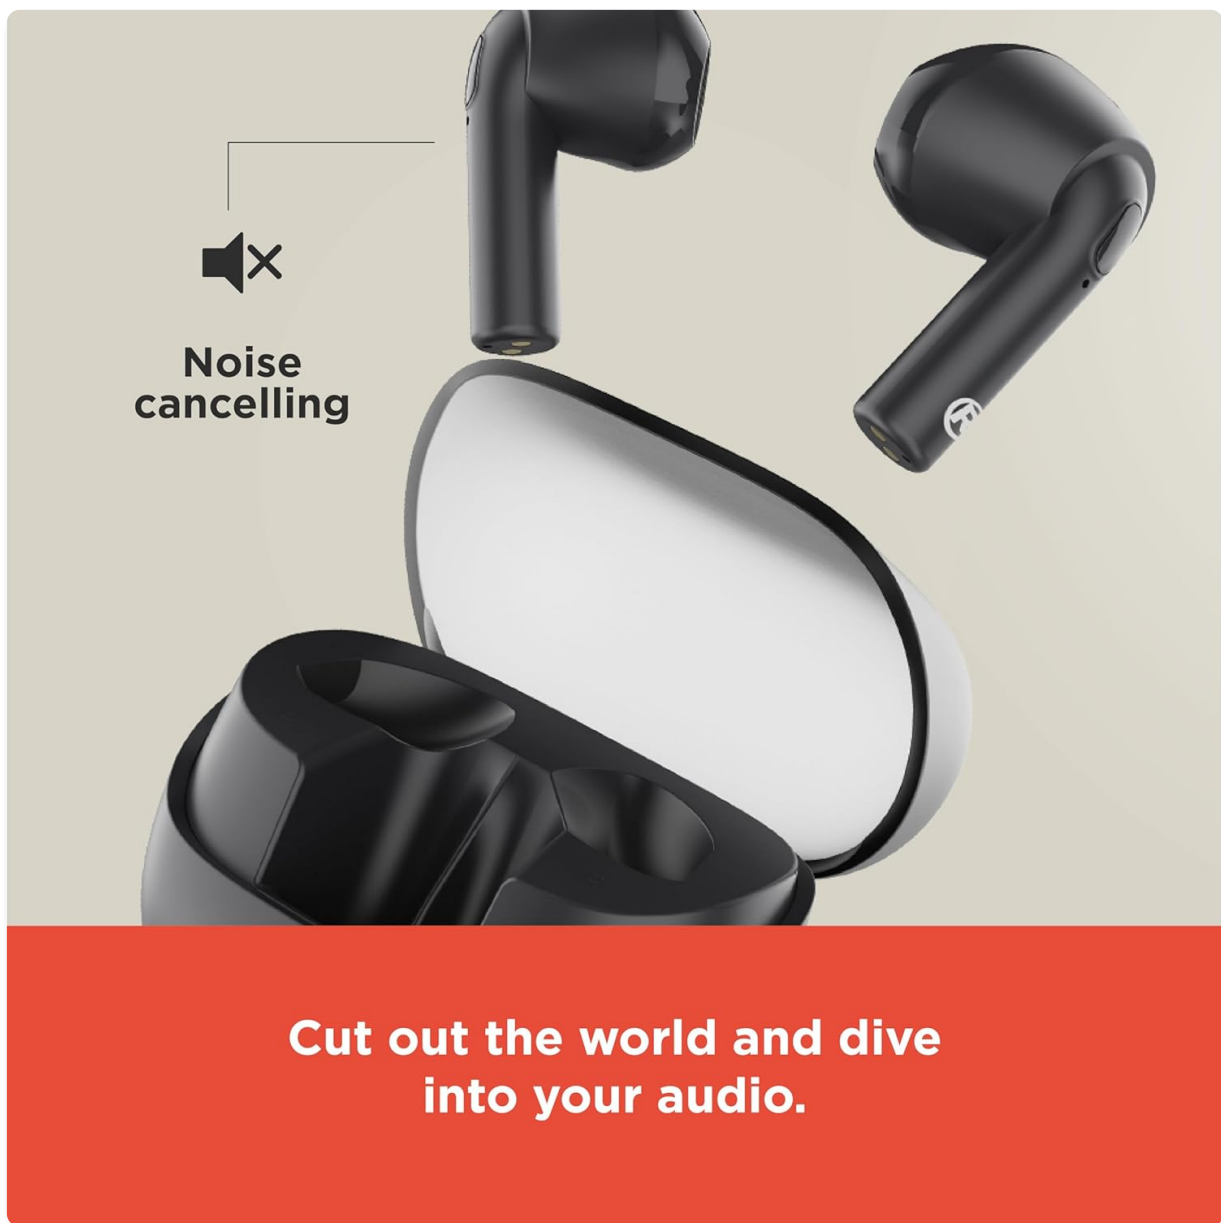 


Image: Graphic representing the noise cancellation feature, with earbuds shown outside their case.

## 6. MAINTENANCE

### 6.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Ensure charging contacts on both earbuds and case are clean and free of debris.

### 6.2 Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

### 6.3 Water Resistance

The earbuds are IPX5 waterproof, meaning they are resistant to a sustained, low-pressure water jet spray. They are suitable for use during exercise or in light rain. However, they are not designed for immersion in water. Avoid exposing the charging case to water.

## 7. TROUBLESHOOTING

Issue	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Place earbuds back in case, close lid, then reopen to re-enter pairing mode. Forget the device from your phone's Bluetooth settings and try pairing again.
Only one earbud working	Place both earbuds back in the charging case, close the lid, and then take them out again. Ensure both earbuds are charged.
No sound	Check volume levels on both your device and the earbuds. Ensure earbuds are properly connected to your device. Try playing audio from a different application or source.
Charging case not charging	Ensure the USB cable is securely connected to both the case and the power source. Try a different USB cable or power adapter.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	RadioShack Live Sound Wireless Bluetooth Earbuds
Model Number	3304399
Connectivity Technology	Bluetooth 5.4
Noise Control	Active Noise Cancellation
Water Resistance Level	IPX5 (Earbuds only)
Earbud Battery Capacity	35mAh
Charging Case Battery Capacity	460mAh
Frequency Range	20-20000 Hz
Sensitivity	114 dB
Impedance	32 Ohm
Control Method	Touch
Material	Plastic
Item Weight	3.2 ounces

## 9. SAFETY INFORMATION





 
- Do not disassemble, repair, or modify the product.
- Keep the product away from extreme temperatures, direct sunlight, and open flames.
- Avoid exposing the charging case to water or moisture.
- Do not use the earbuds at high volume for extended periods to prevent hearing damage.
- Dispose of batteries and electronic components responsibly according to local regulations.

 
## 10. WARRANTY AND SUPPORT

RadioShack products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official RadioShack website. Please retain your proof of purchase for warranty claims.

© 2025 RadioShack. All rights reserved.

### Related Documents - 3304399

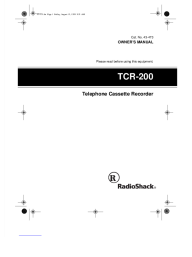 <p>RadioShack 33-2055 User's Guide</p> <p>Digital Sound Level Meter</p> <p>Thank you for purchasing your Digital Sound Level Meter from RadioShack. Please read this user's guide before setting up, using, and storing your new meter.</p>	<p><a href="#">RadioShack 33-2055 Digital Sound Level Meter User's Guide</a></p> <p>User's guide for the RadioShack 33-2055 Digital Sound Level Meter, detailing setup, features, operation, indications, measurements, care, specifications, and limited warranty.</p>
	<p><a href="#">RadioShack 2.1 Sound Bar Model 4001949 User Manual</a></p> <p>User manual for the RadioShack 2.1 Sound Bar (Model 4001949), detailing specifications, features, operation, remote control functions, panel descriptions, connection diagram, placement advice, and troubleshooting.</p>
	<p><a href="#">RadioShack 15" 2-Way P.A. Speaker User Manual (Models 4001924, 4001925)</a></p> <p>User manual for the RadioShack 15-inch 2-Way P.A. Speaker, covering packing contents, specifications, player controls, remote functions, and safety precautions for models 4001924 and 4001925.</p>
	<p><a href="#">RadioShack 4001942 &amp; 4001944 Dual PA Speaker User Manual</a></p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p><a href="#">RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual</a></p> <p>Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.</p>

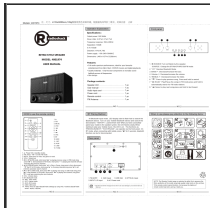

### [Radioshack 4001974 Retro Style Speaker User Manual](#)

Comprehensive user manual for the Radioshack 4001974 Retro Style Speaker. Learn about its specifications, features, front panel controls, remote operation, Bluetooth pairing, rear panel connections, and important usage guidelines.