



Manuals.plus /

› ZENY /

› ZENY Bathroom Floor Cabinet ZENY3380 User Manual

ZENY ZENY3380

ZENY Bathroom Floor Cabinet ZENY3380 User Manual

Model: ZENY3380

[Introduction](#) [Safety Information](#) [Package Contents](#) [Specifications](#) [Setup & Assembly](#) [Operation](#)
[& Usage](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the ZENY Bathroom Floor Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new storage cabinet. Please read these instructions thoroughly before beginning assembly and retain them for future reference.



Image 1.1: Front view of the assembled ZENY Bathroom Floor Cabinet.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury and damage to the product:

- **Read all instructions** before assembly and use.
- **Keep children and pets away** during assembly. Small parts can be a choking hazard.
- **Assemble on a soft, clean surface** to prevent scratches.
- **Ensure all connections are secure** before use. Periodically check and tighten fasteners.
- **Do not exceed weight limits:** Top surface: 88 lbs, Adjustable shelves: 33 lbs each, Drawers: 11 lbs each.
- **Use anti-tip hardware** if provided, to secure the cabinet to a wall, especially in homes with children.
- **Do not stand or climb** on the cabinet.
- **Avoid exposure to excessive moisture** or direct sunlight to prolong product life.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image 3.1: Illustration showing all individual parts and hardware included in the package. Refer to the included assembly manual for a detailed list and identification of each component.

A detailed list of parts and hardware, along with their corresponding labels, is typically provided in the separate assembly instruction booklet. Please refer to that document for precise identification.

4. SPECIFICATIONS

Feature	Detail
Brand	ZENY
Model Number	ZENY3380
Color	Black
Product Dimensions	11.6"D x 21.9"W x 34"H
Material	Engineered MDF (Wood)
Mounting Type	Floor Mount (Freestanding)
Number of Shelves	3 (Adjustable)
Number of Drawers	3
Weight Limit (Top)	88 lbs
Weight Limit (Shelves)	33 lbs each
Weight Limit (Drawers)	11 lbs each
Item Weight	42.5 pounds
Assembly Required	Yes

5. SETUP & ASSEMBLY

Assembly is required for this product. Please follow the steps carefully. It is recommended to have two people for assembly.

Tools Required:

- Phillips Head Screwdriver (not included)
- Hammer (optional, for dowels)

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface. Refer to the parts list in your separate assembly manual to identify each piece.
2. **Assemble Side Panels:** Attach the side panels to the base and top frame using the provided dowels and cam locks/screws. Ensure proper orientation.
3. **Install Back Panel:** Slide or fasten the back panel into the grooves or attach it to the rear of the cabinet structure.
4. **Assemble Drawers:** Construct the three drawers by attaching the front, back, and side pieces. Install the drawer bottoms and then attach the drawer slides to the drawer sides.
5. **Install Drawer Slides to Cabinet:** Attach the corresponding drawer slides to the interior of the cabinet frame where the drawers will be inserted.
6. **Insert Drawers:** Carefully slide the assembled drawers into their respective slots.
7. **Attach Cabinet Door:** Secure the door hinges to the cabinet frame and then attach the door. Ensure the door opens and closes smoothly.
8. **Install Adjustable Shelves:** Insert the shelf pins into the desired height holes within the cabinet compartment. Place the adjustable shelves on top of the pins.

9. **Attach Knobs/Handles:** Secure the door knob and drawer handles to their respective positions.
10. **Final Inspection:** Check all connections and fasteners to ensure they are tight and secure.
11. **Secure to Wall (Optional but Recommended):** Use the included anti-tip hardware to secure the cabinet to a wall, especially if children are present in the household.



Image 5.1: The cabinet features a 3-height adjustable shelf, allowing customization of storage space. This image shows the shelf being adjusted.

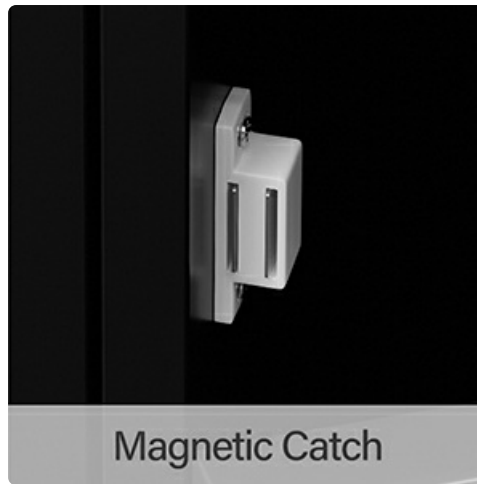


Image 5.2: Detail of the magnetic catch mechanism, ensuring the cabinet door remains securely closed.

6. OPERATION & USAGE

The ZENY Bathroom Floor Cabinet is designed for versatile storage in various rooms.

- **Adjusting Shelves:** The cabinet features adjustable shelves. To change the shelf height, remove the shelf, reposition the shelf pins to the desired holes, and then place the shelf back on the pins.
- **Drawer Use:** The three drawers provide enclosed storage for smaller items. Pull the handles to open and push to close.
- **Cabinet Door:** The main cabinet compartment is secured by a door with a magnetic catch. Pull the knob to open and push to close until the magnetic catch engages.
- **Placement:** This freestanding cabinet can be placed in bathrooms, living rooms, bedrooms, entryways, or home offices to organize towels, toiletries, books, or other household items.



Image 6.1: The cabinet positioned in a bathroom, demonstrating its use for storing towels and toiletries.



Image 6.2: The cabinet used in a living room, showcasing its versatility as an accent furniture piece.

7. MAINTENANCE

Proper care will ensure the longevity of your ZENY cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent water damage, especially in humid environments like bathrooms.
- **Fasteners:** Periodically check all screws and fasteners and tighten them as needed to maintain stability.
- **Avoid Overloading:** Do not exceed the specified weight limits for the top, shelves, and drawers.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet is wobbly.	Loose fasteners; uneven floor.	Ensure all screws are tightened. Place shims under legs if the floor is uneven.
Drawer does not slide smoothly.	Drawer slides misaligned; obstruction.	Check that drawer slides are correctly installed and aligned. Remove any obstructions.
Cabinet door does not close properly.	Hinges misaligned; magnetic catch not engaging.	Adjust hinges to align the door. Ensure the magnetic catch is properly installed and aligned with the door plate.
Missing parts during assembly.	Packaging error.	Contact ZENY customer support with your model number and a list of missing parts.

9. WARRANTY & SUPPORT

ZENY products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official ZENY website. If you encounter any issues or require assistance, please contact ZENY customer support.

Contact Information: Please refer to the contact details provided in your product packaging or on the official ZENY website for the most up-to-date support information.

Online Resources: For additional support, assembly videos (if available), and FAQs, visit the **ZENY Store on Amazon**.