

## Ingco CPWLI20362

# INGCO Cordless Pressure Washer

Model: CPWLI20362

## 1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before operating the appliance. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

### General Safety

- Always wear appropriate personal protective equipment, such as safety glasses, gloves, and hearing protection.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate the pressure washer in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Keep children and bystanders away while operating the pressure washer. Distractions can cause you to lose control.
- Never point the spray nozzle at people, pets, or electrical devices. High-pressure spray can cause severe injury.

### Battery Safety

- Use only the battery pack and charger specified by the manufacturer.
- Do not expose battery packs to rain or wet conditions.
- Do not store the pressure washer or battery in locations where the temperature may exceed 50°C (122°F).
- Dispose of used battery packs responsibly according to local regulations.

## 2. PRODUCT OVERVIEW

The INGCO Cordless Pressure Washer CPWLI20362 is a portable, battery-powered cleaning tool designed for various outdoor tasks. Its lightweight design and cordless operation provide flexibility and ease of use.

**MAX. PRESSURE: 24.8 BAR**



## **HIGH-PRESSURE PERFORMANCE**

Figure 2.1: INGCO Cordless Pressure Washer. A clear view of the main pressure washer unit, showcasing its compact and ergonomic design.

**NO POWER CORDS OR OUTLETS NEEDED**



## **CORDLESS FREEDOM**

**Figure 2.2:** Complete Ready-to-Use Kit. This image displays the INGCO Cordless Pressure Washer along with its essential accessories, including the battery, charger, water hose, and foam dispenser, highlighting its comprehensive package.

### **Key Features**

- **Portability:** Small and light design for unrestricted cleaning.
- **High-Pressure Performance:** Delivers a strong water jet for effective cleaning.
- **Cordless Operation:** Powered by a lithium battery for extended use without power cords or outlets.
- **Dual Spray Modes:** Adjustable spray patterns from 0 degrees (direct jet) to fan-shaped for versatile cleaning.
- **Durable Construction:** Casing made of high-strength nylon PA6-GF30 material.
- **Self-Suction Capability:** Can draw water directly from buckets or pools, eliminating the need for a tap connection.
- **Auto-Stop Safety:** The unit features an auto-stop function for enhanced safety and energy efficiency.



**Figure 2.3:** Auto-Stop Safety. This diagram visually represents the internal mechanism of the pressure washer's auto-stop safety feature, which activates when the trigger is released, conserving battery and preventing overheating.

### 3. SETUP AND ASSEMBLY

Follow these steps to prepare your pressure washer for use.

#### 3.1 Battery Installation and Charging

1. Ensure the battery is fully charged before first use. Connect the charger to a power outlet and insert the battery pack.
2. Once charged, slide the battery pack into the battery slot on the pressure washer handle until it clicks securely into place.

#### 3.2 Water Connection

The pressure washer supports self-suction from various water sources.



**Figure 3.1: Self-Suction Innovation.** This image illustrates the pressure washer's ability to draw water directly from a container, such as a bottle, without requiring a direct tap connection.

1. Attach the water inlet hose to the designated port on the pressure washer.
2. Place the other end of the hose, equipped with the filter, into a clean water source such as a bucket, pool, or bottle. Ensure the filter is fully submerged.

### 3.3 Nozzle Attachment

1. Select the desired nozzle for your cleaning task.
2. Securely attach the nozzle to the spray wand.

## 4. OPERATING INSTRUCTIONS

Learn how to effectively use your INGCO Cordless Pressure Washer.

### 4.1 Starting the Pressure Washer

1. Ensure the battery is installed and the water source is connected.

2. Hold the pressure washer firmly with both hands.
3. Press the trigger to start the water flow. The pump will begin to draw water and build pressure.



**Figure 4.1:** High-Pressure Performance. This image shows the pressure washer in action, demonstrating its powerful water jet with a maximum pressure of 24.8 bar for effective cleaning.

## 4.2 Adjusting Spray Patterns

The pressure washer features adjustable spray patterns for different cleaning needs.



## COMPLETE READY-TO-USE KIT

**Figure 4.2: Dual Spray Modes.** This image illustrates the two primary spray patterns: a concentrated 0-degree jet for tough spots and a wider 40-degree fan spray for general cleaning.

- **0-Degree Jet:** Provides a concentrated, high-impact stream for stubborn dirt and grime. Use with caution on delicate surfaces.
- **Fan Spray (e.g., 40-degree):** Offers a wider, less aggressive spray pattern suitable for general cleaning, rinsing, and larger surfaces.
- Rotate the nozzle head to switch between different spray patterns.

### 4.3 Cleaning Techniques

- Always test the spray on an inconspicuous area first to avoid damage.
- Maintain a safe distance from the surface being cleaned. Start further away and move closer if more pressure is needed.
- Work from top to bottom to allow gravity to assist in washing away dirt.
- For foam application, attach the foam dispenser and fill it with appropriate cleaning solution.



## AUTO-STOP SAFETY

**Figure 4.3:** Cordless Freedom. This image highlights the convenience of using the pressure washer without being restricted by power cords or outlets, ideal for garden cleaning.

## 5. MAINTENANCE AND STORAGE

Proper maintenance ensures the longevity and optimal performance of your pressure washer.

### 5.1 Cleaning the Unit

- After each use, disconnect the battery and water source.
- Run clean water through the pressure washer for a few minutes to flush out any detergent or debris.
- Wipe down the exterior of the unit with a damp cloth. Do not use harsh chemicals.
- Clean the water inlet filter regularly to prevent blockages.

### 5.2 Storage

- Store the pressure washer in a dry, frost-free environment.
- Remove the battery pack before storing for extended periods.

- Ensure all water is drained from the unit and hoses to prevent freezing damage.

## 6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No water flow or low pressure	Water inlet filter clogged Insufficient water supply Air in the pump Nozzle clogged	Clean the water inlet filter. Ensure water source is adequate and hose is fully submerged. Run the unit without the nozzle until a steady stream of water emerges. Clean or replace the nozzle.
Unit does not start	Battery not charged Battery not properly installed Battery faulty	Charge the battery fully. Ensure battery is securely clicked into place. Test with another battery if available, or contact support.
Water leaks	Loose connections Damaged O-rings or seals	Tighten all hose and nozzle connections. Inspect and replace any damaged O-rings or seals.

## 7. TECHNICAL SPECIFICATIONS

Specification	Value
Model Number	CPWLI20362
Brand	Ingco
Power Source	Battery Powered
Item Weight	1.93 Kilograms
Hose Length	6 Metres
Product Dimensions (L x W x H)	23L x 17W x 30H Centimeters
Maximum Flow Rate	2.8 Liters Per Minute
Casing Material	High-strength nylon PA6-GF30

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Ingco website. Keep your proof of purchase for any warranty claims.

**Manufacturer:** INGCO

**Contact:** Please refer to the official Ingco website or your retailer for customer service contact details.

© 2026 Ingco. All rights reserved.