



Manuals.plus /

› ALSO GO /

› ALSO GO 21V Electric Weed Eater User Manual

## ALSO GO HG0192

# ALSO GO 21V Electric Weed Eater User Manual

Model: HG0192 | Brand: ALSO GO

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your ALSO GO 21V Electric Weed Eater. Please read this manual thoroughly before using the product and retain it for future reference.

## SAFETY INFORMATION

---

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Failure to follow these instructions may result in serious injury or property damage.

- **Read All Instructions:** Familiarize yourself with the controls and proper use of the tool.
- **Wear Eye Protection:** Always wear safety glasses or goggles when operating the weed eater.
- **Wear Appropriate Clothing:** Long pants, sturdy footwear, and gloves are recommended. Avoid loose clothing that could get caught in moving parts.
- **Keep Area Clear:** Ensure no bystanders, children, or pets are within the operating area.
- **Inspect Before Use:** Check for damaged parts, loose fasteners, or any other condition that may affect safe operation.
- **Remove Battery When Not In Use:** Always remove the battery pack when making adjustments, changing accessories, or storing the tool.
- **Avoid Wet Conditions:** Do not operate the weed eater in rain or damp conditions.
- **Use Correct Blades:** Only use blades specified for this product.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package. If any items are missing or damaged, contact customer support.



**Image Description:** A complete set of the ALSO GO 21V Electric Weed Eater components, including the main unit with wheels, two 21V batteries, a charger, various blades (nylon, saw disc, metal), protective cover, anti-collision bar, wrench, and safety gloves.

- ALSO GO 21V Electric Weed Eater Main Unit
- 2 x 21V 2000mAh Lithium Batteries
- Battery Charger
- 5 x Nylon Blades (for weeds)
- 2 x Round Saw Blades (for thick grass)
- 2 x Metal Blades (for shrubs)
- Protective Cover
- Anti-collision Bar
- Stabilizer Wheel Attachment
- Wrench
- Safety Gloves
- Instruction Manual

## PRODUCT OVERVIEW AND COMPONENTS

Understand the different parts of your weed eater for proper assembly and operation.



**Image Description:** A detailed diagram illustrating the main components of the weed eater, including the Work Button, Black Handle, 21V 2000mAh Lithium Battery, Stainless Steel Telescopic Tube, Adjust Telescoping Knob, Motor, Protective Cover, and Saw Blade Work Head.

- **Work Button:** Activates the motor.
- **Black Handle:** Ergonomic grip for control.
- **21V 2000mAh Lithium Battery:** Provides power to the unit.
- **Stainless Steel Telescopic Tube:** Allows for adjustable length.
- **Adjust Telescoping Knob:** Used to lock the telescopic tube at the desired length.
- **Motor:** Drives the cutting head.
- **Protective Cover:** Shields the user from debris.
- **Saw Blade Work Head:** The attachment point for various blades.

# 3-IN-ONE BLADES FOR VARIOUS CHALLENGES



PLASTIC BLADES



SAW DISC



METAL BLADES

**Image Description:** An illustration showing the three types of blades included: plastic blades for light weeds, a saw disc for thicker branches, and metal blades for dense grass and shrubs.

The weed eater comes with a 3-in-1 blade system for various cutting needs:

- **Plastic Blades:** Ideal for light grass and weeds.
- **Saw Disc:** Suitable for thicker brush and small branches.
- **Metal Blades:** Best for dense grass and tougher weeds.

## SETUP AND ASSEMBLY

Follow these steps to assemble your ALSO GO Electric Weed Eater.

# HOW TO INSTALL OUR WEED WACKER



**Image Description:** An 8-step visual guide demonstrating the assembly process of the weed wacker, from removing the nut and shim to installing blades and adjusting the machine head.

- Step 1: Remove Nut and Shim.** Use the provided wrench to remove the nut and shim counterclockwise from the work head.
- Step 2: Remove the Lid.** Carefully remove the lid covering the blade attachment area.
- Step 3: Install Protection Cover.** Install the protection cover and rotate it to the correct position, ensuring it is securely fastened.
- Step 4: Install Anti-Collision Bar.** Attach the anti-collision bar to the designated slots on the protective cover.
- Step 5: Install the Lid.** Reinstall the lid, ensuring it clicks into place.
- Step 6: Install Blade and Shim.** Place the desired blade onto the work head, followed by the shim.
- Step 7: Tighten Nut.** Install the nut and use the wrench to tighten it clockwise until secure.
- Step 8: Adjust Machine Head.** Adjust the machine head to your preferred working angle and height. Ensure all connections are tight before starting operation.

# EFFICIENT WORK

*With 21V 2000 mAh high capacity rechargeable lithium battery for 18000RPM rotation speed.*



21V 2000 mAh

**Image Description:** Two 21V 2000mAh lithium batteries, highlighting their capacity for efficient operation.

- Insert the battery into the charger.
- Plug the charger into a standard electrical outlet.
- The indicator light on the charger will show the charging status (typically red for charging, green for fully charged).
- Allow approximately 1 hour for each battery to fully charge.
- Do not overcharge batteries. Remove them once fully charged.

## OPERATING INSTRUCTIONS

---

Follow these guidelines for safe and effective operation of your weed eater.

### Before Starting

- Ensure the battery is fully charged and securely inserted into the tool.

- Select the appropriate blade for the task (nylon for light grass, metal for dense grass, saw disc for brush).
- Adjust the telescopic pole length and handle angle for comfortable operation.
- Clear the work area of any obstacles, rocks, or debris that could be thrown by the blade.

## Starting and Stopping

- To start: Press the safety lock button (if present) and then squeeze the work button.
- To stop: Release the work button. The blade will stop rotating.

## Trimming Techniques



**Image Description:** A woman demonstrating the ergonomic use of the cordless weed eater, highlighting its lightweight design and ease of maneuverability for comfortable operation.

- **Sweeping Motion:** Use a side-to-side sweeping motion to cut grass and weeds.
- **Edging:** For precise edging, tilt the head of the trimmer to a vertical position and guide the wheels along the edge of your lawn or pathway.
- **Under Bushes/Fences:** The adjustable telescopic pole allows you to reach difficult areas without excessive

bending.

- **Stabilizer Wheel:** Utilize the stabilizer wheel for consistent cutting height and reduced fatigue, especially on even surfaces or for edging.



**Image Description:** A woman using the weed eater to trim hedges, demonstrating its versatility for various garden tasks beyond just grass trimming.

## MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your weed eater.

- **Cleaning:** After each use, remove the battery and clean the tool with a damp cloth. Remove any grass, dirt, or debris from the protective cover and blade area.
- **Blade Inspection:** Regularly inspect blades for wear, damage, or dullness. Replace worn or damaged blades immediately.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for extended periods.
- **Storage:** Store the weed eater in a dry, secure location out of reach of children.

## TROUBLESHOOTING

---

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Weed eater does not start.	Battery not charged or improperly inserted. Safety lock not engaged.	Ensure battery is fully charged and correctly inserted. Press safety lock before squeezing trigger.
Reduced cutting performance.	Dull or damaged blade. Excessive grass buildup.	Replace blade. Clean cutting head and protective cover.
Excessive vibration.	Blade improperly installed or damaged. Loose components.	Check blade installation and tighten securely. Inspect for loose parts. Replace damaged blade.
Battery runtime is short.	Battery not fully charged. Old or worn battery.	Ensure battery is fully charged before use. Consider replacing old batteries.

## SPECIFICATIONS

---

Technical details of the ALSO GO 21V Electric Weed Eater.

## PRODUCT SIZE



**Image Description:** A diagram showing the product dimensions, including a 129cm (approx. 50.8 inches) overall length when extended and 93cm (approx. 36.6 inches) when retracted, with a 36cm (approx. 14.2 inches) handle length and a 15.24cm (6 inches) cutting width.

- **Model Number:** HG0192
- **Power Source:** Battery Powered
- **Battery Type:** 21V 2000mAh Lithium Ion (2 included)
- **Cutting Width:** 6 Inches (15.24 cm)
- **Product Dimensions (Extended):** Approximately 56"L x 6"W (142cm L x 15.24cm W)
- **Item Weight:** 0.38 Kilograms (approx. 13.4 ounces)
- **Assembly Required:** Yes
- **Style:** High-Tech
- **Recommended Uses:** Edging, Trimming

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official ALSO GO website. Keep your proof of purchase for warranty claims.

**Manufacturer:** ALSO GO

**ASIN:** B0DZ2C53RT