

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DOSS](#) /
- › [DOSS Extreme Boom Pro D200 User Manual](#)

DOSS Extreme Boom Pro D200

DOSS Extreme Boom Pro D200 User Manual

Model: Extreme Boom Pro D200 | Brand: DOSS

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your DOSS Extreme Boom Pro D200 speaker. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Figure 1: DOSS Extreme Boom Pro D200 Speaker (Black model)

WHAT'S IN THE BOX

- 1 x Extreme Boom Pro D200 Speaker

- 1 × USB-C Charging Cable
- 1 × User Manual
- 1 × Strap

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge the speaker using the provided USB-C charging cable. Connect the USB-C end to the speaker's charging port and the other end to a compatible USB power adapter (not included).

Strap-On Sound

With its convenient handle and adjustable strap, this portable speaker is designed to be your go-to sound companion, wherever you roam.



Figure 2: Charging the DOSS Extreme Boom Pro D200 speaker. The speaker also functions as an emergency power bank.

The speaker features a 10,400 mAh battery, providing up to 26 hours of playtime at 50% volume with Extra Bass and lights off. Actual battery life may vary based on volume, music content, and usage.

2. Bluetooth Pairing

To connect your device via Bluetooth 5.4:

1. Power on the DOSS Extreme Boom Pro D200 speaker. The Bluetooth indicator will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for "Extreme Boom Pro D200" in the list of available devices.
3. Select "Extreme Boom Pro D200" to connect. Once connected, the Bluetooth indicator will remain solid.

Your browser does not support the video tag.

Video 1: Demonstrates Bluetooth pairing for the DOSS Extreme Boom Pro D200 speaker. The speaker is powered on, and a mobile device is used to select and connect to the speaker via Bluetooth settings.

The speaker supports Bluetooth 5.4 for a fast and stable connection up to 82 feet away.

3. Other Connectivity Options

In addition to Bluetooth, the speaker supports music playback via:

- **3.5mm Aux-in:** Connect an audio device using a 3.5mm AUX cable (not included).

- **TF Card:** Insert a TF card (not provided) with your music files.

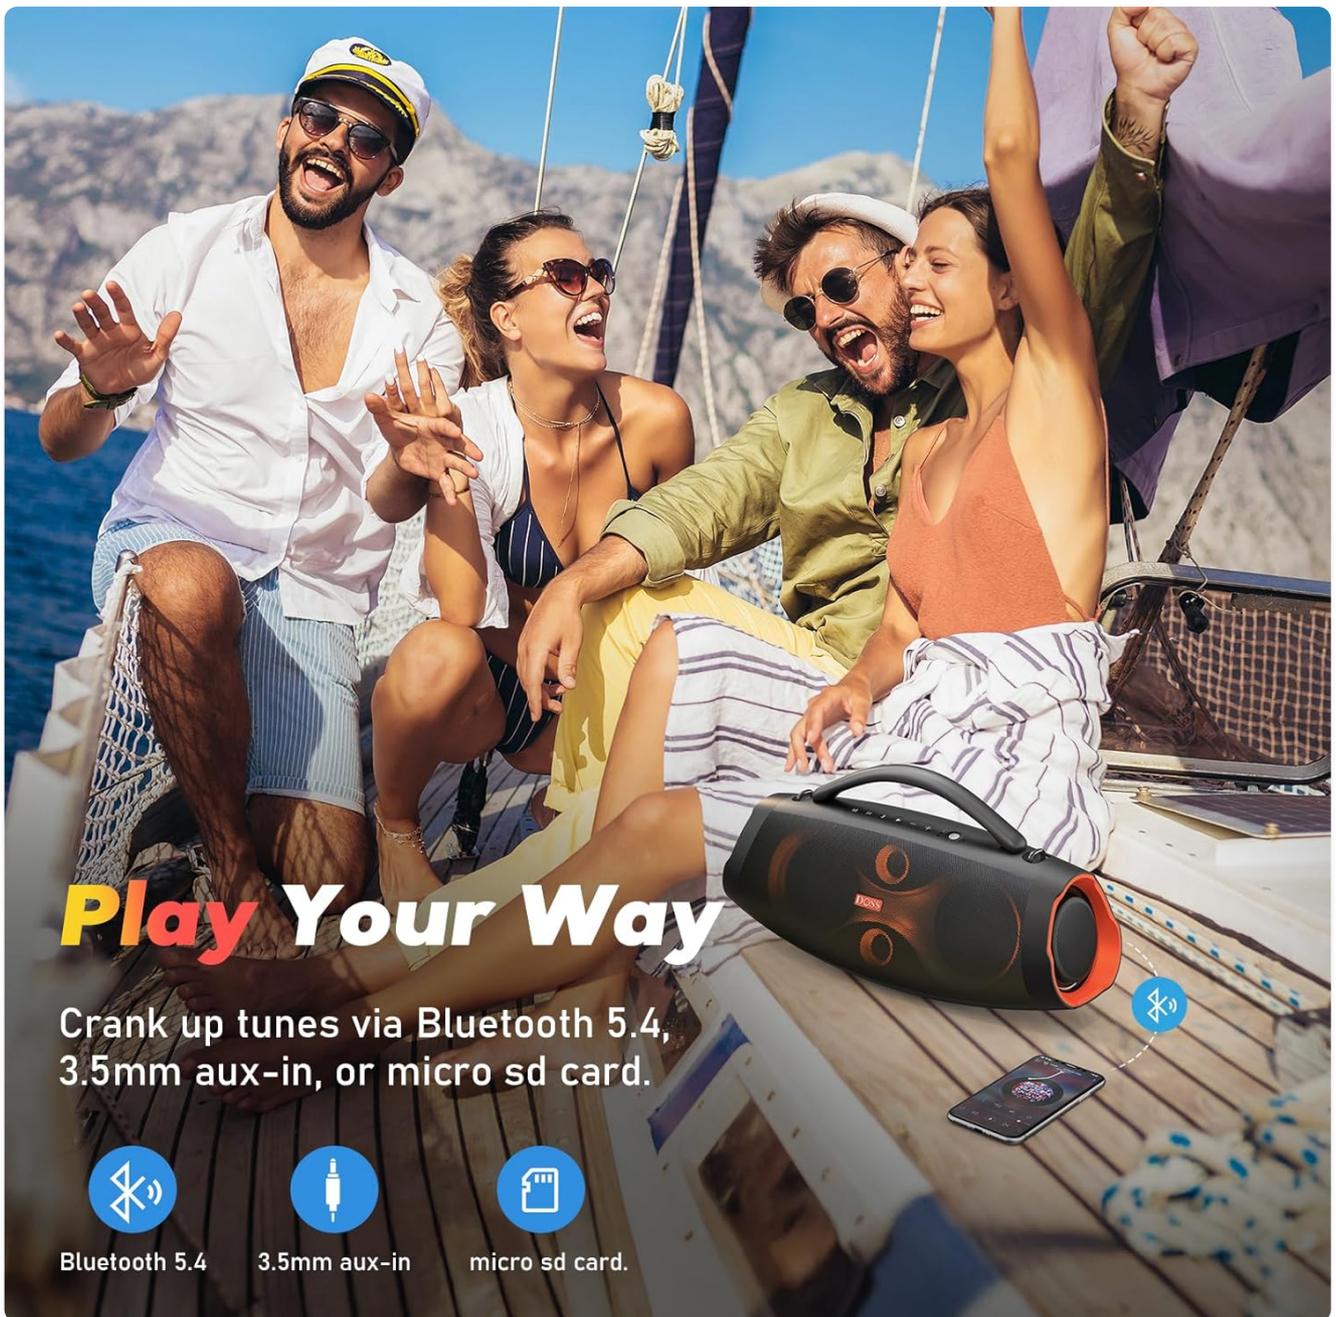


Figure 3: The speaker offers multiple connectivity options including Bluetooth 5.4, 3.5mm Aux-in, and TF card support.

OPERATING THE SPEAKER

1. Controls Overview

The speaker features intuitive controls located on the top panel:

Button/Feature	Function
Power Button	Press and hold to power on/off.
Mode (M) Button	Press to switch between Bluetooth, Aux-in, and TF card modes. Press and hold for 3 seconds to activate Extra Bass.

Button/Feature	Function
Light Button	Press to cycle through six vibrant lighting modes. Press and hold for 3 seconds to turn lights on/off.
Play/Pause Button	Play or pause audio playback.
Volume - / + Buttons	Press to adjust volume.

2. Sound Features

The DOSS Extreme Boom Pro D200 delivers powerful and immersive audio:

- **120W Room-Shaking Sound (240W Peak):** Equipped with dual 40W full-range drivers, twin 20W tweeters, dual passive radiators, and DSP technology, it produces rich mids, punchy lows, and sparkling highs with minimal distortion.
- **Extra Bass Technology:** Press and hold the Mode button for 3 seconds to activate Extra Bass, enhancing low frequencies for a thunderous musical experience. Dual passive radiators optimize airflow for stronger resonant bass.
- **Beat-Synced Light Show:** Immerse yourself in an exciting light show that enhances your mood and elevates your listening experience as you groove to the beat. Choose from six vibrant lighting modes that perfectly match your vibe and your favorite tunes. To turn the light modes on or off, simply press and hold the Light button for 3 seconds.

240W Peak 120W Thunderous Output

Fill any space with powerful bass and crystal-clear treble.



Figure 4: Internal components highlighting the 120W Thunderous Output (240W Peak) with full-range drivers, tweeters, DSP technology, and bass passive radiators.



Figure 5: Visual representation of the Extra Bass Technology, designed to deliver deep, heart-thumping bass.

Your browser does not support the video tag.

Video 2: Demonstrates the Beat-Synced Light Show feature of the DOSS Extreme Boom Pro D200 speaker, showcasing various vibrant lighting modes that synchronize with the music.

3. PartySync Mode

Wirelessly link two or up to 100 D200 speakers with PartySync Mode to generate booming 360° surround sound. This feature is ideal for expanding audio coverage in large outdoor spaces.

Your browser does not support the video tag.

Video 3: Shows how to activate PartySync Mode to connect multiple DOSS Extreme Boom Pro D200 speakers for synchronized audio and light effects.

IPX6 Waterproof Rating

The DOSS Extreme Boom Pro D200 is engineered with an IPX6 waterproof rating, meaning it can withstand powerful water jets and sudden downpours. It is suitable for use at pool parties, beach outings, and outdoor adventures.



Figure 6: The speaker is shown being splashed with water, demonstrating its IPX6 waterproof capability.

Important: While IPX6 rated, this speaker is not designed for submersion. After exposure to water, ensure the charging port cover is securely closed and allow the speaker to air dry completely before charging or using in dry conditions.

TROUBLESHOOTING

If you encounter any issues with your DOSS Extreme Boom Pro D200, please refer to the following common troubleshooting tips:

- **No Power:** Ensure the speaker is fully charged. Press and hold the power button for a few seconds to turn it on.
- **Cannot Pair Bluetooth:** Make sure the speaker is in pairing mode (flashing Bluetooth indicator). Check that Bluetooth is enabled on your device and that "Extreme Boom Pro D200" is selected. Try unpairing and re-pairing.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, Aux, TF card) is selected.
- **Sound Distortion:** Reduce the volume on both the speaker and your device. Ensure the audio source is not distorted.
- **Auto-Power Off:** The speaker may have an auto-power off feature to save battery. Refer to Video 1 (0:26-0:32) for instructions on how to remove or activate this feature.
- **Restore Factory Settings:** If issues persist, you may need to restore the speaker to its factory settings. Refer to Video 1 (0:16-0:25) for detailed instructions.

For further assistance, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	Extreme Boom Pro D200
Product Dimensions (L x W x H)	12.13 x 5.39 x 5.43 inches
Item Weight	9.33 pounds
Speaker Type	120 Watt Outdoor Bluetooth Speaker with loud bass
Connectivity Technology	Bluetooth 5.4, 3.5mm Aux-in, TF card
Color	Black
Batteries	1 D battery required (included)
Manufacturer	Wonders Tech
Country of Origin	China

Your browser does not support the video tag.

Video 4: Illustrates the dimensions of the DOSS Extreme Boom Pro D200 speaker.

WARRANTY AND SUPPORT

Your DOSS Extreme Boom Pro D200 speaker is backed by a **12-month warranty** from the date of purchase, covering any quality-related concerns.

For any issues or assistance, please feel free to contact us:

Phone: 1-833-275-3677

Email: support@dossav.com

We are committed to providing you with 24-hour prompt assistance and support.



Figure 7: Customer support details for DOSS products, including phone and email for assistance.

© 2025 DOSS. All rights reserved.

Related Documents - Extreme Boom Pro D200

	<p>DOSS Extreme Boom Portable Waterproof Speaker User Manual</p> <p>User manual for the DOSS Extreme Boom Portable Waterproof Speaker, covering packing contents, specifications, operation, LED indicators, connections, Bluetooth mode, TWS mode, Echo Dot integration, and safety instructions.</p>
	<p>Beat Boom Quick Start Guide: Portable Bluetooth Speaker Features and Setup</p> <p>Get started quickly with the Beat Boom portable Bluetooth speaker. This guide covers setup, pairing, features like EX-BASS and TWS mode, light effects, battery status, and FCC compliance.</p>



[DOSS Extreme Boom Pro D200 Portable Outdoor Speaker User Manual](#)

Quick start guide and user manual for the DOSS Extreme Boom Pro D200 portable outdoor speaker, covering specifications, features, operation, and safety information.



[ERKEI SEHN Beat Boom Wireless Speaker Quick Start Guide](#)

Quick start guide for the ERKEI SEHN Beat Boom portable wireless speaker, detailing product specifications, operation, pairing, special features like TWS and EQ lights, battery status, and FCC compliance.

	<p>DOSS SoundBox Pro Wireless Bluetooth Speaker Quick Start Guide</p> <p>A comprehensive guide to setting up and using the DOSS SoundBox Pro stereo wireless Bluetooth speaker, covering features, pairing, music playback, and troubleshooting.</p>
	<p>DOSS Extreme Boom Pro Wireless Portable Waterproof Speaker - Quick Start Guide</p> <p>This document provides a quick start guide for the DOSS Extreme Boom Pro wireless portable waterproof speaker. It covers specifications, important notes, button controls, LED indicators, connections, Bluetooth mode, TWS mode, PartySync mode, and usage with Echo Dot. Includes safety instructions and regulatory information.</p>