

## Tristar KD-7310

# Tristar KD-7310 Ice Crusher Instruction Manual

Model: KD-7310

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use can lead to injury or damage to the appliance.

- Always ensure the voltage on the rating label corresponds to your mains voltage.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils out of the ice reservoir during operation to prevent injury.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the appliance on a stable, flat, heat-resistant surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Only use accessories recommended by the manufacturer.
- Ensure the lid is securely locked before operating the machine.

## 2. PRODUCT OVERVIEW

---

The Tristar KD-7310 Ice Crusher is designed to quickly and easily prepare crushed ice for various beverages. It features a 600 ml ice reservoir and a 1.1 L pitcher, allowing for efficient preparation of slushies, cocktails, and other refreshing drinks. The machine offers two crushed ice settings for different consistencies.



Figure 2.1: The Tristar KD-7310 Ice Crusher preparing a red slushie, enjoyed by a family outdoors.

### Key Features:

- **Dual Crushing Settings:** Choose between fine or medium crushed ice.
- **High Performance:** Crushes up to 250 grams of ice per minute.
- **Generous Capacity:** Features a 600 ml ice compartment and a 1.1 L serving pitcher.
- **Safety Lock Lid:** Transparent, removable lid with a safety locking mechanism for secure operation.
- **Efficient Motor:** 30 W motor provides effective crushing with low energy consumption.



Figure 2.2: The Tristar KD-7310 can be used to prepare various drinks including slushies, smoothies, cocktails, and iced coffees.

### 3. SETUP AND ASSEMBLY

Before first use, ensure all packaging materials are removed. Wash the removable parts (pitcher, lid) in warm soapy water, rinse thoroughly, and dry. Wipe the main unit with a damp cloth.

1. Place the main unit on a clean, stable, and dry surface.
2. Ensure the pitcher is correctly seated in its designated position on the base.
3. Open the transparent lid of the ice reservoir.
4. Add ice cubes to the ice reservoir. Do not overfill; the maximum capacity is 600 ml. Ensure ice cubes are not excessively large to prevent jamming.
5. Close the transparent lid securely until it locks into place. The safety lock prevents operation if the lid is not properly closed.

# CHOISISSEZ LA TAILLE DE VOTRE GLACE PILÉE GRÂCE AUX 2 RÉGLAGES



Figure 3.1: Illustration of adding ice cubes to the 600 ml ice reservoir and the transparent safety-lock lid.

## 4. OPERATING INSTRUCTIONS

Once the appliance is set up and ice is loaded, you can begin crushing ice.

1. Ensure the appliance is plugged into a suitable power outlet.
2. Select your desired crushed ice size using the control knob on the front of the unit.
  - **Fine Crush:** For smooth slushies and delicate drinks.
  - **Medium Crush:** For cocktails and beverages requiring a coarser ice texture.
3. Press the power button or turn the knob to the "ON" position to start the crushing process. The machine will begin to crush the ice into the 1.1 L pitcher.
4. Once the desired amount of crushed ice is achieved, turn the knob to the "OFF" position or release the button.
5. Remove the pitcher and add your preferred syrup or beverage to create your drink.

# POSSIBILITÉS MULTIPLES



Granités



Smoothies



Cocktails



Cafés frappés



Figure 4.1: The control knob allows selection between medium and fine crushed ice textures.

## 5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your ice crusher.

1. Always unplug the appliance from the power outlet before cleaning.
2. Remove the pitcher and the transparent lid.
3. Wash the pitcher and lid in warm, soapy water. Rinse thoroughly and dry completely before reassembling or storing. These parts are generally not dishwasher safe unless specified otherwise in a full manual.
4. Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
5. Never immerse the main unit in water or any other liquid.
6. Ensure all parts are completely dry before storing the appliance.

## 6. TROUBLESHOOTING

If you encounter issues with your Tristar KD-7310 Ice Crusher, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, lid not securely closed, power outage.	Check power connection. Ensure the transparent lid is fully locked. Check household circuit breaker.
Ice is not crushing or machine jams.	Ice cubes are too large, too much ice in reservoir, foreign object.	Use smaller ice cubes. Do not overfill the ice reservoir (max 600 ml). Unplug and check for obstructions.
Crushed ice consistency is not as expected.	Incorrect setting selected.	Verify the control knob is set to the desired "Fine Crush" or "Medium Crush" position.
Excessive noise during operation.	Improper assembly of pitcher or lid, ice cubes shifting.	Ensure the pitcher and lid are correctly and securely placed. This appliance generates noise during ice crushing, which is normal.

## 7. SPECIFICATIONS

Technical details for the Tristar KD-7310 Ice Crusher:

- **Brand:** Tristar
- **Model Number:** KD-7310
- **Power:** 30 W
- **Ice Crushing Capacity:** 250 g per minute
- **Ice Reservoir Capacity:** 600 ml
- **Pitcher Capacity:** 1.1 Liters
- **Material:** Plastic
- **Item Weight:** 1.6 Kilograms
- **Approximate Dimensions (Product):** 21 cm (width) x 18 cm (depth) x 30 cm (height) - *As shown in product imagery.*
- **ASIN:** B0DZ2MHBBL



Figure 7.1: Product dimensions and power rating (30W) of the Tristar KD-7310 Ice Crusher.



Figure 7.2: The appliance features a 30W motor and crushes 250g of ice per minute.

## 8. WARRANTY AND SUPPORT

Tristar products are manufactured to high quality standards. In the unlikely event of a defect, please contact your retailer or the Tristar customer service for assistance. Keep your proof of purchase for warranty claims.

For further information or support, please refer to the official Tristar website or contact their customer service department. Spare parts availability information is currently unavailable.