

[manuals.plus](#) /

› [Bennett Read](#) /

› [Bennett Read Stainless Steel Digital Air Fryer User Manual](#)

Bennett Read Digital Air Fryer

Bennett Read Stainless Steel Digital Air Fryer User Manual

Model: Digital Air Fryer

1. INTRODUCTION

Welcome to the user manual for your new Bennett Read Stainless Steel Digital Air Fryer. This 10-liter capacity appliance is designed to provide a healthier way to cook your favorite meals with less oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Figure 1: Front view of the Bennett Read Stainless Steel Digital Air Fryer.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances to allow adequate air circulation.
- Do not block any ventilation openings.
- The appliance is for household use only.

3. SETUP AND FIRST USE

3.1 Unpacking

Carefully remove the air fryer and all its accessories from the packaging. Retain the packaging for future storage or transport. Check that all parts are present and undamaged.

3.2 Before First Use

1. Wipe the exterior of the air fryer with a damp cloth.
2. Remove the frying basket and tray. Wash them thoroughly with warm, soapy water. Rinse and dry completely.
3. Ensure the interior of the appliance is clean and dry before plugging it in.
4. Place the air fryer on a stable, level, heat-resistant surface, ensuring there is at least 10 cm of clear space around the back and sides for proper ventilation.



Figure 2: Top view of the air fryer with the basket removed, showing the interior.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The Bennett Read Digital Air Fryer features an easy-to-read digital touch LED display for intuitive control.



Figure 3: Close-up of the digital touch LED display and control panel.

- **Temperature Display:** Shows the current or set temperature.
- **Time Display:** Shows the remaining or set cooking time.
- **Pre-set Icons:** Various icons for common food items (e.g., fries, chicken, fish, steak, cake, vegetables) that automatically set optimal time and temperature.
- **DIY Button:** Allows for manual setting of temperature and time.
- **Temperature/Time Adjustment Buttons (+/-):** Used to increase or decrease temperature and time.

- **Shake Reminder:** An icon that may illuminate to remind you to shake the basket for even cooking.
- **Delay Timer:** Allows you to set a delayed start for cooking.
- **Power Button:** Turns the appliance on/off and starts/pauses cooking.

4.2 Basic Operation

1. Plug the air fryer into a grounded wall outlet. The display will illuminate briefly.
2. Pull out the frying basket. Place food evenly inside the basket, ensuring not to overfill. Do not exceed the MAX fill line.
3. Slide the frying basket back into the air fryer until it clicks into place.

4. Using Pre-set Functions:

- Press the Power button to turn on the display.
- Select the desired pre-set icon. The display will show the default time and temperature for that setting.
- You can adjust the time and temperature using the +/- buttons if needed.
- Press the Power button again to start cooking.

5. Manual Operation (DIY):

- Press the Power button to turn on the display.
- Press the "DIY" button.
- Use the Temperature/Time adjustment buttons (+/-) to set your desired temperature.
- Press the "TEMP/TIME" button to switch to time adjustment, then use the +/- buttons to set your desired cooking time.
- Press the Power button again to start cooking.

6. During cooking, you can pull out the basket to check or shake food. The air fryer will automatically pause and resume when the basket is reinserted.
7. When the cooking time is complete, the air fryer will beep and automatically shut off. Carefully remove the basket and transfer food to a serving dish.



Figure 4: The air fryer basket containing cooked food, demonstrating its capacity.

4.3 Cooking Tips

- For best results, preheat the air fryer for 3-5 minutes before adding food.

- Shake the basket halfway through cooking for items like fries or chicken wings to ensure even crispiness.
- Do not overcrowd the basket. Cook in smaller batches if necessary to ensure proper air circulation.
- Some foods may require a light spray of oil for optimal crispiness.
- Refer to a reliable air fryer recipe guide for specific cooking times and temperatures for various foods.



Figure 5: Visual representation of key features: Turn Reminder, Adjustable Temperature & Timer Controls, Added Features (Preheat, Reheat, Keep-Warm), and Healthy (Little-To-No-Oil Cooking).

5. CLEANING AND MAINTENANCE

Regular cleaning will help maintain the performance and longevity of your air fryer.

1. Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning the Basket and Tray:** The non-stick drawer and removable fry tray are dishwasher-safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reassembling.

3. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.
4. **Cleaning the Exterior:** Wipe the exterior with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
5. Ensure all parts are completely dry before storing the appliance.



Figure 6: The air fryer basket and tray are dishwasher-safe for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket overcrowded; food not shaken; incorrect temperature/time.	Cook in smaller batches. Shake the basket halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the basket and interior thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Appliance emits a burning smell.	Food residue; new appliance smell.	Ensure the appliance is clean. A slight smell is normal during the first few uses. If the smell persists or is strong, unplug and contact support.

7. PRODUCT SPECIFICATIONS

Brand: Bennett Read

Model Name: Digital Air Fryer

Capacity: 10 Liters

Material: Stainless Steel

Color: Black/Silver

Special Features: Temperature Control, Timer

Product Dimensions: 72.5D x 45.5W x 39.5H centimetres

Item Weight: 10.9 Kilograms

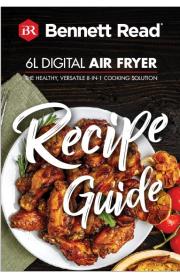
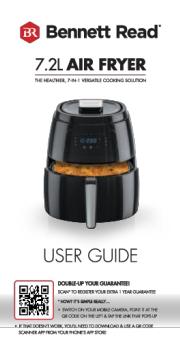
Recommended Uses: Bake

Manufacturer: Bennett Read

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Bennett Read website. If you require technical support or have questions not covered in this manual, please contact Bennett Read customer service.

Note: Specific contact details are not provided in this digital manual. Please refer to your product packaging or the manufacturer's official website for the most current support information.

	<p>Bennett Read Classiqu� 5-Piece Stainless Steel Cookware Set User Guide</p> <p>User guide for the Bennett Read Classiqu� 5-Piece Stainless Steel Cookware Set, detailing important usage tips, cautions, and the 25-year guarantee registration process.</p>
	<p>Bennett Read ONE 114 R Complete Home Cleaning System User Guide</p> <p>Comprehensive user guide for the Bennett Read ONE 114 R complete home cleaning system, covering setup, operation, cleaning, maintenance, and troubleshooting.</p>
	<p>Bennett Read 6L Digital Air Fryer Recipe Guide</p> <p>A comprehensive recipe guide for the Bennett Read 6L Digital Air Fryer, featuring a variety of dishes including sides, starters, main meals, and desserts.</p>
	<p>Bennett Read 7.2L Air Fryer User Guide</p> <p>Comprehensive user guide for the Bennett Read 7.2L Air Fryer, covering setup, operation, safety precautions, maintenance, troubleshooting, and warranty information. Learn how to use your 7-in-1 versatile cooking solution.</p>
	<p>Bennett Read 5.5L Digital Air Fryer User Guide - Healthy Cooking</p> <p>Comprehensive user guide for the Bennett Read 5.5L Digital Air Fryer, detailing setup, operation, safety precautions, cooking guide, cleaning, maintenance, troubleshooting, and guarantee information.</p>
	<p>Bennett Read 22L Air Fryer Oven User Guide - Features, Operation, and Care</p> <p>Comprehensive user guide for the Bennett Read 22L Air Fryer Oven. Learn about its features, accessories, safety precautions, cooking functions, cleaning, and guarantee.</p>

