

- Manuals.plus /
- > [Genérico](#) /
  - > Genérico CAPADELI Portable Coffee Maker User Manual

Genérico Portable Coffee Maker

# Genérico CAPADELI Portable Coffee Maker User Manual

Model: Portable Coffee Maker

## 1. INTRODUCTION

Thank you for purchasing the Genérico CAPADELI Portable Coffee Maker. This innovative 3-in-1 device is designed to provide a convenient and high-quality coffee experience, whether you prefer ground coffee or capsules. Its compact and portable design makes it ideal for home, office, or travel use. Please read this manual carefully before operating the device to ensure safe and efficient use.

## 2. PRODUCT OVERVIEW

The CAPADELI Portable Coffee Maker features a unique rocket-inspired design and offers versatile brewing options. It is equipped with a high-pressure extraction system to deliver rich espresso.



Figure 2.1: The CAPADELI Portable Coffee Maker shown with its full set of accessories, including various adapters, charging cable, cleaning brush, and travel bag.

# PRODUCT COMPONENTS DESCRIPTION :



Figure 2.2: Detailed diagram illustrating the various components of the coffee maker, including the upper cover, water tank, body, switch, indicator light, coffee powder adapter, portafilter, Nespresso capsule adapter, Dolce Gusto capsule adapter, bracket, coffee cup, and Type-C charging port.

## Key Features:

- **3-in-1 Compatibility:** Brews with Nespresso capsules, Dolce Gusto capsules, and ground coffee.
- **High-Pressure Extraction:** Provides stable 19 bar pressure for strong-flavored espresso.
- **Portable Design:** Compact and lightweight, ideal for travel and on-the-go use.
- **Hot and Cold Brewing:** Capable of preparing both hot and cold coffee.
- **Rechargeable Battery:** Built-in battery for wireless operation.

## 3. SETUP

### 3.1 Unpacking

Carefully remove all components from the packaging. Verify that all included accessories are present:

- CAPADELI Portable Coffee Maker unit
- Nespresso Capsule Adapter
- Dolce Gusto Capsule Adapter
- Coffee Powder Adapter (8g)
- Portafilter
- Bracket (stand)
- Reusable Coffee Cup
- USB Type-C Charging Cable
- Cleaning Brush
- Storage Bag
- Instruction Manual (this document)

## 3.2 Initial Charge

Before first use, fully charge the coffee maker. Connect the provided USB Type-C cable to the charging port on the device and plug the other end into a compatible USB power adapter (not included). The indicator lights will show charging status.

## 3.3 Assembly

Assemble the coffee maker according to your desired brewing method (capsule or ground coffee). Refer to Figure 2.2 for component identification and Figure 3.1 for installation steps.

# HOT AND COLD ALL IN ONE COFFEE MAKER

Hot/cold water for all kinds of drinking



**ADD COLD WATER**

Press And Hold For 2 Seconds To Start



**When adding cold water**

Press and hold for 2 seconds to enter the water boiling mode, and the coffee will be extracted automatically after boiling.



**ADD HOT WATER**

Double Click To Start



**When adding hot water**

Double-click to extract coffee directly.

Figure 3.1: Step-by-step installation guide for using Dolce Gusto capsules, Nespresso capsules, and ground coffee with the portable coffee maker.

1. **For Dolce Gusto Capsules:** Insert the Dolce Gusto capsule into the Dolce Gusto adapter. Attach the adapter to the portafilter.
2. **For Nespresso Capsules:** Insert the Nespresso capsule into the Nespresso adapter. Attach the adapter to the portafilter.
3. **For Ground Coffee:** Fill the Coffee Powder Adapter with your desired amount of ground coffee (up to 8g). Attach the adapter to the portafilter.
4. Screw the assembled portafilter (with chosen adapter/coffee) onto the bottom of the main coffee maker body.
5. Place the coffee maker onto the bracket (stand) if using for stability, and position the reusable coffee cup underneath the portafilter.

## 4. OPERATING INSTRUCTIONS

### 4.1 Adding Water

Unscrew the upper cover of the coffee maker to access the water tank. Fill the water tank with clean drinking water. Do not exceed the maximum fill line. Replace the upper cover securely.

## 4.2 Brewing Coffee (Hot or Cold)



### Impetus Espresso Coffee Maker



### Others

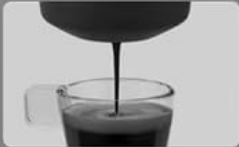
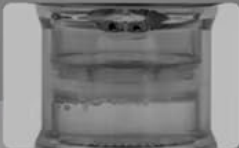
|                                                                                                                                   |                                                                                                                  |
|-----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
|                                                  |                                |
|  <p>Maximum 200 extractions without heating</p> |  <p>Extract 10 to 15 cups</p> |
|  <p>Heating about 4-8 minutes</p>              |  <p>Unheated</p>             |
|  <p>Hand-free</p>                              |  <p>Complicated</p>          |
|  <p>19 Bar Concentrated Extraction</p>         |  <p>Pressure point</p>       |

Figure 4.1: Illustration of the hot and cold brewing processes for the coffee maker.

1. Ensure the coffee maker is assembled with your chosen coffee type (capsule or ground coffee) and water is added.
2. Place your coffee cup under the portafilter.
3. **For Hot Coffee:** Double-click the power button to start the brewing process directly. The device will heat the water and extract the coffee.
4. **For Cold Coffee:** Add cold water to the tank. Press and hold the power button for 2 seconds to enter the water boiling mode. The device will automatically extract the coffee after boiling.
5. Once brewing is complete, the device will stop automatically. Enjoy your coffee.

## 5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee maker.

1. **After Each Use:**

- Unscrew the portafilter and remove the used capsule or ground coffee.
- Rinse the portafilter, adapters, and coffee cup with warm water.
- Use the provided cleaning brush to remove any coffee residue from the filter and internal components.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

2. **Deep Cleaning (Periodically):**

- For descaling, run a cycle with a mixture of water and a descaling solution (or white vinegar diluted with water) through the machine without coffee. Follow the descaling solution's instructions.
- After descaling, run 2-3 cycles with clean water to rinse thoroughly.

3. **Storage:** Ensure all parts are clean and dry before storing the coffee maker in its travel bag or a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the table below for common problems and solutions.

| Problem                        | Possible Cause                                                                     | Solution                                                                                              |
|--------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Coffee maker does not turn on. | Low battery or no charge.                                                          | Charge the device fully using the provided USB cable.                                                 |
| No coffee is dispensed.        | No water in tank; Clogged filter/adapter; Incorrect assembly.                      | Fill water tank; Clean filter/adapter; Reassemble correctly.                                          |
| Coffee tastes weak or watery.  | Insufficient coffee grounds/incorrect capsule; Too much water; Grounds too coarse. | Use correct amount of coffee/capsule; Use appropriate water level; Use finer grind for ground coffee. |
| Device leaks water.            | Components not screwed on tightly; Damaged seal.                                   | Ensure all parts are securely tightened; Inspect seals for damage and contact support if necessary.   |

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

| Feature                        | Specification                           |
|--------------------------------|-----------------------------------------|
| Brand                          | Genérico                                |
| Model Name                     | 3230524/YHFBM88 (Portable Coffee Maker) |
| Color                          | White                                   |
| Product Dimensions (D x W x H) | 3.27" x 3.27" x 96.46"                  |
| Coffee Maker Type              | Espresso Machine (Single-Serve)         |

| Feature           | Specification                                              |
|-------------------|------------------------------------------------------------|
| Material          | Stainless Steel                                            |
| Filter Type       | Reusable                                                   |
| Operation Mode    | Fully Automatic                                            |
| Coffee Input Type | Ground coffee and pods (Nespresso, Dolce Gusto compatible) |
| Manufacturer      | HX HECLX                                                   |
| Manufacture Year  | 2023                                                       |

## 8. WARRANTY AND SUPPORT

The Genérico CAPADELI Portable Coffee Maker is designed for durability and performance. For spare parts availability within the EU, a duration of 2 years is provided from the date of manufacture.

For technical support, warranty claims, or any questions not covered in this manual, please contact your retailer or the manufacturer directly. Please have your product model name and purchase information ready when contacting support.

© 2025 Genérico. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DZ3SGFZ8>

More documents and user manuals: <https://manuals.plus/>