

ECONTROLLY RC-799M

ECONTROLLY RC-799M Replacement Remote Control User Manual

For Onkyo AV Receivers: HT-RC430, TX-SR313, HT-R591, HT-S5400, and more.

1. INTRODUCTION

This manual provides essential instructions for the ECONTROLLY RC-799M replacement remote control. This remote is designed to function as a direct replacement for various Onkyo AV Receiver models, offering immediate usability without complex programming.

Please read this manual thoroughly before using the remote control to ensure proper operation and longevity of the device.

2. PRODUCT OVERVIEW

The ECONTROLLY RC-799M is an infrared remote control designed for seamless compatibility with specified Onkyo AV Receiver models. It features a standard layout for audio and video functions.





Figure 2.1: Front view of the ECONTROLLY RC-799M replacement remote control, showing all buttons and their labels.

Key Features:

- **No Programming Required:** Functions immediately with compatible Onkyo AV Receivers.

- **Infrared Technology:** Operates via infrared signal. Ensure a clear line of sight to the receiver.
- **Dedicated AV Functions:** Provides control over audio, video, input selection, and other receiver-specific features.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off in the direction of the arrow.
3. Insert two AA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 3.1: Angled view of the remote control, showing the general shape and button layout, relevant for locating the battery compartment on the reverse side.

Important: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or

rechargeable (nickel-cadmium) batteries. Remove batteries if the remote control will not be used for an extended period.

4. OPERATING INSTRUCTIONS

This remote control is pre-programmed and ready to use with compatible Onkyo AV Receivers. No additional setup or code entry is required.

4.1 Compatibility

The ECONTROLLY RC-799M is compatible with the following Onkyo AV Receiver models, among others:

- HT-RC430
- TX-SR313
- HT-R591
- HT-S5400
- HT-R590B
- HT-R558B
- HT-R558
- HT-R590
- HT-R391
- TX-SR309
- HT-S3500
- HT-R548
- HT-RC330
- HT-S5500

Note: This remote control is specifically designed for Onkyo AV Receiver functions and cannot be programmed to control a television directly.

4.2 Basic Operation

Point the remote control directly at the infrared sensor on your Onkyo AV Receiver. Ensure there are no obstructions between the remote and the receiver.



Figure 4.1: Illustration of a user operating a remote control towards an AV receiver setup, demonstrating proper line of sight.

Familiarize yourself with the button layout (refer to Figure 2.1) to control various functions such as:

- **Power (On/Standby):** Typically located at the top.
- **Input Selector:** Buttons like BD/DVD, VCR/DVR, CBL/SAT, GAME, AUX, USB, FM, AM, TV/CD to switch audio/video sources.
- **Volume Control:** '+' and '-' buttons for adjusting sound level.
- **Muting:** Temporarily silences audio output.
- **Navigation:** Arrow keys (Up, Down, Left, Right) and ENTER for menu navigation.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip for media playback.
- **Tone/Display:** Adjust audio tone or change display information.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Obstruction between remote and receiver. Remote out of range.	Replace batteries with fresh AA ALKALINE batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the receiver's IR sensor. Move closer to the receiver.
Specific functions not working	Remote is not compatible with the specific Onkyo model or function.	Verify your Onkyo AV Receiver model is listed in the compatibility section (Section 4.1). Ensure you are attempting to control an AV Receiver function, not a TV function.

6. SPECIFICATIONS

- **Model:** ECONTROLLY RC-799M
- **Compatibility:** Specific Onkyo AV Receiver models (e.g., HT-RC430, TX-SR313, HT-S5500)
- **Power Source:** 2 x AA ALKALINE Batteries (not included)
- **Control Type:** Infrared (IR)
- **Special Feature:** Pre-Programmed (no setup required)
- **Color:** Black
- **Product Dimensions:** 7.74 x 2.18 x 0.56 inches (approximately 19.66 x 5.54 x 1.42 cm)
- **Item Weight:** 1.76 ounces (approximately 50 grams)





Figure 6.1: Remote control with visual indication of its length (7.6 inches) and width (2.1 inches).

7. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when they are depleted to prevent leakage, which can damage the remote.

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ECONTROLLY RC-799M replacement remote

control, please contact the seller or manufacturer through your purchase platform. Please retain your proof of purchase for any warranty claims.