

ECONTROLLY AXD7666

ECONTROLLY AXD7666 Replacement Remote Control User Manual

For Pioneer AV Receivers

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AXD7666 replacement infrared remote control. This remote is designed to be compatible with various Pioneer AV Receiver models, offering a direct replacement for your original remote without requiring complex programming.

Key Features:

- Infrared (IR) technology
- No programming required
- Pre-programmed for compatible Pioneer AV Receivers

2. SETUP

2.1 Battery Installation

The AXD7666 remote control requires AAA ALKALINE batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Important: Do not use rechargeable batteries. Only use AAA ALKALINE batteries.

2.2 Initial Use

This remote control is pre-programmed and does not require any setup or code entry. Once batteries are installed, it is ready for use with compatible Pioneer AV Receivers.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Pioneer AV Receiver. Ensure there are no obstructions between the remote and the receiver's infrared sensor.

3.1 Compatible Pioneer AV Receiver Models

The AXD7666 remote control is compatible with the following Pioneer AV Receiver models:

- SC-1227
- SC-63
- SC-1222-K
- SC-1227-K
- SC-61
- SC-1222
- SC1227
- SC63
- SC1222K
- SC1227K
- SC61
- SC1222

3.2 Basic Functions

The remote control features standard buttons for controlling your AV receiver. Refer to the image below for a visual guide to the buttons.





Figure 1: Front view of the AXD7666 remote control, displaying all functional buttons.

- **Power (SOURCE/RECEIVER):** Turns the receiver on or off.
- **Input Selection (BD, DVD, DVR, HDMI, TV, USB, etc.):** Selects the desired input source.
- **Volume (+/-):** Adjusts the master volume level.
- **Mute:** Silences the audio output.
- **Navigation (Arrow buttons, ENTER):** Used to navigate menus and confirm selections.
- **Menu (TOP MENU, HOME MENU, TOOLS MENU):** Accesses various menu options on your receiver.
- **Audio/Video Parameter:** Adjusts specific audio and video settings.
- **Zone Control (ZONE 2, ZONE 3, ZONE 4):** Controls multi-zone audio output if supported by your receiver.



Figure 2: Angled view of the AXD7666 remote control, showing the button arrangement.



Figure 3: Alternative angled view of the AXD7666 remote control.



Figure 4: The AXD7666 remote control in use with a home entertainment system.

4. MAINTENANCE

4.1 Battery Replacement

If the remote control's performance degrades or it stops responding, replace the batteries with fresh AAA ALKALINE batteries. Follow the battery installation steps in Section 2.1.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA ALKALINE batteries.
- Ensure there are no obstructions between the remote control and the AV receiver's infrared sensor.
- Confirm that the remote is pointed directly at the receiver.

- **Limited range:**

- Ensure batteries are fresh.
- Reduce the distance between the remote and the receiver.
- Remove any potential sources of infrared interference (e.g., strong sunlight, certain types of lighting).

- **Specific buttons not working:**

- This remote is designed for specific Pioneer AV Receiver models. Verify your receiver model is listed in Section 3.1.
- Some advanced functions may not be supported if your receiver model does not have that specific feature.

6. SPECIFICATIONS

- **Model:** AXD7666
- **Type:** Infrared (IR) Remote Control
- **Power Source:** 2 x AAA ALKALINE batteries (not included)
- **Color:** Black
- **Product Dimensions:** 8.85 x 1.83 x 0.56 inches (approximately 22.5 x 4.6 x 1.4 cm)
- **Item Weight:** 1.76 ounces (approximately 50 grams)
- **Special Feature:** Pre-programmed, no setup required
- **Compatible Devices:** Pioneer AV Receivers (specific models listed in Section 3.1)



Figure 5: Dimensions of the AXD7666 remote control.

7. WARRANTY AND SUPPORT

Information regarding warranty coverage or specific customer support for this product is not available in this manual. Please refer to the product packaging or contact your retailer for details on warranty and

support services.