

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FADSKKJ](#) /

› [FADSKKJ 16L Portable Folding Washing Machine User Manual](#)

## FADSKKJ Fadsk

# FADSKKJ 16L Portable Folding Washing Machine User Manual

Model: Fadsk

## 1. INTRODUCTION

---

Thank you for choosing the FADSKKJ 16L Portable Folding Washing Machine. This compact and versatile appliance is designed for washing small loads of laundry, such as underwear, baby clothes, socks, and other delicates. Its foldable design makes it ideal for apartments, dorms, RVs, travel, and camping. Please read this manual thoroughly before operation to ensure safe and efficient use.

# Great for Small Items



5

baby clothes



8

underwear



15

socks



2

T-shirt



5

hand towels



2

workout clothes



Image: The FADSKKJ 16L Portable Folding Washing Machine, shown in its full, unfolded configuration.

## 2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the main body of the washing machine in water or other liquids.
- Ensure the power cord and plug are not damaged. If damaged, contact customer support.
- Keep children away from the appliance during operation.
- Do not wash items containing flammable substances.
- Unplug the appliance when not in use or before cleaning.
- Use only the provided power adapter.
- Do not overload the machine beyond its 16L capacity.
- Avoid placing the machine on unstable or uneven surfaces.

## 3. PACKAGE CONTENTS

Verify that all components are present upon unpacking:

- 1 x FADSKKJ Portable Folding Washing Machine
- 1 x Spin-dry Basket
- 1 x Power Adapter
- 1 x Drain Hose
- 1 x User Manual (this document)

## 4. PRODUCT FEATURES

---

- **Portable & Foldable Design:** Easily stores in small spaces, measuring 13.9x11.9x11.9 inches unfolded and 11.9x11.9x5.9 inches when folded.
- **16L Large Capacity:** Designed to handle more laundry per cycle compared to smaller mini washers.
- **3 Cleaning Modes:** Semi-automatic function with 3-minute (quick wash), 5-minute (standard wash), and 10-minute (deep wash) timer buttons.
- **Removable Spin-dry Basket:** Allows for partial water removal after washing.
- **Durable Construction:** Made from TPE and food-grade silicone material.
- **Efficient Cleaning:** Utilizes turbine cycle cleaning for effective garment agitation.
- **Low Noise Operation:** Engineered for quiet performance.
- **Easy Drainage:** Includes a drain hose for convenient water disposal.



Image: The washing machine displayed in both its expanded and compact, folded forms, highlighting its space-saving design.

# Spin Basket Included

Spin option to wring the clothes out



Image: The portable washing machine demonstrating its capacity for small items like baby clothes, underwear, socks, and hand towels.

## 5. SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Unfold:** Place the machine on a flat, stable surface. Gently pull the top rim upwards until the machine is fully extended and locked into place.
3. **Position:** Ensure the machine is placed near a water source and a drain. The bottom of the machine features 4 suction cups to prevent movement during operation.
4. **Connect Drain Hose:** Attach the provided drain hose to the drainage outlet at the bottom of the machine. Position the other end of the hose into a sink or drain.
5. **Power Connection:** Plug the power adapter into the machine and then into a suitable electrical outlet.

# Space-saving

Small, compact and easily stored



Image: The washing machine folded for compact storage, shown next to a sink, illustrating its minimal footprint.

## 6. OPERATING INSTRUCTIONS

Follow these steps for washing and spin-drying your laundry:

1. **Load Laundry:** Open the lid and place your small laundry items into the washer. Do not exceed the 16L capacity.
2. **Add Water:** Fill the washer with an appropriate amount of water, ensuring clothes are submerged but not overflowing. Use cold or warm water as suitable for your garments.
3. **Add Detergent:** Add a small amount of liquid or powder detergent. For best results, use detergent suitable for delicate or small loads.
4. **Select Wash Mode:** Close the lid. Press the power button to turn on the machine. Use the timer buttons (3-minute, 5-minute, or 10-minute) to select your desired wash cycle. The machine will start automatically.
5. **Rinse (Manual):** After the wash cycle completes, drain the soapy water using the drain hose. Refill the washer with clean water for rinsing. You may run a short 3-minute cycle to agitate the clothes in clean water, then drain again. Repeat if necessary.

6. **Spin-Dry:** After rinsing and draining, insert the removable spin-dry basket into the washer. Place the wet clothes into the basket. Close the lid and select the 3-minute spin cycle. This will help remove excess water. Note that this is a partial spin-dry and clothes will still be damp.
7. **Unload:** Once the spin cycle is complete, remove the clothes and hang them to air dry.



Image: The control panel with a single button for operation and indicators for 3, 5, and 10-minute cycles, simplifying use.

# Portable washing machine

- convenient ----- ✓
- save time ----- ✓
- save money ----- ✓
- delicates safe ----- ✓



## laundromat

- far away ----- ✗
- need to wait ----- ✗
- expensive ----- ✗
- not suitable for delicates ----- ✗

Image: The removable spin-dry basket, designed to be inserted into the washer for extracting excess water from clothes.

# Efficient Cleaning

Turbine cycle cleaning, just like a heavy washing machine



Image: The washing machine actively cleaning clothes with its turbine cycle, demonstrating efficient agitation.

## 7. MAINTENANCE

---

Regular cleaning and care will extend the life of your washing machine:

- **After Each Use:** Drain all water from the machine. Wipe the interior and exterior with a soft, damp cloth.
- **Detergent Residue:** If detergent residue builds up, wipe it away with a cloth dampened with warm water.
- **Storage:** Ensure the machine is completely dry before folding and storing it in a cool, dry place.
- **Do Not Use:** Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the machine's surfaces.

## 8. TROUBLESHOOTING

---

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not turn on.	No power, loose connection.	Check power plug and outlet. Ensure adapter is securely connected.
Washing action is weak or stops.	Overloaded, insufficient water.	Reduce laundry load. Add more water to cover clothes.
Spin-dry basket does not spin effectively.	Overloaded, uneven load, basket not properly seated.	Ensure clothes are evenly distributed and not exceeding capacity. Verify the spin basket is correctly installed. Note: This is a partial spin-dry, clothes will remain damp.
Water does not drain.	Drain hose kinked or blocked.	Check the drain hose for kinks or obstructions. Ensure it is positioned lower than the machine's drain outlet.
Unusual noise during operation.	Unstable surface, foreign object.	Ensure the machine is on a flat, stable surface. Check for any foreign objects inside the tub.

## 9. SPECIFICATIONS

---

- **Brand:** FADSKKJ
- **Model:** Fadsk
- **Capacity:** 16 Liters
- **Product Dimensions (Unfolded):** 13.9 x 11.9 x 11.9 inches (D x W x H)
- **Product Dimensions (Folded):** Approximately 11.9 x 11.9 x 5.9 inches (W x D x H)
- **Item Weight:** 4.54 pounds
- **Material:** Plastic (TPE and food-grade silicone)
- **Control Console:** Push Button
- **Access Location:** Top Load
- **Special Features:** 3 Cleaning Modes, Folding Design, Mini, Portable
- **Color:** Green

## 10. WARRANTY AND SUPPORT

---

FADSKKJ products are manufactured to high-quality standards. For warranty information or technical support, please refer to the purchase platform or contact the seller directly. Keep your proof of purchase for any warranty claims.

For further assistance, please contact our customer support team through the retailer where you purchased the product.

