

- Manuals.plus /
- › ECONTROLLY /
- › ECONTROLLY TV Remote Control User Manual for Android TV Boxes

ECONTROLLY B0DZ5V4S5K

ECONTROLLY TV Remote Control User Manual

For Android TV Box Models: X88 Pro 10, 13, 20, RK3318, RK3528, A95X F3, S905X3

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your ECONTROLLY TV Remote Control. This remote is designed as a replacement for specific Android TV Box models, ensuring seamless compatibility and functionality. Please read this manual thoroughly before operating the device.



Image 1: Front view of the ECONTROLLY TV Remote Control. This image shows the layout of the buttons, including the power button, navigation keys, number pad, and dedicated app buttons.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage to the remote control or connected devices, please observe the following safety guidelines:

- **Battery Type:** Use only AAA ALKALINE batteries. **Do not** use rechargeable batteries, as they may cause malfunction or damage.
- **Battery Installation:** Ensure batteries are inserted with correct polarity (+/-). Incorrect installation can lead to battery leakage or damage.
- **Battery Disposal:** Dispose of used batteries according to local regulations. Do not incinerate batteries.
- **Liquid Exposure:** Keep the remote control away from water and other liquids.
- **Temperature:** Avoid exposing the remote to extreme temperatures or direct sunlight.

- **Cleaning:** Clean the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA ALKALINE batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

3.2 Initial Use

This remote control is pre-programmed for compatibility with the listed Android TV Box models. No additional programming is typically required. Once batteries are installed, point the remote at your Android TV Box and begin operation.

4. OPERATING INSTRUCTIONS

The remote control features various buttons for navigating and controlling your Android TV Box. Ensure there is a clear line of sight between the remote's infrared emitter and the TV Box's IR receiver.



Image 2: A user operating the ECONTROLLY TV Remote Control in a home entertainment setting, demonstrating typical usage.

4.1 Button Functions

- **Power Button (⏻):** Turns the Android TV Box on or off.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and select items. The **OK** button confirms selections.
- **Volume Up/Down (+/-):** Adjusts the volume.
- **Mute (🔇):** Mutes or unmutes audio.
- **Back (⏮):** Returns to the previous screen or menu.
- **Home (🏠):** Returns to the main home screen of the Android TV Box.
- **Menu (☰):** Opens context-sensitive menus.
- **Number Pad (0-9):** For direct input of numbers, such as channel selection or password entry.
- **Dedicated App Buttons (e.g., YouTube, Netflix):** Provides quick access to specific applications.
- **Fn Button:** Function button, may activate secondary functions depending on the TV Box model.

4.2 Compatibility

This remote control is compatible with the following Android TV Box models:

- X88 Pro 10
- X88 Pro 13
- X88 Pro 20
- Android TV Box RK3318
- Android TV Box RK3528
- A95X F3
- S905X3

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control regularly with a soft, dry, lint-free cloth. Do not use liquid cleaners, sprays, or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Impact:** Avoid dropping the remote control or subjecting it to strong impacts.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote is not responding.	◦ Check if batteries are inserted correctly with correct polarity. ◦ Replace old batteries with new AAA ALKALINE batteries. ◦ Ensure there is a clear line of sight between the remote and the TV Box. ◦ Verify the remote is compatible with your specific Android TV Box model.
Buttons are not working correctly.	◦ Clean the remote control surface and buttons to remove any dirt or debris. ◦ Replace batteries.
Short operating range.	◦ Replace batteries. ◦ Ensure no obstructions are blocking the signal path. ◦ The maximum effective range is approximately 33 feet (10 meters).

7. SPECIFICATIONS





1.77 inch

6.1 inch



Image 3: Dimensions of the ECONTROLLY TV Remote Control, showing a length of 6.1 inches and a width of 1.77 inches.

Feature	Detail
Brand	ECONTROLLY
Model Name	ECONTROLLY TV Remote Control
Model Number (ASIN)	B0DZ5V4S5K
Compatible Devices	Android TV Box (X88 Pro 10, 13, 20, RK3318, RK3528, A95X F3, S905X3)
Connectivity Technology	Infrared (IR)
Special Feature	Pre-Programmed
Battery Type	2 x AAA Alkaline (not included)
Maximum Range	33 Feet (approx. 10 meters)
Item Dimensions (L x W x H)	6.15" x 1.79" x 0.56" (15.62 cm x 4.55 cm x 1.42 cm)
Color	Black
Button Quantity	12

8. WARRANTY INFORMATION

This ECONTROLLY TV Remote Control comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or improper battery usage. Please retain your proof of purchase for warranty claims.

9. SUPPORT

For further assistance or inquiries regarding your ECONTROLLY TV Remote Control, please contact the seller or refer to the product listing on the platform where it was purchased. Ensure you have your model number (B0DZ5V4S5K) ready when seeking support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DZ5V4S5K>

More documents and user manuals: <https://manuals.plus/>