

## ELIVED EV1117

# ELIVED Mobile TV Stand on Wheels EV1117 Instruction Manual

Model: EV1117

## 1. INTRODUCTION

Thank you for choosing the ELIVED Mobile TV Stand on Wheels, model EV1117. This stand is designed to provide a versatile and stable solution for displaying your television, offering height adjustment, tilt functionality, and mobility. It is compatible with most 26-65 inch flat and curved TVs, supporting a maximum load of 35kg (77lbs) and VESA patterns from 100x100mm to 400x400mm. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.

## 2. SAFETY GUIDELINES

**WARNING:** Failure to read and follow all instructions may result in personal injury or property damage.

- Do not exceed the maximum weight capacity of 35kg (77lbs).
- Ensure your TV's VESA pattern is within the supported range (100x100mm to 400x400mm).
- Always use the provided hardware. If any parts are missing or damaged, contact customer support.
- Do not install on sloped surfaces. The stand must be on a level surface.
- Ensure all screws are securely tightened before use. Do not overtighten.
- Keep children and pets away during assembly. Small parts can be a choking hazard.
- Always lock the wheels when the stand is in a stationary position to prevent accidental movement.
- Move the stand slowly and carefully, especially on uneven surfaces or with a TV mounted.
- Do not hang on the TV or the stand.

## 3. PACKAGE CONTENTS

Verify that all components are present and undamaged. If any parts are missing or defective, please contact ELIVED customer service.

- Base Assembly (X-shaped base with wheels)
- Vertical Support Poles (typically 2 or 3 sections for height adjustment)
- TV Mounting Plate
- TV Brackets (left and right)
- Adjustable Media Shelf
- Hardware Kit (various screws, washers, spacers for TV mounting and stand assembly)
- Assembly Tools (e.g., Allen wrench, spanner)
- Instruction Manual (this document)

## 4. ASSEMBLY INSTRUCTIONS

---

Follow the graphical guide provided with your product for detailed step-by-step assembly. The general steps are outlined below.

### 4.1. Assemble the Base

Attach the vertical support pole(s) to the X-shaped base. Ensure all screws are tightened securely. The base features 360° lockable casters for mobility and stability.

# Space Saving

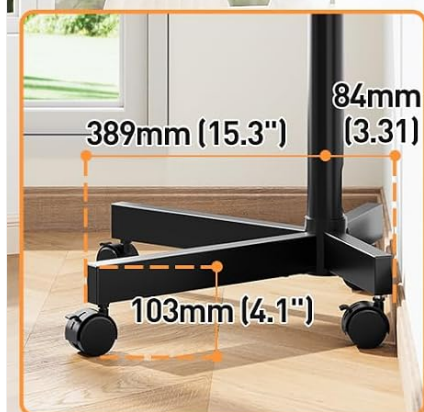


Image: The stable X-shaped base with 360° lockable casters, designed for space-saving placement.

## 4.2. Install TV Mounting Plate and Brackets

Attach the TV mounting plate to the top of the vertical support pole. Then, attach the TV brackets to the back of your television using the appropriate screws, washers, and spacers from the hardware kit. Ensure the brackets are centered and level.

# More Stable with Multiple Guarantees



Image: Close-up of the TV mounting mechanism, highlighting the thick TV hook, safety lock, and reinforced alloy steel pole for enhanced stability.

## 4.3. Mount the TV

Carefully lift your TV and hook the brackets onto the TV mounting plate. Secure the TV to the stand using the safety locks or screws as indicated in your graphical guide.

## 4.4. Attach the Media Shelf

The adjustable media shelf can be attached to the vertical pole at your desired height. This shelf is suitable for gaming consoles, DVD players, laptops, or streaming devices.

## 4.5. Cable Management

Utilize the integrated cable management system to route and conceal wires for a clean and organized appearance.

# Elegant Storage Solution



Image: The adjustable storage shelf and integrated cable management system, showing how wires can be neatly hidden.


## 5. OPERATING INSTRUCTIONS

### 5.1. Adjusting TV Height

The stand offers two TV plate height options by using either two or three vertical support poles during assembly. This allows for significant height adjustment to achieve optimal viewing.

# 2 TV Plate Height Options

## Using 3 Poles

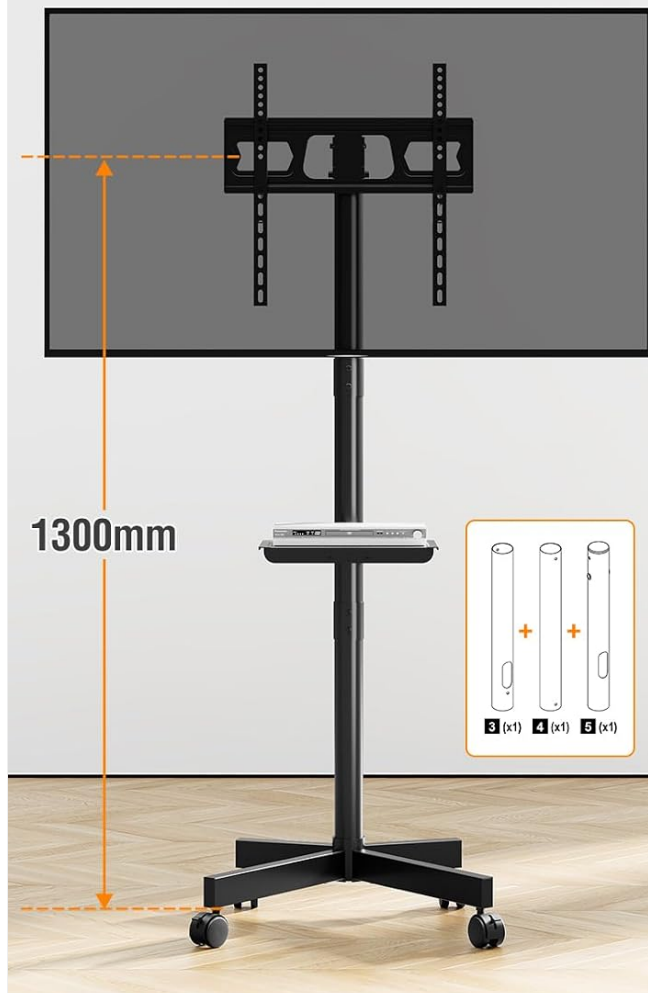

## Using 2 Poles

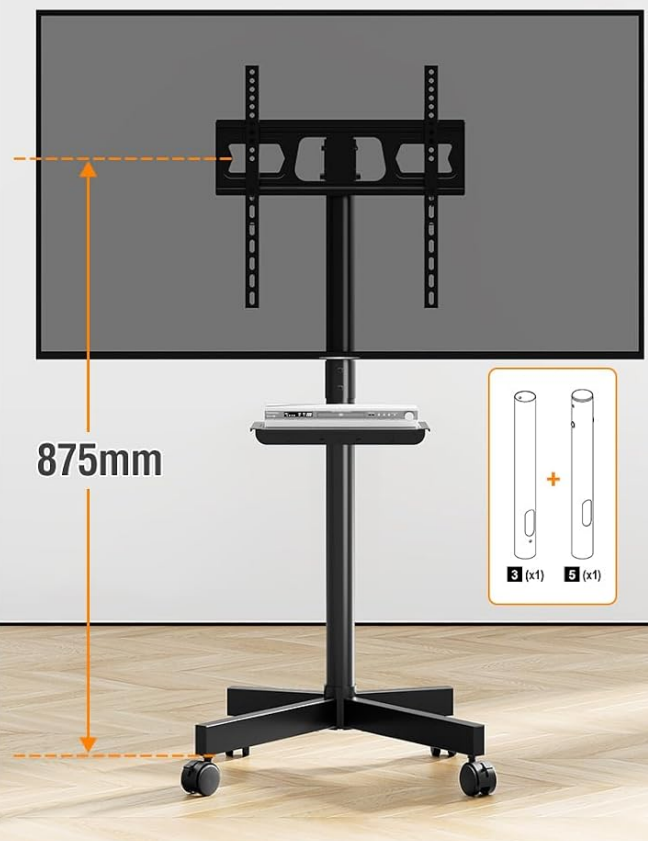


Image: Illustration of the two TV plate height options: 1300mm using three poles and 875mm using two poles, demonstrating the modular design.

For minor height adjustments, the TV plate itself may have adjustable slots. Refer to your graphical guide for specific instructions on fine-tuning the TV's vertical position.

### 5.2. Adjusting TV Tilt

The TV mounting plate allows for an ergonomic tilt function, ranging from +5° up to -10° down. This helps reduce glare and neck strain. Loosen the tilt adjustment knobs or bolts on the TV brackets, adjust the TV to the desired angle, and then securely tighten them.

# Tilt for a Better View



Image: The TV stand illustrating its tilt capability, allowing adjustment from +5 degrees upwards to -10 degrees downwards for optimal viewing angles.

## 5.3. Moving the TV Stand

To move the stand, unlock all four 360° casters. Gently push or pull the stand to its new location. Once positioned, lock all casters to ensure stability and prevent accidental movement.

# Smooth Rolling TV Cart



Image: The TV stand demonstrating smooth mobility on its 360° lockable casters, highlighting both the locked and unlocked states.

## 6. MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Periodic Checks:** Regularly check all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Caster Care:** Keep the casters free of debris to ensure smooth movement.

## 7. TROUBLESHOOTING

- **Stand feels wobbly:**
  - Ensure all assembly screws are fully tightened.
  - Verify the stand is on a level surface.
  - Check that the TV is securely mounted to the brackets and the brackets are properly attached to the stand.

- If using the middle extension pole, ensure it is correctly seated and secured. Some users reported better stability without it for smaller TVs.

- **Difficulty moving the stand:**

- Ensure all four casters are unlocked.
- Check for debris or obstructions around the caster wheels.
- On carpeted surfaces, movement may be more difficult. Push slowly and steadily.

- **TV leans to one side:**

- Verify that the TV mounting plate and brackets are level and securely fastened.
- Ensure the TV's weight is evenly distributed.
- Recheck the assembly of the vertical poles, ensuring they are straight and fully connected.

- **Missing parts or damaged components:**

- Refer to the "Package Contents" section and contact ELIVED customer support for assistance.

## 8. SPECIFICATIONS

|                              |                                                                                                                                                             |
|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Model Number</b>          | EV1117                                                                                                                                                      |
| <b>Compatible TV Sizes</b>   | 26 - 65 inches                                                                                                                                              |
| <b>Maximum Load Capacity</b> | 35 kg (77 lbs)                                                                                                                                              |
| <b>VESA Compatibility</b>    | 100x100mm to 400x400mm (e.g., 100x100, 100x150, 100x200, 200x100, 200x150, 200x200, 200x300, 200x400, 300x200, 300x250, 300x300, 400x200, 400x300, 400x400) |
| <b>Tilt Angle</b>            | +5° to -10°                                                                                                                                                 |
| <b>Height Adjustment</b>     | Two TV plate height options (e.g., 1300mm with 3 poles, 875mm with 2 poles)                                                                                 |
| <b>Material</b>              | Alloy Steel                                                                                                                                                 |
| <b>Color</b>                 | Black                                                                                                                                                       |
| <b>Mounting Type</b>         | Floor Mount                                                                                                                                                 |
| <b>Movement Type</b>         | Tilt, Rolling                                                                                                                                               |

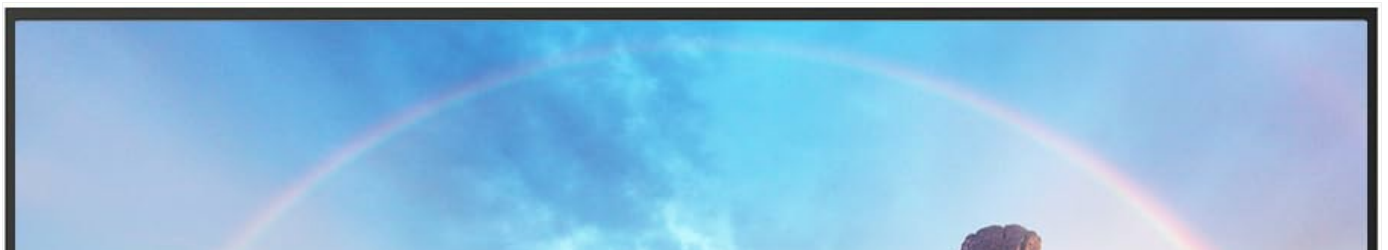 






Image: Detailed diagram of the ELIVED Mobile TV Cart, including overall dimensions, TV size compatibility (26"-65"), maximum load (35kg), and VESA compatibility (Max 400x400mm, Min 75x75mm).

## 9. WARRANTY AND CUSTOMER SUPPORT

ELIVED products are manufactured with quality and durability in mind. For specific warranty information regarding your EV1117 Mobile TV Stand, please refer to the warranty card included in your package or visit the official ELIVED website. If you encounter any issues during assembly, operation, or have questions about your product, please do not hesitate to contact our customer support team.

- **Customer Service:** Refer to your product packaging or the ELIVED official website for contact details.
- **Online Resources:** Visit the ELIVED brand store on Amazon for additional product information and FAQs: [ELIVED Store](#)

© 2026 ELIVED. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question