



Manuals.plus /

› Samoser /

› Samoser Dishwasher Lower Front Rack Roller Wheels Instruction Manual for GE Models VSD3104X04WW, VSD3204G00BB, and Compatible Series

Samoser VSD3204G00BB

Samoser Dishwasher Lower Front Rack Roller Wheels Instruction Manual

For GE Models VSD3104X04WW, VSD3204G00BB, and Compatible Series

1. INTRODUCTION

This instruction manual provides comprehensive guidance for the installation, maintenance, and troubleshooting of Samoser Dishwasher Lower Front Rack Roller Wheels. These replacement parts are designed for compatibility with various GE, Kenmore, Hotpoint, and Amana dishwasher models. Please read this manual thoroughly before proceeding with installation to ensure proper function and safety.

2. SAFETY INFORMATION

Always prioritize safety when performing appliance maintenance. Failure to follow these instructions may result in personal injury or property damage.

- **Disconnect Power:** Before beginning any installation or maintenance, ensure the dishwasher's power supply is disconnected at the circuit breaker.
- **Water Supply:** Turn off the water supply to the dishwasher before starting work.
- **Wear Protective Gear:** Use gloves to protect hands from sharp edges or debris.
- **Professional Assistance:** If you are unsure about any step, consult a qualified appliance technician.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 8x Dishwasher Lower Front Rack Roller Wheels
- 8x Axles



Image 1: Contents of the Samoser Dishwasher Lower Front Rack Roller Wheels package, showing eight white roller wheels and eight small white plastic axles.

4. COMPATIBILITY

These Samoser replacement roller wheels are compatible with a wide range of GE, Kenmore, Hotpoint, and Amana dishwasher models. Please cross-reference your dishwasher's model number with the list below to confirm compatibility. If your model is not listed, or if you are unsure, please contact customer support.

Compatible GE Models include:

- VSD3104X04WW, VSD3104X05BB, VSD3104X05WB, VSD3104X05WW
- VSD3204G00BB, VSD3204G00CC, VSD3204G00WW, VSD3204G01BB, VSD3204G01CC, VSD3204G01WW, VSD3204G02WW
- VSD3706J00WW, VSD3706J01SB, VSD3706J01WW
- VSD3707P00BB, VSD3707P00SB, VSD3707P00WW
- VSD3708K00BB, VSD3708K00SB, VSD3708K00WW
- WRB3110MC119, WRB3110MC127
- *And many other models as listed in the product description.*

5. SETUP AND INSTALLATION

Follow these steps to replace the lower front rack roller wheels on your dishwasher.

1. Prepare the Dishwasher:

- Ensure the dishwasher is completely empty.
- Disconnect the dishwasher from its power source and turn off the water supply.

2. Remove the Lower Dishrack:

Carefully pull the lower dishrack out of the dishwasher tub. It may be necessary to remove the end caps or clips that secure the rack to the rails, depending on your dishwasher model.

3. Identify Damaged Wheels:

Inspect the existing roller wheels on the lower dishrack. Note which wheels are broken, worn, or missing.



Image 2: A single Samoser roller wheel and its corresponding axle, illustrating the two parts that make up one assembly.

4. Remove Old Wheels:

The old wheels are typically held in place by a small plastic axle or clip. Gently pry off the old axle and wheel. Some models may require a small screwdriver to release the clips.

5. Install New Wheels:

- Align the new Samoser roller wheel with the mounting post on the dishrack.
- Insert the new axle through the center of the wheel and into the mounting post. Apply gentle pressure until the axle snaps securely into place. Ensure the wheel spins freely.



Image 3: A close-up of a Samoser roller wheel with the axle installed, demonstrating the correct assembly.

6. Reinstall Dishrack:

Once all necessary wheels are replaced, carefully slide the lower dishrack back into the dishwasher, ensuring it moves smoothly on the rails.

7. Restore Power and Water:

Reconnect the dishwasher's power supply and turn on the water supply. Test the dishrack movement.

6. OPERATING THE DISHWASHER

After successful installation of the new roller wheels, your dishwasher's lower rack should glide smoothly. Operate your dishwasher as per its original manufacturer's instructions. Ensure the rack is not overloaded to prevent undue stress on the wheels.

7. MAINTENANCE

To ensure the longevity and smooth operation of your Samoser dishwasher roller wheels:

- **Regular Cleaning:** Periodically inspect the wheels and axles for food debris or mineral buildup. Clean with a soft brush and mild detergent if necessary.
- **Avoid Overloading:** Do not overload the lower dishrack, as excessive weight can cause premature wear on the

wheels.

- **Gentle Handling:** Pull and push the dishrack gently to prevent damage to the wheels and rails.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack does not slide smoothly	Debris in wheel track; damaged wheel; improperly installed wheel.	Clean tracks; inspect and replace damaged wheels; ensure wheels are securely snapped into place.
Wheel falls off	Axle not fully seated; damaged axle or wheel.	Press axle firmly until it clicks; replace wheel and axle if damaged.
New wheel does not fit	Incorrect part for model.	Verify dishwasher model compatibility with the provided list. Contact customer support if needed.

9. SPECIFICATIONS

- **Product Name:** Dishwasher Lower Front Rack Roller Wheels
- **Brand:** Samoser
- **Part Number:** VSD3104X04WW (Primary reference)
- **Item Model Number:** VSD3204G00BB (Primary reference)
- **UPC:** 604837579083
- **Quantity:** 8x Roller Wheels, 8x Axles
- **Compatibility:** Aftermarket replacement for GE, Kenmore, Hotpoint, Amana dishwashers. Refer to Section 4 for detailed model list.

10. WARRANTY AND SUPPORT

Samoser products are designed for quality and reliability. While specific warranty details are not provided in this manual, please refer to your purchase documentation or contact Samoser customer support for warranty information and assistance.

If you encounter any issues or have questions regarding the installation or performance of these roller wheels, please contact the seller or Samoser customer service. They are committed to resolving your concerns within 24 hours.

For further assistance, you may visit the [Samoser brand store on Amazon](#).

