



Manuals.plus /

› RAMJOY /

› RAMJOY Air Fryer RAF-350 User Manual

RAMJOY RAF-350

RAMJOY Air Fryer User Manual

MODEL: RAF-350

1. INTRODUCTION

Thank you for choosing the RAMJOY 8-in-1 Compact 3.8QT Air Fryer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- **Read all instructions.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.

- Do not block any ventilation openings.

3. PRODUCT OVERVIEW

The RAMJOY Air Fryer is designed for versatile cooking, offering multiple functions in a compact design.

Components:

- Main Air Fryer Unit
- 3.8-Quart Nonstick Basket
- Crisper Plate

Key Features:

- **8-in-1 Functionality:** Air Fry, Roast, Bake, Broil, Wings, Fries, Preheat, Shake.
- **Air-Crisp Technology:** Reduces fat by up to 90% while ensuring crispy, tender results.
- **Compact 3.8QT Capacity:** Ideal for 1-2 people, saving countertop space.
- **Easy Clean-Up:** Dishwasher-safe nonstick basket and crisper plate.
- **Touch Control Panel:** Intuitive digital interface for easy operation.



Image: The RAMJOY 3.8QT Air Fryer, showcasing its compact design and the removable basket filled with cooked chicken drumsticks.

8-IN-1 FUNCTIONALITY



AIR FRY



ROAST



BAKE



BROIL



WINGS



FRIES



PREHEAT



SHAKE



Image: Close-up of the RAMJOY Air Fryer's top control panel, highlighting the 8-in-1 functionality icons for Air Fry, Roast, Bake, Broil, Wings, Fries, Preheat, and Shake.

4. SETUP AND FIRST USE

Follow these steps before using your air fryer for the first time:

1. **Unpack:** Carefully remove all components and packaging materials from the box.
2. **Clean:** Wash the nonstick basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
3. **Wipe Down:** Wipe the inside and outside of the main air fryer unit with a damp cloth. Do not immerse the main unit in water.
4. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, ensuring adequate space (at least 6 inches) around the appliance for proper air circulation.
5. **Preheat (Optional):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 350°F

(175°C) to eliminate any manufacturing odors. A slight odor may be present, which is normal.

5. OPERATING INSTRUCTIONS

Your RAMJOY Air Fryer features an intuitive touch control panel for easy operation.

Basic Operation:

1. **Prepare Food:** Place your food on the crisper plate inside the nonstick basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly back into the main air fryer unit until it clicks into place.
3. **Power On:** Plug the air fryer into a grounded electrical outlet. The display will illuminate.
4. **Select Function:** Use the touch controls to select one of the 8 preset functions (Air Fry, Roast, Bake, Broil, Wings, Fries, Preheat, Shake) or manually set the temperature and time.
5. **Adjust Settings:** Use the temperature and time adjustment buttons to set your desired cooking parameters. The temperature range is 150°F to 400°F.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
7. **Shake Reminder:** For certain foods, the air fryer may prompt a 'Shake' reminder. Carefully pull out the basket, shake the food, and reinsert the basket to resume cooking.
8. **Finish:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.

COMPACT LIGHTWEIGHT DESIGN

Space-saving, and easy to store & carry.



Image: Illustration demonstrating the 'Shake Reminder' feature of the RAMJOY Air Fryer, showing how shaking the basket ensures evenly cooked food versus burnt results without shaking.

6. COOKING GUIDE

The following table provides general guidelines for common foods. Cooking times and temperatures may vary based on food quantity, size, and desired crispness. Always use a food thermometer to ensure food is cooked to a safe internal temperature.

Food Item	Temperature	Time	Notes
French Fries (frozen)	380°F (193°C)	15-20 min	Shake halfway through.
Chicken Wings	375°F (190°C)	20-25 min	Shake halfway through.
Chicken Breast (boneless)	360°F (182°C)	15-18 min	Flip halfway through.
Frozen Snacks (e.g., nuggets)	350°F (175°C)	8-12 min	Follow package instructions, shake as needed.
Roast Vegetables	375°F (190°C)	10-15 min	Toss with a little oil, shake halfway.

7. MAINTENANCE AND CLEANING

Proper cleaning after each use will extend the life of your RAMJOY Air Fryer.

- Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- Clean Basket and Crisper Plate:** The nonstick basket and crisper plate are dishwasher safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak in warm soapy water for 10-15 minutes.
- Clean Interior:** Wipe the interior of the air fryer with a damp cloth or non-abrasive sponge. Do not use abrasive cleaners or steel wool.
- Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth.
- Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



DISHWASHER-SAFE BASKET & CRISPER PLATE

*** BPA-free for all food contact parts.**

Image: A person placing the nonstick basket and crisper plate of the RAMJOY Air Fryer into a dishwasher, demonstrating their dishwasher-safe convenience.

8. TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded electrical outlet.
	Basket not inserted correctly.	Push the basket firmly into the main unit until it clicks into place.
Food not cooked evenly.	Basket is overcrowded.	Cook food in smaller batches.
	Food not shaken/flipped.	Shake or flip food halfway through the cooking process.
Food not crispy.	Insufficient cooking time/temperature.	Increase cooking time or temperature slightly.
	Too much moisture in food.	Pat food dry before air frying.
White smoke coming from appliance.	Excess oil/grease from food.	Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before cooking.

9. SPECIFICATIONS

Technical details for the RAMJOY Air Fryer Model RAF-350:

Specification	Value
Model Name	RAMJOY Air Fryer 3.8 Quarts
Item Model Number	RAF-350
Capacity	3.8 Quarts
Color	Black
Material	Acrylonitrile Butadiene Styrene (ABS)
Output Wattage	1250 Watts
Voltage	120 Volts
Max Temperature Setting	400 Degrees Fahrenheit
Control Method	Touch
Dishwasher Safe Parts	Yes (Basket, Crisper Plate)
Product Dimensions	12.76"D x 9.29"W x 10.44"H

10. WARRANTY AND SUPPORT

RAMJOY products are manufactured to high-quality standards. For any questions, concerns, or support needs regarding your RAMJOY Air Fryer, please contact RAMJOY customer service. Please have your model number (RAF-350) and purchase information ready when contacting support.