

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Coeshome](#) /

› [Coeshome 7-Drawer Dresser with LED Lights and Charging Ports User Manual](#)

Coeshome 7-Drawer Dresser (B0DZ6PHSWV)

Coeshome 7-Drawer Dresser with LED Lights and Charging Ports User Manual

Model: 7-Drawer Dresser (B0DZ6PHSWV)

INTRODUCTION

Thank you for choosing the Coeshome 7-Drawer Dresser. This versatile furniture piece is designed to enhance your living space with ample storage, integrated LED lighting, and convenient charging capabilities. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your product.



Image: The Coleshome 7-Drawer Dresser in a bedroom setting, showcasing its storage capacity and ambient LED lighting.

SAFETY INSTRUCTIONS

Please read all safety instructions carefully before assembly and use. Keep this manual for future reference.

- **Anti-Toppling Device:** Always install the included anti-toppling device to prevent the dresser from tipping over, especially in households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity for the top surface or individual drawers. Overloading can cause damage or instability.
- **Electrical Safety:**
 - Ensure the power cord is not pinched or damaged.
 - Do not expose the power strip to water or excessive humidity.
 - Only use the integrated USB ports and AC outlets for devices within their specified voltage and current limits.
 - Unplug the dresser from the power outlet before cleaning or moving.
- **Assembly:** Follow all assembly steps precisely. Do not use power tools unless explicitly instructed, as this may overtighten screws and damage components.
- **Placement:** Place the dresser on a flat, stable, and level surface.

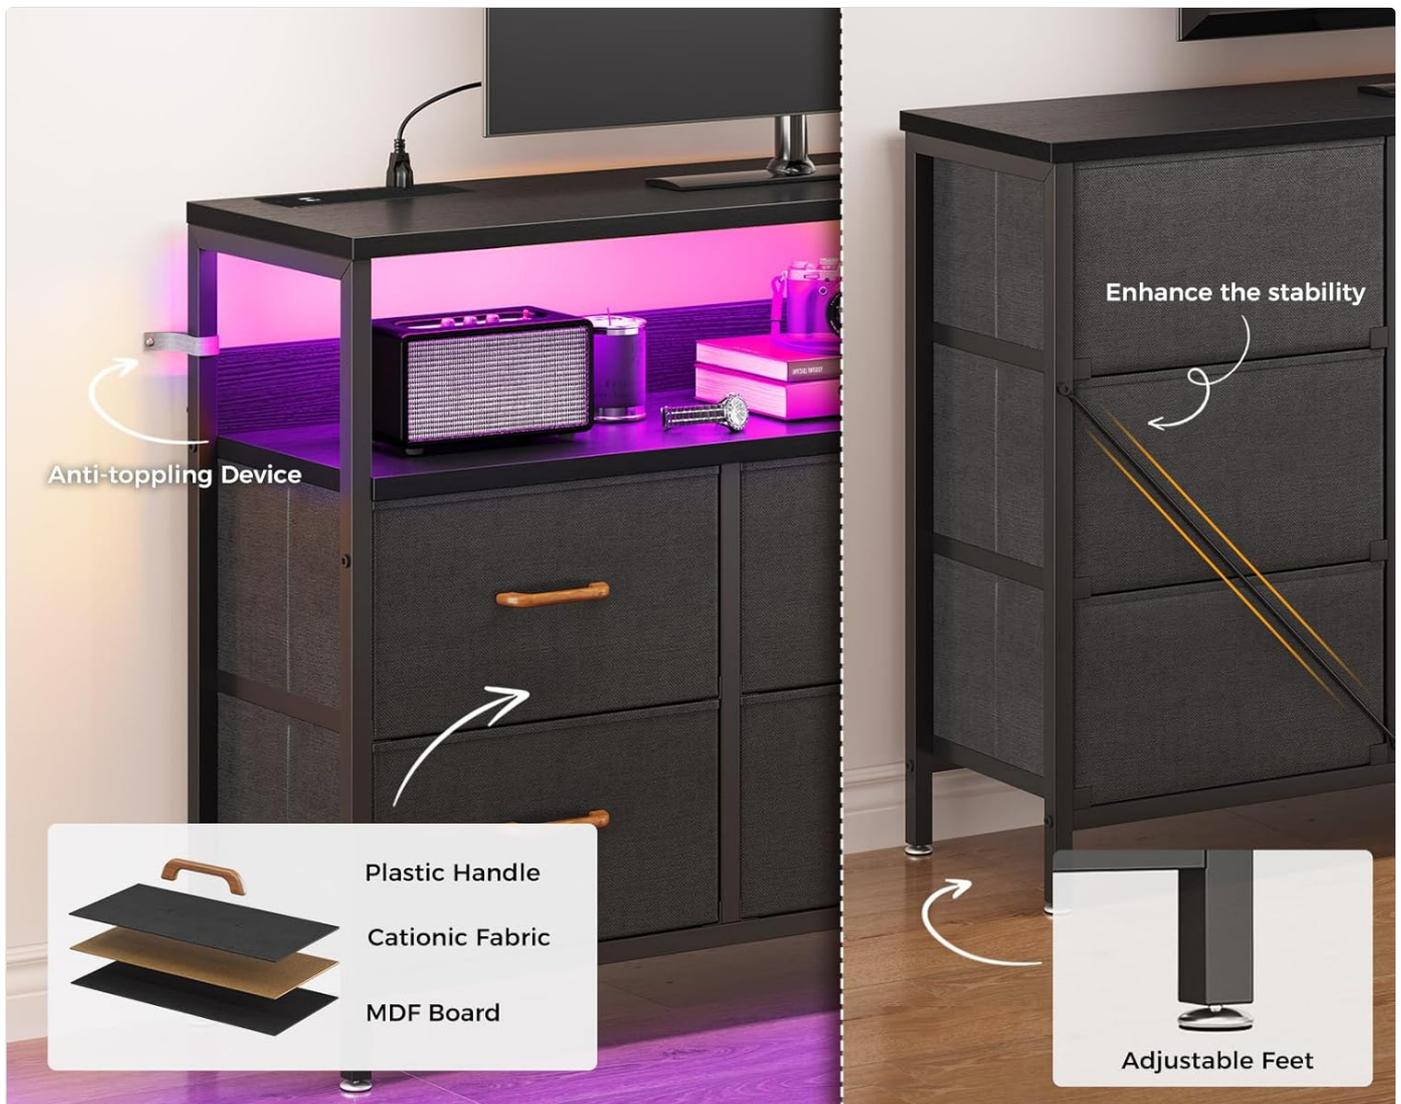


Image: Illustration of the anti-toppling device, adjustable feet for stability, and the layered construction of the fabric drawers (MDF board, cationic fabric, plastic handle).

PACKAGE CONTENTS

Before beginning assembly, please verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support.

- Metal Frame Components
- Wooden Top Board
- Fabric Drawers (7 units)
- Drawer Handles
- Recessed Power Strip (with 2 USB ports, 2 AC outlets, and power cord)
- LED Light Strip
- Adjustable Feet
- Anti-Toppling Device
- Assembly Hardware (screws, bolts, Allen wrench)
- Instruction Manual

SETUP AND ASSEMBLY

Assembly is designed to be straightforward. It is recommended to assemble the dresser on a soft, clean surface to

prevent scratches. Each component is numbered for easy identification.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the package contents list.
2. **Assemble the Metal Frame:** Connect the metal frame components according to the diagrams in the separate assembly guide. Ensure all screws are tightened securely but do not overtighten.
3. **Attach the Wooden Top:** Secure the wooden top board to the assembled metal frame using the provided screws.
4. **Install the Power Strip:** Carefully insert the recessed power strip into its designated slot on the top board. Ensure it is flush and secure.
5. **Apply LED Light Strip:** Adhere the LED light strip to the underside of the top shelf, following the adhesive backing instructions. Connect it to the power strip.
6. **Insert Drawers:** Unfold each fabric drawer and insert the bottom MDF board. Attach the handles to the front of each drawer. Slide the assembled drawers into their respective slots in the frame.
7. **Attach Adjustable Feet:** Screw the adjustable feet into the bottom of the dresser frame. Adjust them to ensure the dresser is level and stable.
8. **Install Anti-Toppling Device:** Securely attach the anti-toppling device to the back of the dresser and to a wall stud, following the specific instructions provided with the device. This step is crucial for safety.

Product Size



Image: Detailed dimensions of the Coleshome 7-Drawer Dresser and its individual fabric drawers, illustrating overall size and internal storage capacity.

OPERATING INSTRUCTIONS

LED Lighting System

The integrated LED light strip offers customizable ambient lighting for your room.

- **Power On/Off:** Use the switch located on the power strip or the LED controller (if provided) to turn the lights on or off.
- **Color Change:** The LED system features 10 adjustable colors. Use the remote control or integrated button to cycle through the available colors.
- **Dynamic Modes:** Choose from 10 dynamic lighting modes to create different atmospheres.
- **Brightness Adjustment:** Adjust the brightness with 7 available settings to suit your preference.



Image: A close-up view of the RGB LED strips, highlighting their ability to display 10 different lighting modes and 10 color variations.

Integrated Charging Ports

The recessed power strip provides convenient charging for your electronic devices.

- **AC Outlets:** The dresser includes 2 standard AC outlets (120-240V/12A). Plug in lamps, laptops, or other small appliances.
- **USB Ports:** Two 5V/2A USB ports are available for charging smartphones, tablets, and other USB-powered devices.
- **Power Cord:** The power strip is equipped with a 200cm (approximately 6.5 ft) power cord for flexible placement.

Recessed Power Strip



Image: A detailed view of the recessed power strip, showing its two AC outlets and two USB charging ports, along with specifications.

MAINTENANCE

- **Cleaning:** Wipe the wooden top and metal frame with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric drawers, spot clean with a mild detergent and allow to air dry.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Drawer Care:** Ensure drawers are not overloaded to maintain their shape and functionality.
- **Electrical Components:** Keep the power strip and LED lights free from dust and debris. Do not attempt to disassemble or repair electrical components yourself.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights not turning on.	<ul style="list-style-type: none">• Dresser not plugged in.• LED strip not connected to power strip.• LED strip or power strip malfunction.	<ul style="list-style-type: none">• Ensure the dresser's power cord is securely plugged into a working wall outlet.• Check the connection between the LED strip and the power strip.• Contact customer support if the issue persists.

Problem	Possible Cause	Solution
USB ports or AC outlets not working.	<ul style="list-style-type: none"> Dresser not plugged in. Device not properly connected. Power strip malfunction. 	<ul style="list-style-type: none"> Verify the dresser is plugged into a live outlet. Ensure your device is correctly plugged into the USB port or AC outlet. Test with another device. If still not working, contact customer support.
Dresser feels unstable or wobbly.	<ul style="list-style-type: none"> Uneven floor. Loose assembly screws. Anti-toppling device not installed or secured. 	<ul style="list-style-type: none"> Adjust the leveling feet at the bottom of the dresser. Check and tighten all assembly screws. Ensure the anti-toppling device is correctly installed and anchored to a wall stud.
Drawers are difficult to open/close or sag.	<ul style="list-style-type: none"> Overloaded drawers. Drawer bottom board not fully inserted. Frame misalignment. 	<ul style="list-style-type: none"> Reduce the weight in the drawers. Ensure the MDF bottom board is fully seated in the drawer. Check the dresser frame for proper alignment and tighten any loose connections.

SPECIFICATIONS

Brand	Coleshome
Model	7-Drawer Dresser (B0DZ6PHSWV)
Color	Black
Material	Wood, Metal, Cationic Fabric
Product Dimensions (L x W x H)	132 x 30 x 89 cm (52 x 11.8 x 35 inches)
Item Weight	16.5 Kilograms (36.4 lbs)
Number of Drawers	7
AC Outlets	2 (120-240V/12A)
USB Ports	2 (5V/2A)
LED Features	10 Colors, 10 Dynamic Modes, 7 Brightness Settings
Special Features	Adjustable Feet, Anti-Toppling Device

WARRANTY AND SUPPORT

Coleshome offers a 30-day worry-free return and exchange guarantee. Our professional customer service team is available online 24 hours a day to provide effective solutions at any time.

For assistance with assembly, missing parts, or any other inquiries, please contact Coleshome customer support through your purchase platform or the official Coleshome website.

Please retain your proof of purchase for warranty claims.



© 2025 Coleshome. All rights reserved.