

[Manuals.plus](#) /

› [BOTLOG](#) /

› BOTLOG 71-inch Farmhouse Kitchen Pantry Cabinet (Model BO-PB-019) Instruction Manual

BOTLOG BO-PB-019

BOTLOG 71-inch Farmhouse Kitchen Pantry Cabinet

MODEL: BO-PB-019

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your BOTLOG Farmhouse Kitchen Pantry Cabinet.

1. Introduction

The BOTLOG 71-inch Farmhouse Kitchen Pantry Cabinet is designed to offer extensive storage and a stylish aesthetic for your kitchen, dining room, or utility area. Featuring a microwave stand, multiple drawers, and adjustable shelves, this cabinet helps organize various items efficiently. Its durable construction and thoughtful design ensure long-lasting use and easy maintenance.



Figure 1: BOTLOG 71-inch Farmhouse Kitchen Pantry Cabinet (Grey)

2. Setup and Assembly

Assembly of the BOTLOG pantry cabinet is required. All necessary parts are precisely cut and pre-drilled for convenience. A detailed instruction manual and tools are included in the package to guide you through the process.

2.1 Tools Recommended

- Screwdriver (manual or electric drill recommended for efficiency)
- Hammer
- Measuring tape

2.2 Anti-Tipping Device Installation

For safety, especially in households with children, it is crucial to install the included anti-tipping device. This device secures the cabinet to the wall, preventing accidental tipping. Follow the specific instructions in the assembly manual for

proper installation.



Wood Strips Splicing Door



Double Anti-fall Device



Cable Managment



Soft-close Hinge

Figure 2: Key features including the Double Anti-fall Device for stability.

3. Operating Instructions

Your pantry cabinet offers diverse storage solutions to keep your space organized.

3.1 Storage Compartments

- **Top Glass Cabinets:** Ideal for storing condiments, food items, bottles, and cans. The frosted glass doors provide a discreet view of contents while maintaining a clean aesthetic.
- **Countertop:** The spacious countertop is suitable for kitchen appliances such as microwaves, coffee makers, or for displaying decorative items. It also features a cable management hole to keep wires tidy.
- **Storage Drawers:** Two deep drawers are perfect for organizing smaller items like cutlery, utensils, tissues, or other kitchen essentials.
- **Lower Cabinets:** These provide ample space for larger items such as pots, pans, dinnerware, or storage baskets.

Adjustable shelves allow for customization based on your storage needs.



Figure 3: Overview of storage areas within the cabinet.



Figure 4: Deep drawers for organized storage.

4. Maintenance

To ensure the longevity and appearance of your BOTLOG pantry cabinet, follow these simple maintenance guidelines:

- **Cleaning:** The smooth melamine-faced engineered wood is easy to clean. Wipe surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals.
- **Spills:** Promptly clean any spills to prevent staining or damage to the finish.
- **Durability:** The cabinet is designed to be water-resistant and heat-resistant. However, avoid placing extremely hot items directly on the surface without protection.
- **Hinges:** The buffer hinges are designed for gentle closing. Periodically check and tighten any loose screws on hinges or handles to maintain optimal function.

5. Troubleshooting

This section addresses common issues you might encounter with your pantry cabinet.


5.1 Door Alignment

If the cabinet doors appear misaligned (e.g., have a gap, protrude, or are tilted), adjustments can be made using the hinges. The hinges are designed for easy adjustment to correct various alignment issues.

- 1. **Adjusting Horizontal Position:** To make the door approach right, turn the screw to the right. To move the door left, turn the screw to the left.
- 2. **Adjusting Depth:** To push the door closer to the cabinet frame, rotate the screws to the left. To move it further out, rotate to the right.
- 3. **Adjusting Vertical Position:** To lower the door's height, turn the screw to the left. To raise it, turn the screw to the right. Ensure both doors are at the same height for a uniform appearance.

How to align two doors by adjusting the hinges?

01

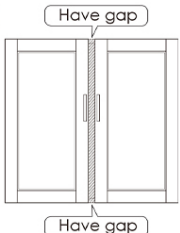


The door offset to the left or right

02




The door offset forward

03

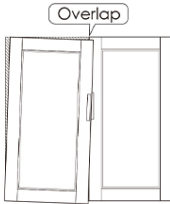

The door is tilted to the other side

04

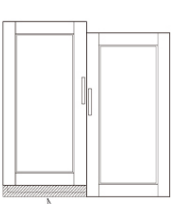

The door offset upward or downward

Figure 5: Common door alignment problems.




Turning the screw to the right can make the door approach right



1. Rotate the screws to the left
2. Push the door to the cabinet
3. Rotate the screws to the right



Turning the screw to the left can make the top of the door tilted left

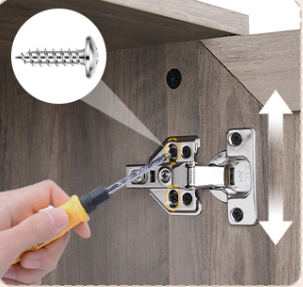

1. Turn the screw to the left
2. Lower the door's height so that 2 doors are of the same height
3. Turn the screw to the right

Figure 6: Hinge adjustment guide for door alignment.

6. Specifications

Feature	Detail
---------	--------

Brand	BOTLOG
Model Name	BOT-PB
Item Model Number	BO-PB-019
Color	Grey
Product Dimensions	15.7"D x 47.2"W x 72"H
Item Weight	159.5 Pounds
Material	Engineered Wood
Finish Type	Melamine Facing
Mounting Type	Freestanding
Special Features	Anti-Tipping, Heat-Resistant, Scratch Resistant, Strong Load-bearing Capacity, Weatherproof
Number of Shelves	8
Number of Drawers	2
Weight Limit	300 Pounds
Assembly Required	Yes
UPC	741365609155



ARRIVERS IN 2 PACKES



Figure 7: Product dimensions and internal measurements.

7. Warranty and Support

For specific warranty information and customer support, please refer to the documentation included with your product or contact BOTLOG customer service directly. General customer support is available for assistance with product inquiries or issues.

For further assistance, please visit the [BOTLOG Store on Amazon](#).

© 2026 BOTLOG. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question