

Acouto Acoutowym60vp8gi

Acouto Nordic Digital Alarm Clock User Manual

Model: Acoutowym60vp8gi

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Acouto Nordic Digital Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Acouto Digital Clock
- 1 x English User Manual (This Document)
- 1 x USB Cable

Note: AAA Batteries are not included and must be purchased separately for backup power.

3. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Use only the provided USB cable or a certified equivalent for power.
- Keep out of reach of children.

4. SETUP

4.1 Power Connection

To power the alarm clock, connect the provided USB cable to the DC 5V port on the back of the clock and plug the other end into a USB power adapter (not included) or a powered USB port.

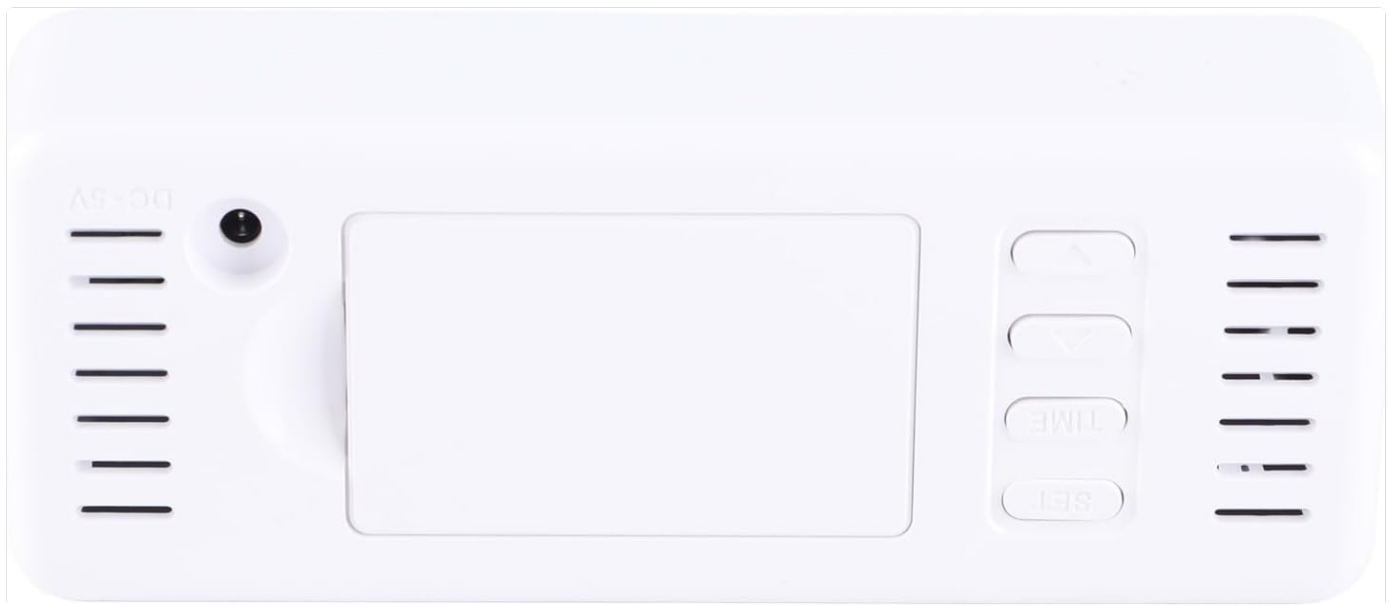


Image 1: Rear view of the clock, highlighting the DC 5V power input and control buttons.

4.2 Battery Installation (Backup Power)

The clock requires 3 x AAA batteries (not included) for backup power. These batteries maintain time and alarm settings during a power outage. The clock will not display time or function without external USB power, even with batteries installed.

1. Locate the battery compartment on the back of the clock.
2. Open the battery compartment cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

5. OPERATING INSTRUCTIONS



Image 2: Front view of the clock, showing the large digital display and top buttons.

5.1 Setting the Time

1. Press and hold the **SET** button (located on the back) until the hour digits begin to flash.
2. Use the **UP** and **DOWN** buttons (on the back) to adjust the hour.
3. Press **SET** again to move to the minute digits.
4. Use the **UP** and **DOWN** buttons to adjust the minutes.
5. Press **SET** to confirm and exit time setting mode.

5.2 Setting Alarms (Alarm 1 & Alarm 2)

This clock supports two independent alarm settings.

1. Press the **ALARM 1** button (on the back) once to display Alarm 1 time.
2. Press and hold the **ALARM 1** button until the hour digits flash.
3. Use the **UP** and **DOWN** buttons to adjust the hour.
4. Press **ALARM 1** again to move to the minute digits.
5. Use the **UP** and **DOWN** buttons to adjust the minutes.
6. Press **ALARM 1** to confirm and exit Alarm 1 setting mode.
7. Repeat the process using the **ALARM 2** button for the second alarm.
8. To activate/deactivate an alarm, press the corresponding **ALARM 1** or **ALARM 2** button briefly. An indicator icon will appear/disappear on the display.

5.3 Snooze Function

When the alarm sounds, press the **SNOOZE** button (on top of the clock) to temporarily silence the alarm. The alarm will sound again after approximately 9 minutes.

To turn off the alarm completely, press any other button on the back of the clock.

5.4 Brightness Adjustment

The display brightness can be adjusted to suit your preference. Press the**LIGHT** button (on top of the clock) to cycle through different brightness levels (e.g., High, Medium, Low, Off).

6. MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using backup batteries, replace them annually or when the clock fails to retain settings during a power interruption.
- **Storage:** If storing the clock for an extended period, remove the AAA batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is off.	No power supply.	Ensure the USB cable is securely connected to a powered USB port or adapter.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Verify the alarm time is set correctly and the alarm icon is displayed on the screen.
Settings are lost after power outage.	Backup batteries are dead or not installed.	Install 3 new AAA batteries or replace existing ones.
Display is too dim/bright.	Brightness level needs adjustment.	Press the LIGHT button on top to cycle through brightness levels.

8. SPECIFICATIONS

Feature	Detail
Model Number	Acoutowym60vp8gi
Product Dimensions	3.15 x 1.5 x 1.97 inches
Item Weight	5.2 ounces (148 Grams)
Power Source	AC/DC (via USB cable)
Backup Battery	3 x AAA Batteries (not included)
Alarm Settings	2 Groups
Display Type	Large Digital LED

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Acouto customer service through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DZ6ZSM2P>

More documents and user manuals: <https://manuals.plus/>