

[Manuals.plus](#) /

› [Sheffield Home](#) /

› Sheffield Home Glass LED Lamp (Model YH6003 YEL) Instruction Manual

Sheffield Home YH6003 YEL

Sheffield Home Glass LED Lamp

Model: YH6003 YEL

1. INTRODUCTION

Thank you for choosing the Sheffield Home Glass LED Lamp. This battery-operated lamp provides a warm white light, designed to enhance your living space with its elegant and portable design. This manual provides essential information for the safe and efficient use of your lamp.



Image 1.1: Sheffield Home Glass LED Lamp (Yellow Stripe) in an indoor setting.

2. SAFETY INFORMATION

- **Glass Product:** Handle with care. The lamp is made of glass and can break if dropped or mishandled, potentially causing injury.
- **Battery Safety:**
 - Use only 3 AA batteries (not included).
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Remove batteries if the lamp will not be used for an extended period.
 - Do not dispose of batteries in fire; they may explode or leak.

- **Indoor Use Only:** This lamp is designed for indoor use. Do not expose to water or high humidity.
- **Cleaning:** Disconnect power (remove batteries) before cleaning. Use a soft, dry cloth.
- **Children:** Keep out of reach of small children to prevent accidental breakage or ingestion of small parts.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Sheffield Home Glass LED Lamp (includes integrated LED bulb and shade)
- 1 x On-Off Switch (integrated into the base)

Note: 3 AA batteries are required and are not included in the package.

4. SETUP

4.1 Battery Installation

1. Carefully turn the lamp upside down to access the battery compartment located at the base.
2. Locate the battery cover. It is designed for easy removal without screws. Gently slide or lift the cover to open the compartment.
3. Insert 3 AA batteries (not included) into the compartment, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover securely.
5. Place the lamp upright on a stable, flat surface.

SIZE GUIDE



Image 4.1: Lamp highlighting battery operation and warm white light.

5. OPERATING INSTRUCTIONS

5.1 Turning the Lamp On/Off

The Sheffield Home Glass LED Lamp features a simple push-button switch for operation.

1. To turn the lamp **ON**, locate the push button switch, typically found on the top or side of the lamp's base. Press the button once.
2. To turn the lamp **OFF**, press the same push button switch again.

The lamp provides a single warm white light setting. There are no adjustable brightness levels.

6. MAINTENANCE

6.1 Cleaning

- Before cleaning, ensure the lamp is turned off and batteries are removed.
- Wipe the glass surfaces with a soft, dry, lint-free cloth.
- For stubborn marks, lightly dampen the cloth with water. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- Ensure the lamp is completely dry before reinserting batteries and operating.

6.2 Battery Replacement

When the light appears dim or fails to turn on, it is likely time to replace the batteries. Follow the battery installation steps in Section 4.1 to replace the 3 AA batteries.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	• Batteries are dead or low. • Batteries are inserted incorrectly. • Battery cover not secured.	• Replace with new AA batteries. • Check battery polarity and reinsert correctly. • Ensure battery cover is fully closed.
Light is dim.	• Batteries are low.	• Replace with new AA batteries.
Lamp flickers.	• Loose battery connection. • Batteries are low.	• Check battery compartment for secure fit. • Replace with new AA batteries.

8. SPECIFICATIONS



MADE FOR EVERY NOOK.
Perfectly Compact

Image 8.1: Dimensions of the Sheffield Home Glass LED Lamp.

Model Number: YH6003 YEL

Brand: Sheffield Home

Material: 95% Glass, 5% PP (Polypropylene)

Light Source Type: LED

Light Color: Warm White

Power Source: Battery Powered (3 x AA batteries, not included)

Switch Type: Push Button

Product Dimensions (D x W x H): 4.72" x 4.72" x 7.87" (12cm x 12cm x 20cm)

Finish Type: Polished

Indoor/Outdoor Usage: Indoor

Color: Yellow Stripe

9. WARRANTY INFORMATION

The Sheffield Home Glass LED Lamp is backed by a **60-day limited warranty** against defects in materials and workmanship under normal use. This warranty covers manufacturing defects and does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For further assistance, questions, or warranty claims, please contact Sheffield Home customer service. You can find more information and contact details by visiting the official Sheffield Home store page:

[Visit the Sheffield Home Store](#)

Please have your model number (YH6003 YEL) and proof of purchase ready when contacting support.

© 2026 Sheffield Home. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question