

manuals.plus /

- › [aiprottablet](#) /
- › [aiprottablet 12-inch Android 15 Tablet \(Model K10\) User Manual](#)

**aiprottablet K10**

# aiprottablet 12-inch Android 15 Tablet (Model K10) User Manual

Model: K10

## 1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your aiprottablet 12-inch Android 15 Tablet, Model K10. Please read this manual thoroughly before using your device to ensure optimal performance and longevity.



Image 1.1: The aiprottablet 12-inch Android 15 Tablet.

## 2. SETUP

## 2.1. Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed below are present and undamaged. If any items are missing or damaged, contact customer support.

- aiprotablet 12-inch Android 15 Tablet
- Protective Cover
- USB Charging Cable
- Power Adapter
- User Manual (this document)

The following video demonstrates the unboxing process and initial setup steps:

Your browser does not support the video tag.

*Video 2.1: Unboxing and initial setup of the aiprotablet K10.*

This video shows the tablet being unboxed, the protective screen film removed, and the initial power-on sequence. It also demonstrates selecting the language and navigating through the initial Android setup screens.

## 2.2. Powering On and Initial Configuration

1. Press and hold the Power button located on the side of the tablet until the screen illuminates.
2. Follow the on-screen prompts to select your preferred language.
3. Connect to a Wi-Fi network. This is necessary for software updates and accessing online services.
4. Sign in with your Google account or create a new one. This allows access to the Google Play Store and other Google services.
5. Review and accept the terms and conditions.
6. Set up a screen lock (PIN, pattern, or password) for security. Face ID can also be configured later.

## 3. OPERATING YOUR TABLET

---

### 3.1. Basic Navigation

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, brightness, etc.).
- **Multitasking:** Swipe up from the bottom and hold, then release to view recent applications.

### 3.2. Display Settings

Customize your tablet's visual experience:

- **Brightness:** Adjust screen brightness from Quick Settings or in *Settings > Display*.
- **Dark Theme:** Enable a system-wide dark theme for reduced eye strain in low light. (*Settings > Display > Dark theme*)
- **Wallpaper:** Change your home and lock screen wallpapers. (*Settings > Wallpaper & style*)
- **Screen Timeout:** Adjust the time before the screen automatically turns off. (*Settings > Display > Screen timeout*)

# 12-inch Max View



**12-inch**  
Screen Size



**16:10**  
Screen Ratio



**1200X2000**  
HD Resolution



Image 3.1: The tablet features a 12-inch 2K IPS display with 2000x1200 resolution.

## 3.3. Sound and Vibration

Manage audio output and vibration settings:

- **Media Volume:** Adjust the volume for videos, music, and games.
- **Notification Volume:** Control the volume of alerts and notifications.
- **Alarm Volume:** Set the volume for alarms.
- **Do Not Disturb:** Silence notifications and calls during specific periods.

These settings can be accessed via *Settings > Sound & vibration*.

## 3.4. Connectivity

- **Wi-Fi:** Connect to wireless networks for internet access. Supports dual-band 2.4G/5G Wi-Fi. (*Settings > Network & internet > Internet*)
- **Bluetooth:** Pair with Bluetooth devices such as headphones, speakers, or keyboards. (*Settings > Connected devices*)
- **GPS:** The tablet includes GPS functionality for location services.

### 3.5. Storage Management

Your tablet comes with 128GB of internal storage and supports up to 2TB expansion via a TF (MicroSD) card (not included).

- **View Storage Usage:** Check how much storage is used by apps, photos, videos, and other files in *Settings > Storage*.
- **Free Up Space:** Use the built-in storage manager to identify and remove unnecessary files.

Image 3.2: Storage and RAM specifications, including expandable storage options.

### 3.6. Camera

The tablet is equipped with a 13MP rear camera and a 5MP front camera for capturing photos and videos.

- Open the Camera app from the home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front and rear cameras using the camera icon.



Image 3.3: Camera specifications for capturing moments.

### 3.7. Security and Privacy

Protect your device and personal information:

- **Screen Lock:** Set up a PIN, pattern, or password for device security. (*Settings > Security & privacy > Screen lock*)
- **Face ID:** Configure facial recognition for quick and secure unlocking.
- **App Permissions:** Manage which apps have access to your location, camera, microphone, etc. (*Settings > Security & privacy > App security*)

### 3.8. Android 15 Features

Your tablet runs on the latest Android 15 system, offering enhanced privacy, security, and performance improvements.

- **Enhanced App Permissions:** Granular control over app access to your data.
- **Privacy Dashboard:** View a summary of app access to sensitive permissions.
- **Taskbar:** Convenient multitasking features for improved productivity.



**Android 15**

**Latest Android 15 Tablet**  
Make your tablet more you

-  **Performance Improvements**
-  **Continuous Update Support**
-  **Increased Security**
-  **Enhanced Privacy**

**T615 Chip**  
**Easy to handle**  
**all kinds of operations**

T615 ensures smooth operation experience Let the smart life, no lag, no wait.

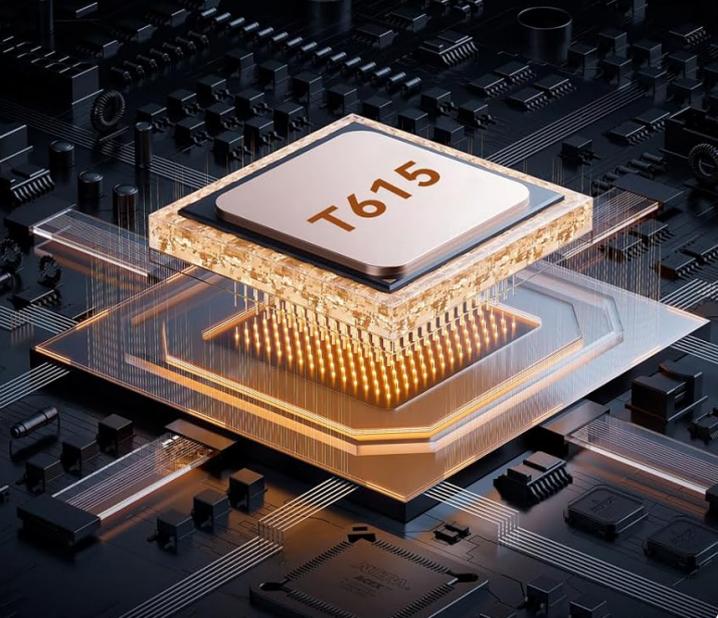


Image 3.4: Key features of the Android 15 operating system and the T615 processor.

### 3.9. Widevine L1 Support

The tablet supports Widevine L1, enabling you to stream high-definition content (1080p) from popular streaming services such as Netflix, Hulu, YouTube, HBO Max, Prime Video, and Disney+.

**Widevine L1 Tablet**

This android 15 tablet support streaming services, such as Netflix, Disneyt, AmazonPrime Video, Hulu,and more. (Image quality may be affected by the video provider.)















Image 3.5: Widevine L1 certification allows for high-quality streaming.

## 4. MAINTENANCE

---

### 4.1. Charging the Battery

The tablet is equipped with an 8000mAh battery. Use the provided USB charging cable and power adapter for optimal charging. The tablet supports 18W fast charging.

- Connect the USB cable to the tablet's charging port and the power adapter.
- Plug the power adapter into a wall outlet.
- A charging indicator will appear on the screen.



Image 4.1: Estimated battery life for different usage scenarios.

### 4.2. Cleaning

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

### 4.3. Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. (*Settings > System > System updates*)

## 5. TROUBLESHOOTING

---

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on	Ensure the battery is charged. Connect the tablet to the charger for at least 30 minutes. If it still doesn't power on, perform a hard reset by holding the Power button for 10-15 seconds.
Slow performance	Close unused applications. Clear cache for frequently used apps. Check available storage and free up space if necessary. Restart the tablet.
Wi-Fi connectivity issues	Ensure Wi-Fi is enabled in Quick Settings or <i>Settings &gt; Network &amp; internet</i> . Restart your Wi-Fi router. Forget the network and reconnect.
Battery drains quickly	Reduce screen brightness. Close background apps. Disable unused features like GPS or Bluetooth. Check battery usage in <i>Settings &gt; Battery</i> to identify power-consuming apps.
Apps crashing or freezing	Clear the app's cache ( <i>Settings &gt; Apps &gt; [App Name] &gt; Storage &amp; cache &gt; Clear cache</i> ). Update the app to the latest version. If the problem persists, uninstall and reinstall the app.

If these steps do not resolve the issue, please contact aiprotablenet customer support for further assistance.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Number	K10
Operating System	Android 15
Display Size	12 Inches
Screen Resolution	2000x1200 (2K IPS)
Processor	1.6 GHz Octa-core (Unisoc T615)
Graphics Coprocessor	Mali-G57 1core @ 850MHz
RAM	20GB (6GB + 14GB Expandable)
Internal Storage	128 GB
Expandable Storage	Up to 2TB via TF (MicroSD) card (not included)
Rear Camera	13MP

Feature	Detail
Front Camera	5MP
Battery Capacity	8000mAh
Wireless Connectivity	802.11ac, 802.11n (2.4G/5G WiFi), Bluetooth 5.2
Location Services	GPS
Dimensions (LxWxH)	11.05 x 7 x 0.25 inches
Item Weight	1.3 pounds
Color	Gray

## 7. WARRANTY AND SUPPORT

Your aiprotabket K10 is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact aiprotabket customer service through the official channels provided at the time of purchase.

© 2025 aiprotabket. All rights reserved.

### Related Documents - K10

 <p><b>K10</b> USER MANUAL</p> <p>Please read this manual thoroughly before using and keep it for future reference.</p>	<p><a href="#">K10 Tablet User Manual - Android 13</a></p> <p>Comprehensive user manual for the K10 Android 13 tablet, covering specifications, functions, settings, app management, multimedia, troubleshooting, and regulatory compliance.</p>
<p>English</p> <p>FUNCTIONS/OPERATIONS: MODES/OPERATIONS: Buttons: When you press the function button, it will emit an ultrasonic sound that can only be heard by dogs. When the device is working and emitting ultrasonic sound, a green light will flash on the device and will regularly affect people's hearing and is safe to use. The device is equipped with two effective ultrasonic sound waves. If you use your mode continuously, your dog may get used to the sound. For this reason, we do not recommend continuous use. To use ultrasonic sound waves to train your dog, please use the two distinct sound modes (stable and undulating) with a frequency of 25KHz/30KHz. Sound waves with a frequency of 22-25KHz.</p>	<p><a href="#">K10 Ultrasonic Dog Training Device - Functions and Modes</a></p> <p>Learn about the K10 ultrasonic dog training device, its ultrasonic button operation, safety features, and the two distinct sound modes (stable and undulating) for effective dog deterrence and training.</p>

 <p>VASTKING KingPad K10 Pro User Manual</p>	<p><a href="#">Vastking KingPad K10 Pro User Manual</a></p> <p>Comprehensive user manual for the Vastking KingPad K10 Pro tablet, covering setup, features, and settings. Learn how to power on/off, take screenshots, manage home screen settings, Wi-Fi, Bluetooth, and app management.</p>
 <p>USER MANUAL FATARUS</p>	<p><a href="#">FATARUS K10 Tablet User Manual - Features, Specifications, and Troubleshooting</a></p> <p>Comprehensive user manual for the FATARUS K10 Tablet. Covers setup, features, connectivity (Wi-Fi, Bluetooth), specifications, troubleshooting common issues, and contact information. Includes SAR and FCC compliance statements.</p>
 <p>KIDS' TABLET User Manual &amp; Warranty Card</p> <p>K10 EXCLUSIVE WARRANTY CERTIFICATE</p>	<p><a href="#">K10 Kids Tablet User Manual and Warranty Information</a></p> <p>Comprehensive user manual and warranty card for the K10 Kids Tablet, detailing setup, features, maintenance, and safety guidelines. Includes multilingual support information.</p>