

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VETEK](#) /

› [VETEK HDV01-8K 8K Camcorder Instruction Manual](#)

## VETEK HDV01-8K

# VETEK HDV01-8K 8K Camcorder Instruction Manual

Model: HDV01-8K

## INTRODUCTION

Thank you for choosing the VETEK HDV01-8K 8K Camcorder. This device is designed to capture high-quality video and photos, offering advanced features such as 8K Ultra HD resolution, 48MP photo capability, 18x digital zoom, and IR night vision. This manual provides essential information for setting up, operating, and maintaining your camcorder to ensure optimal performance and longevity.

## PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- VETEK HDV01-8K 8K Camcorder
- External Microphone
- 32GB SD Card
- 2 x Lithium Polymer Batteries
- USB Cable
- Remote Control
- Lens Cap
- Camera Bag
- User Manual

## SHARPER DETAILS, STUNNING CLARITY

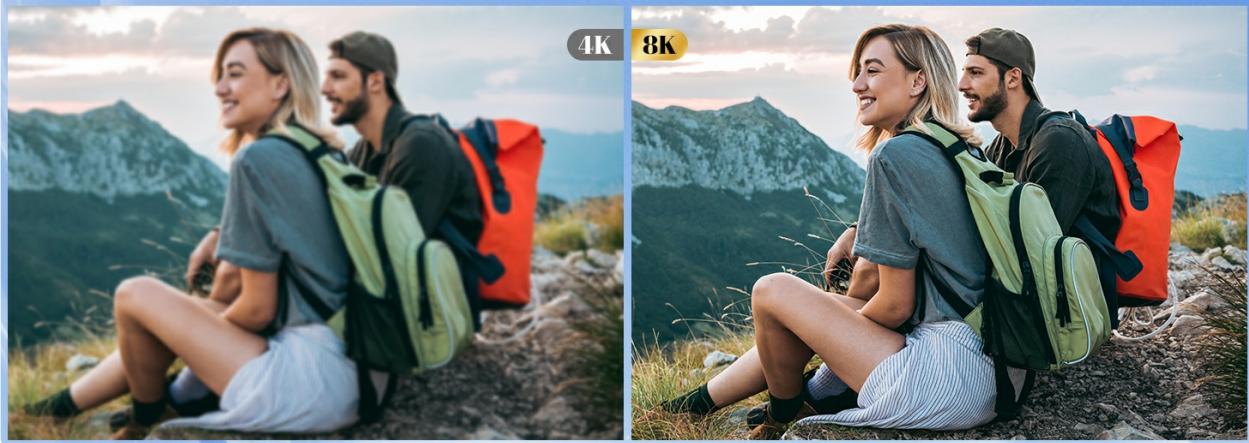


Image: The VETEK HDV01-8K camcorder shown with its full set of accessories, including the external microphone, remote control, batteries, and cables.

## SETUP

### 1. Charging the Batteries

The camcorder comes with two rechargeable Lithium Polymer batteries. To charge a battery:

1. Open the battery compartment on the bottom of the camcorder.
2. Insert one of the provided batteries into the compartment, ensuring correct orientation.
3. Close the battery compartment.
4. Connect the camcorder to a power source using the supplied USB cable. The charging indicator light will illuminate.
5. Charging typically takes a few hours. Once fully charged, the indicator light will change or turn off.
6. Repeat the process for the second battery.

Note: The camcorder does not include an external battery charger. Batteries must be charged individually within the camera.

### 2. Inserting the SD Card

The camcorder supports SD cards up to 256GB. A 32GB SD card is included.

1. Locate the SD card slot, usually near the battery compartment.
2. Insert the SD card with the metal contacts facing down until it clicks into place.
3. To remove, gently push the card until it pops out.

### 3. Attaching the External Microphone

For enhanced audio quality, attach the external microphone:

1. Slide the microphone onto the hot shoe mount located on top of the camcorder.
2. Connect the microphone's 3.5mm audio jack into the MIC input port on the camcorder.
3. Ensure the microphone is powered on (if it has its own power source).

# Camcorder with External Mic



Image: The camcorder fully assembled with the external microphone and a handheld bracket, demonstrating its readiness for use.

## 4. Attaching the Handheld Bracket (Optional)

For improved stability and handling, attach the handheld bracket:

1. Align the bracket's screw with the tripod thread on the bottom of the camcorder.
2. Rotate the screw to securely fasten the bracket to the camcorder.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

To power on the camcorder, simply open the 3.0-inch IPS touch screen. To power off, close the screen or press and hold the power button.

### 2. Basic Recording & Photo Capture

The camcorder features intuitive controls for recording and taking photos.

- **Recording Video:** In video mode, press the Record button (usually a red circle) to start/stop recording.

- **Taking Photos:** Switch to photo mode and press the Shutter button to capture an image.
- **Zoom:** Use the zoom lever/buttons to adjust the 18x digital zoom.



Image: The VETEK HDV01-8K camcorder with its screen open, displaying the recording interface with battery and time indicators.

### 3. Night Vision Function

The camcorder includes IR night vision for clear recording in low-light conditions.

- Press the dedicated IR Night Vision button (refer to the manual for exact location) to activate or deactivate the function.

# Built-in 3 Infrared Night Vision Lights



Turn on the iR light key



Turn off the iR light key



Image: The camcorder with its IR night vision lights active, showing a comparison between normal and night vision recording in a dark environment.

## 4. Wi-Fi Function & App Control

Connect your camcorder to a mobile device via Wi-Fi for remote control and file transfer.

1. On the camcorder, navigate to the Wi-Fi settings and enable it. A Wi-Fi network name and password will be displayed.
2. On your mobile device, connect to the camcorder's Wi-Fi network using the provided credentials.
3. Open the dedicated camcorder app (download from your device's app store). You can now control recording, take photos, and transfer files directly to your phone.

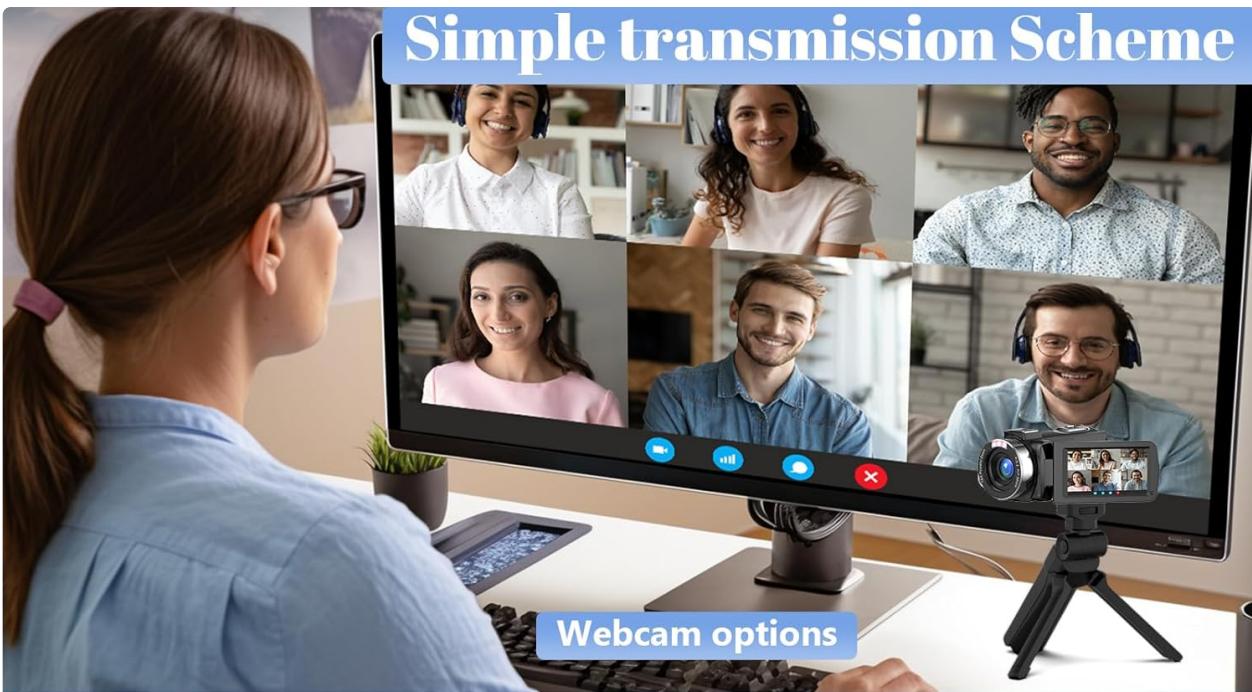


Image: A diagram illustrating the camcorder's connectivity options, including Wi-Fi for mobile device control and HDMI output for display on a TV.

## 5. Webcam Function

Use your camcorder as a webcam for live streaming or video calls.

1. Connect the camcorder to your computer using the USB cable.
2. Select 'PC Camera' mode on the camcorder's screen (if prompted).
3. Your computer should recognize the camcorder as a webcam, allowing you to use it with compatible software (e.g., YouTube, Skype, TikTok, Facebook).

## 6. Using the Remote Control

The included remote control allows for convenient operation from a distance.

- The remote can be used to start/stop recording, take photos, and navigate menus without touching the camcorder.

## 7. Advanced Features

Explore various shooting modes and settings via the touchscreen menu:

- **Time-lapse Video:** Capture events over extended periods.
- **Slow Motion:** Record high-speed action in slow motion.
- **Loop Recording:** Continuously record, overwriting older footage.
- **Timed Photos:** Set a timer for self-portraits or group shots.
- **Built-in LED Light:** Activate for brighter photos and videos in dim settings.



Image: A collage of images demonstrating different shooting modes available on the camcorder, including time-lapse, slow motion, loop recording, and timed photos.

Video: An official seller video demonstrating the VETEK 8K Camcorder's features and ease of use for vlogging and content creation.

## MAINTENANCE

To ensure the longevity and optimal performance of your VETEK HDV01-8K camcorder, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures.

Use the provided camera bag for protection when not in use.

- **Battery Care:** Remove batteries if the camcorder will not be used for an extended period. Store batteries in a cool, dry place.
- **SD Card:** Regularly back up your footage and format the SD card periodically to maintain performance.

## TROUBLESHOOTING

If you encounter any issues with your camcorder, please refer to the following common solutions:

- **Camera not turning on:** Ensure batteries are fully charged and correctly inserted.
- **Poor video/photo quality:** Check lighting conditions, ensure the lens is clean, and verify resolution settings in the menu.
- **Microphone not recording audio:** Ensure the external microphone is securely connected, powered on (if applicable), and its sensitivity settings are appropriate.
- **Wi-Fi connection issues:** Confirm the camcorder's Wi-Fi is enabled and your mobile device is connected to the correct network. Restart both devices if necessary.
- **SD card error:** Ensure the SD card is properly inserted and not full. Try formatting the card (this will erase all data).

## SPECIFICATIONS

Feature	Specification
Brand	VETEK
Model Number	HDV01-8K
Item Weight	1.52 pounds
Product Dimensions	5.36 x 2.36 x 2.17 inches
Batteries	2 Lithium Polymer batteries (included)
Color	Black
Photo Sensor Technology	CMOS
Video Capture Resolution	8K
Flash Memory Type	SD (up to 256GB supported)
Video Capture Format	MP4
Supported Audio Format	AAC, MP3
Screen Size	3 Inches (270-degree rotating IPS touch screen)
Connectivity Technology	USB, Wi-Fi

**Special Features**

Compact, 18X Digital Zoom, IR Night Vision, Built-in LED Light, Hot Shoe, 1/4" Standard Tripod Thread

## **WARRANTY & SUPPORT**

For warranty information or technical support, please contact VETEK customer service. You can reach us via email at [wigicam@gmail.com](mailto:wigicam@gmail.com). Please provide your product model number and a detailed description of your issue for prompt assistance.

© 2025 VETEK. All rights reserved.