

[Manuals.plus](#) /

› [TVTAU](#) /

› TVTAU T10 Pro Cordless Vacuum Cleaner User Manual

TVTAU T10 Pro

TVTAU T10 Pro Cordless Vacuum Cleaner

USER MANUAL

Model: **T10 Pro** | Brand: **TVTAU**



Image: TVTAU T10 Pro Cordless Vacuum Cleaner in action, highlighting its powerful suction.

Introduction

Thank you for choosing the TVTAU T10 Pro Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use.

and keep it for future reference.

The TVTAU T10 Pro is designed for efficient home cleaning, featuring a powerful 620W brushless motor, 55KPa suction, and a long 75-minute runtime. Its self-standing design, 1.8L dust cup, LED display, anti-tangle brush, and 8-stage filtration system ensure a comprehensive cleaning experience for various surfaces, including hardwood floors and carpets, and is effective for pet hair removal.

1. Setup

1.1 Unboxing and Assembly

Carefully remove all components from the packaging. Refer to the videos below for detailed unboxing and assembly instructions.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and contents of the TVTAU T10 Pro Cordless Vacuum Cleaner package.

Your browser does not support the video tag.

Video: Watch this video for a step-by-step guide on how to assemble your TVTAU T10 Pro Cordless Vacuum Cleaner.

1.2 Initial Charging

Before first use, fully charge the vacuum cleaner's battery. The TVTAU T10 Pro supports wall-mounted fast charging.

- Connect the power adapter to the charging port on the battery or the wall-mounted docking station.
- Plug the adapter into a power outlet.
- The LED display will indicate charging status. A full charge typically takes approximately 4 hours.

Wall mounted fast charging



4 hours fast charge



3 charging methods



Image: TVTAU T10 Pro Cordless Vacuum Cleaner charging on its wall-mounted docking station.

2. Operating Instructions

2.1 Powering On/Off and Suction Modes

Press the power button to turn the vacuum cleaner on or off. The TVTAU T10 Pro offers 3 adjustable power modes for various cleaning tasks:

- **Standard Mode:** For general cleaning and maximum runtime.
- **Mid Mode:** Balanced power for everyday dirt.
- **Max Mode:** For intensive spot cleaning and stubborn debris.

Adjust the suction mode using the controls on the handle, as indicated on the LED display.

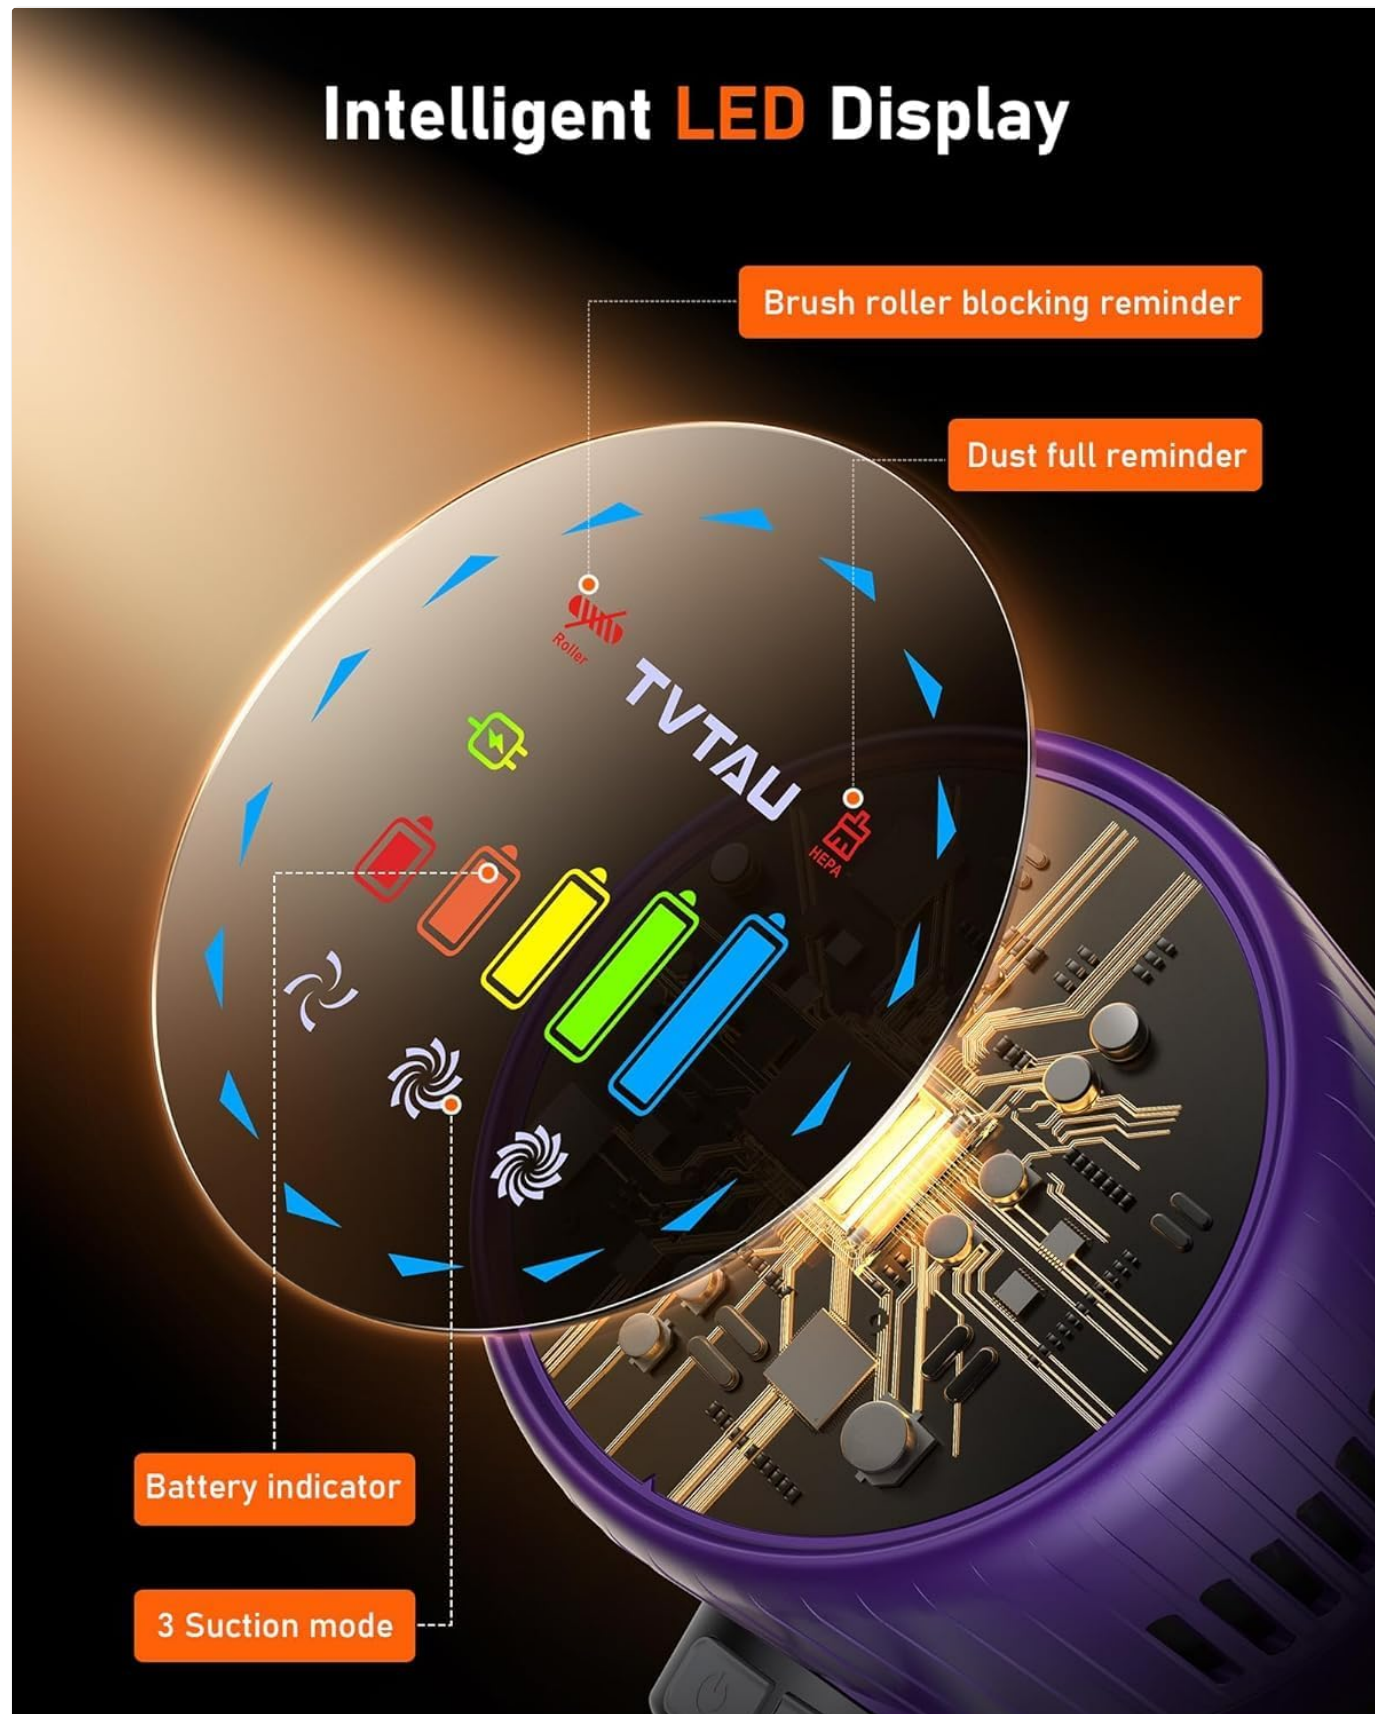


Image: Intelligent LED display showing current settings and status.

2.2 Self-Standing Feature

The vacuum cleaner is designed to stand upright on its own, providing hands-free convenience during cleaning breaks or when storing.



Image: The TVTAU T10 Pro utilizing its self-standing feature.

2.3 Using Attachments

The TVTAU T10 Pro comes with various attachments for versatile cleaning:

- **Long Crevice Tool:** Ideal for narrow gaps, corners, and hard-to-reach areas.
- **Soft Dusting Brush (2-in-1):** For delicate surfaces, curtains, and removing pet hair from upholstery.
- **Sofa Brush:** Designed for cleaning sofas, cushions, and other fabric surfaces.

Attach the desired tool to the main unit or the telescopic wand as needed.

Multifunctional Handheld Vacuum



Long Crevice Nozzle



Sofa Brush



2 in 1 Upholstery Brush

Image: Demonstrating the versatility of the TVTAU T10 Pro with different attachments.

2.4 Runtime

The 8-cell high-capacity lithium battery provides up to 75 minutes of runtime, allowing you to clean large areas on a single charge. The battery is detachable and replaceable (additional batteries sold separately).



Image: Visual representation of the vacuum's 75-minute battery runtime.

Your browser does not support the video tag.

Video: This video illustrates the effective use of the TVTAU T10 Pro Cordless Vacuum Cleaner on various floor types.

3. Maintenance

3.1 Dust Cup Cleaning

Regularly empty and clean the 1.8L dust cup to maintain optimal suction performance. The LED display will provide a "dust full reminder" when necessary.

- Detach the dust cup from the main unit.
- Empty the contents into a waste bin.
- Rinse the dust cup and internal components with water if needed, ensuring they are completely dry before reassembly.

Your browser does not support the video tag.

Video: Learn how to properly clean and empty the dust cup of your TVTAU T10 Pro vacuum cleaner with this instructional video.

3.2 Filter System Maintenance

The 8-layer high-efficiency filtration system, including HEPA filters, traps 99.99% of fine dust and allergens. Clean or replace filters as recommended to maintain air quality and vacuum performance.

- Refer to the user manual for specific instructions on accessing and cleaning the HEPA filters.
- Ensure filters are completely dry before reinstalling.

8-Layer Cone Fine Filtration

 **99%**
Filter dust



Image: Detailed view of the 8-layer cone fine filtration system.

3.3 Roller Brush Cleaning

The anti-tangle V-roller brush is designed to minimize hair wrapping. However, periodic cleaning is recommended to ensure optimal performance, especially when the LED display shows a "brush roller blocking reminder".


- Turn off and unplug the vacuum cleaner before attempting to clean the brush roll.
- Remove the brush roll from the floor head.

- Use the provided hair cleaning tool or scissors to remove any tangled hair or debris.
- Reinstall the brush roll securely.

Anti-tangle V-Roller Brush



99%
reduction of
hair knotting

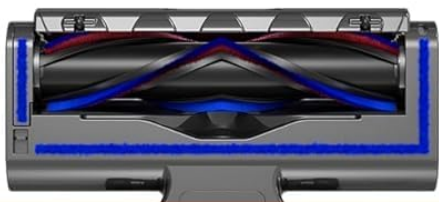

TVTAU T10 Pro



Other

Image: Close-up of the anti-tangle V-roller brush.

Your browser does not support the video tag.

Video: This video provides instructions on how to clean the roller brush of your TVTAU T10 Pro to maintain optimal performance.

4. Troubleshooting

If you encounter any issues with your TVTAU T10 Pro, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Vacuum not turning on	Battery depleted; Battery not properly installed.	Charge the battery; Ensure battery is securely clicked into place.
Loss of suction	Dust cup full; Filters clogged; Obstruction in nozzle/hose.	Empty dust cup; Clean or replace filters; Remove any obstructions.
Brush roll not spinning	Hair/debris tangled in brush roll; Brush roll blocked.	Clean the brush roll (refer to Section 3.3); Check for obstructions in the floor head.
Short runtime	Battery not fully charged; Battery degradation.	Ensure battery is fully charged; Consider replacing the battery if it's old.

If the problem persists after trying these solutions, please contact TVTAU customer support.

5. Specifications

Feature	Detail
Brand	TVTAU
Model Name	T10 Pro
Special Features	Cordless, Detachable Battery, Headlight, Rechargeable, Self-Standing
Motor Power	620W
Suction Power	Up to 55KPa
Filter Type	HEPA Filter (8-Layer Filtration)
Dust Cup Capacity	1.8 liters
Battery Life / Runtime	Up to 75 minutes
Number of Suction Modes	3
Surface Recommendation	Dual Action (Hardwood Floor, Carpet)
Recommended Uses	Pet Hair, Home Cleaning
Included Components	Accessory Kit, Adapter, Charging Dock, Crevice Tool, User Manual, Sofa Brush, Anti-tangle Brushroll Head, HEPA*2, Aroma Tablet, Hair Cleaning Brush
Item Dimensions (L x W x H)	11"L x 7"W x 16.8"H

6. Warranty and Support

TVTAU is dedicated to providing reliable service and support for your product. Your TVTAU T10 Pro Cordless Vacuum Cleaner comes with the following:

- 2 Years Warranty Service
- 7*24H Customer Support
- 30 Days Return & Exchange
- 90 Days Free Parts Replacement
- Lifetime Technical Support

For any inquiries or support, please contact us at: support@tvtau.com

© 2025 TVTAU. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question