

[Manuals.plus](#) /

> [ALLIMITY](#) /

> ALLIMITY Replacement Remote Control User Manual for Sharp TV Models GB058WJSA, GA983WJSA, GB005WJSA, GA903WJSA, GA902WJSA

ALLIMITY GB058WJSA, GA983WJSA, GB005WJSA, GA903WJSA, GA902WJSA

ALLIMITY Replacement Remote Control User Manual

FOR SHARP TV MODELS: GB058WJSA, GA983WJSA, GB005WJSA, GA903WJSA, GA902WJSA

1. INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY replacement remote control, designed for use with various Sharp TV models. This remote control is a direct replacement and does not require complex setup procedures. Please read this manual carefully to ensure proper operation and to maximize your viewing experience.

2. PRODUCT OVERVIEW

The ALLIMITY replacement remote control features a standard layout for intuitive navigation and control of your Sharp television. Below is an image illustrating the remote's design and key button placement.





Figure 2.1: Front view of the ALLIMITY replacement remote control. This image displays the remote's ergonomic design, featuring a full array of buttons including number keys, channel and volume controls, navigation pad, and dedicated buttons for specific functions like Netflix.

The remote is designed for comfortable handling and easy access to all essential television functions.

3. SETUP

3.1. Battery Installation

To begin using your remote control, you must first install two AAA batteries (not included). Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 3.1: Battery compartment with cover removed, showing correct AAA battery placement. Observe the polarity markings (+/-) inside the compartment for proper installation.

3.2. Initial Pairing / Setup

This ALLIMITY replacement remote control is designed to work directly with compatible Sharp TV models without the need for any programming or pairing. Once batteries are installed, it should function immediately.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the remote control's buttons and their functions:

TV Power (Red Button, Top Left): Turns the television on or off.

Source: Selects the input source (e.g., HDMI 1, HDMI 2, AV).

ATV/DTV/SAT/RADIO: Direct access buttons for specific input modes or broadcast types.

Number Buttons (0-9): Used to directly enter channel numbers or other numerical inputs.

CH +/- (Channel Up/Down): Changes the television channel.

VOL +/- (Volume Up/Down): Adjusts the television's volume level.

Mute: Silences the television audio.

Navigation Pad (Up, Down, Left, Right, OK): Used to navigate menus and confirm selections.

MENU: Opens the television's main menu.

EPG (Electronic Program Guide): Displays the program guide (if supported by your TV and broadcast).

Netflix: Direct access button to launch the Netflix application.

Colored Buttons (Red, Green, Yellow, Blue): These buttons typically correspond to specific functions displayed on-screen within menus or interactive applications.

Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, REC): Controls media playback for connected devices or TV recording functions.

3D: Activates or deactivates 3D mode (if supported by your TV).

ECO: Activates or deactivates energy-saving modes.

5. MAINTENANCE

5.1. Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads.

5.2. Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

Issue: Remote control is not responding.

Solution 1: Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.

Solution 2: Ensure there is a clear line of sight between the remote control and the TV's infrared (IR) receiver. Obstructions can block the signal.

Solution 3: Point the remote directly at the TV. The effective range is typically up to 8 meters (26 feet).

Issue: Certain buttons are not working.

Solution: This may indicate a specific button malfunction or a compatibility issue with that particular function on your TV. Verify if other buttons work. If only specific advanced functions are not working, consult your TV's original manual for compatibility with universal or replacement remotes.

7. SPECIFICATIONS

Brand	ALLIMITY
Special Feature	Wireless
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television
Power Source	2 x AAA Batteries (not included)

8. COMPATIBLE SHARP TV MODELS

This ALLIMITY replacement remote control is compatible with a wide range of Sharp TV models, including but not limited to the following:

- LC-70LE740E
- LC-40LE814E
- LC-46LE824E
- LC-60LE635E
- LC-40LE730
- LC-39LE752E
- LC-50LE752E
- LC-46LE731E
- LC-40LE824E
- LC-80LE757U
- LC-40LE730E
- LC-40LX814E
- LC-40LE830E
- LC-40LE924E
- LC-46LX814E
- LC-46LE730E
- LC-46LU824E
- LC-46LE732E
- LC-40LU824E
- LC-60LE925E
- LC-40LE731E
- LC-60C7450
- LC-40LE732E
- LC-46LE925E
- LC-40LE732ENET
- LC-39LE750E
- LC-40LE814R
- LC-40LE824R
- LC-50LE751E
- LC-52LE833E
- LC-60LE751E
- LC-60LE752E
- LC-40LE830RU
- LC-40LE831E
- LC-40LE831S
- LC70LE632U
- LC70LE633U
- LC70LE640U
- LC52LE832U

- LC52LE835
- LC52LE835U
- LC60C6400U
- LC60LE632U
- LC60LE633U
- LC60LE640U
- LC40LE832UB
- LC40LE835
- LC40LE835U
- LC60LE830U
- LC60LE831U
- LC60LE832U
- LC60LE832UB
- LC60LE835
- LC60LE835U
- LC60LE845
- LC70C6400U
- LC70LE732U
- LC70LE733U
- LC70LE734U
- LC70LE735U
- LC70LE8470U
- LC70UD1U
- LC80LE632U
- LC80LE633U
- LC40LE830U
- LC40LE830UA
- LC40LE830UBLC80LE633U
- LC52C6400U
- LC52LE640U
- LC60C6400U
- LC60LE640U

9. WARRANTY AND SUPPORT

For any questions regarding the operation or compatibility of your ALLIMITY replacement remote control, please refer to the seller's support channels or contact the retailer from whom the product was purchased. Specific warranty details may vary by seller and region.