

PKBD Portable Karaoke System

PKBD Portable Karaoke Machine User Manual

Model: Portable Karaoke System | Brand: PKBD

INTRODUCTION

Thank you for choosing the PKBD Portable Karaoke Machine. This system is designed to provide an immersive audio experience with its 360-degree stereo sound, dynamic LED lights, and dual wireless microphones. This manual will guide you through the setup, operation, and maintenance of your device to ensure optimal performance and enjoyment.

PRODUCT FEATURES

- **High-Quality Audio:** Equipped with wide-band speakers for immersive 360-degree stereo sound.
- **Extended Battery Life:** Integrated powerful battery provides 6 to 8 hours of continuous playback.
- **Integrated Device Stand:** Features a built-in stand for smartphones and tablets, allowing hands-free viewing of lyrics.
- **Dual Wireless Microphones:** Includes two high-quality wireless microphones with dedicated controls for volume and echo.
- **Universal Connectivity:** Supports advanced Bluetooth technology for seamless connection to smartphones, tablets, TVs, and computers. Multiple input options include Micro TF card, USB drive, and AUX input.
- **Dynamic LED Lighting:** Features bright, color-changing LEDs with 11 modes (breathing, gradient, strobe, static light) to enhance the atmosphere.

PACKAGE CONTENTS

Please check the package for the following items:

- PKBD Portable Karaoke Machine Unit
- Two Wireless Microphones
- USB Charging Cable
- User Manual (this document)

SETUP GUIDE

1. Charging the Karaoke Machine

Before first use, fully charge the karaoke machine. Connect the provided USB charging cable to the Type-C port on the unit and to a suitable USB power adapter (not included). The charging indicator will show the charging status and turn off when fully charged. A full charge takes approximately 6 hours.

2. Charging the Wireless Microphones

The wireless microphones also require charging. Connect them individually using a USB cable to a power source. A full charge provides 6-8 hours of use.

Dual Microphones with Ultra-low Latency

Achieve all-round sound capture and effectively filter out environmental noise

Run for 8 hours after fully charged

Run for 6-8 hours after fully charged

POP IT IN & POWER IT UP
PLUG THE USB CHARGING

This image focuses on one of the PKBD wireless microphones, showing it connected via USB for charging. The text indicates 'Dual Microphones with Ultra-low Latency' and 'Run for 6-8 hours after fully charged'.

3. Powering On/Off

Press and hold the power button on the karaoke machine for 3 seconds to turn it on or off. For the microphones, press and hold their respective power buttons.

4. Bluetooth Pairing

Once the karaoke machine is powered on, it will automatically enter Bluetooth pairing mode. On your smartphone, tablet, or other Bluetooth-enabled device, go to Bluetooth settings and select 'K3' (or similar device name) from the list of available devices to connect.



This image shows the PKBD Portable Karaoke Machine with a smartphone and tablet securely placed in the integrated stand, accompanied by two wireless microphones. The speaker features illuminated rings around its drivers.

5. Microphone Pairing

The microphones should automatically pair with the karaoke machine when both are powered on. If they do not connect, ensure they are charged and within range. Press and hold the power button on the microphone for three seconds to initiate pairing if needed.

6. Using the Device Stand

The integrated stand on top of the karaoke machine is designed to securely hold your smartphone or tablet, allowing you to view lyrics or control music hands-free.

OPERATING INSTRUCTIONS

1. Music Playback

- **Bluetooth:** Once paired, play music from your connected device.
- **USB/Micro TF Card:** Insert a USB drive or Micro TF card into the respective port. The machine will automatically detect and play audio files.
- **AUX Input:** Connect an external audio device using a 3.5mm AUX cable (not included) to the AUX port.

2. Microphone Usage

- **Volume Control:** Use the '+' and '-' buttons on the microphone to adjust your vocal volume.
- **Echo Effect:** Use the 'ECHO+' and 'ECHO-' buttons on the microphone to adjust the echo level.

3. LED Light Modes

The karaoke machine features dynamic LED lights around the speakers. Press the light button on the control panel to cycle through 11 different lighting modes, including breathing, gradient, strobe, and static light effects. Press and hold the light button to turn the lights off.



Dynamic Scene Music Rhythm Light Effect

Supports multiple modes
such as breathing, gradient,
strobe, static light Ten Modes



Eleven modes



Rainbow Colors

The image illustrates the PKBD Karaoke Machine's dynamic LED light effects, showing three units stacked, each with different colored light rings (blue, orange, rainbow) around the speakers, highlighting the various lighting modes.

4. PA System Functionality

The system can function as a portable PA system. Simply connect your audio source and use the microphones for announcements or public speaking.

MAINTENANCE

- **Cleaning:** Wipe the unit and microphones with a soft, dry cloth. Do not use abrasive cleaners or liquids.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. Charge it regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speakers.	Volume too low; device not connected; incorrect input mode.	Increase volume; ensure Bluetooth is paired or cable is connected; select correct input (BT, USB, AUX).
Microphones not working.	Microphones not charged; not paired; microphone volume too low.	Charge microphones; power on and re-pair microphones; increase microphone volume.
LED lights not working.	Lights turned off; unit malfunction.	Press the light button to turn on/cycle modes. If problem persists, contact support.
Bluetooth connection unstable.	Device too far; interference; low battery.	Move device closer to karaoke machine; avoid obstacles; ensure unit is charged.

SPECIFICATIONS

- **Brand:** PKBD
- **Special Feature:** PA System
- **Color:** Black, Red
- **Included Components:** Two Wireless Microphones
- **Recommended Uses:** Home
- **Power Source:** Battery
- **Number of Speakers:** 2
- **Connector Type:** USB, 3.5mm Jack, Bluetooth
- **Connectivity Technology:** Auxiliary, Bluetooth
- **Media Type:** Micro SD, USB

360° Surround Sound & Powerful Bass

Dual bass enhancement technology, presenting delicate layering

25W Power



80Hz-12KHz
Frequency



An exploded view diagram of the PKBD Karaoke Machine's internal speaker components, illustrating the 360-degree surround sound and powerful bass technology. It highlights the 25W power and 80Hz-12KHz frequency range.

Ultra-long Battery Life, Enjoy Uninterrupted Music

No need for frequent charging for outdoor travel and home entertainment

6-8_{hrs} Playing Time

6_{hrs} Charging Time



The image shows the PKBD Karaoke Machine in a party setting, emphasizing its ultra-long battery life of 6-8 hours playing time and 6 hours charging time, suitable for extended use.

Lightweight and Aordable, No Worries For Outdoor Challenges



A person is shown happily carrying the PKBD Portable Karaoke Machine, demonstrating its lightweight and portable design, suitable for outdoor use.

PRODUCT VIDEO

Your browser does not support the video tag.

This video demonstrates the key features of the PKBD Portable Karaoke Machine, including its dynamic LED lights, Bluetooth connectivity, microphone pairing process, and the integrated phone/tablet stand.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official PKBD website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question