

DistinQ DQMF03TP

DistinQ 240ml Electric Milk Frother - Taupe User Manual

Model: DQMF03TP

1. INTRODUCTION

Thank you for choosing the DistinQ Electric Milk Frother. This appliance is designed to quickly and easily prepare various milk beverages, including hot milk foam, cold milk foam, and heated milk. Please read this manual carefully before first use to ensure safe and optimal operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the base unit, cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Always unplug the appliance from the power outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance out of reach of children.
- Do not touch hot surfaces. Use handles or knobs.
- Do not fill above the 'MAX' level indicator to prevent overflow.
- Use only the provided whisk attachments.
- Do not use the appliance for anything other than its intended use.

3. PACKAGE CONTENTS

Please check the package for the following items:

- DistinQ Electric Milk Frother unit
- Two (2) Whisks (one for frothing, one for heating)

4. PRODUCT FEATURES

The DistinQ Electric Milk Frother offers convenience and versatility for your beverage needs:

- **4-in-1 Functionality:** Prepare hot dense foam, hot airy foam, heated milk, or cold foam.
- **Capacity:** Heats up to 240 ml of milk; froths up to 150 ml of milk.
- **Automatic Shut-off:** The frother automatically turns off when the milk reaches approximately 65°C to prevent overheating.
- **Non-stick Coating:** The interior features a non-stick coating for easy cleaning.
- **Quiet Operation:** Designed for minimal noise during use.
- **Removable Whisk:** Easy to change whisks for different functions.



**4 VERSCHILLENDE
PROGRAMMA'S**

			
Warme melk opschuimen	Warme melk zonder schuim	Warme chocolade melk	koude melk zonder schuim

The frother features a large capacity and a sturdy handle for easy pouring.

COMPACT FORMAAT



The control panel indicates the four distinct programs: hot milk foam, hot milk without foam, hot chocolate milk, and cold milk without foam.

INCLUSIEF MAAT AANDUIDING

Super handig als je één of
meerdere kopjes wilt vullen



Compact design with a 240 ml capacity, measuring approximately 12 cm in width and 20 cm in height.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, clean the interior of the frother and the whisks with warm soapy water. Rinse thoroughly and dry. Do not immerse the exterior of the frother or the power base in water.
3. **Placement:** Place the frother on a stable, flat, heat-resistant surface.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

6. OPERATING INSTRUCTIONS

The frother comes with two whisks: one for frothing (spring coil) and one for heating (flat). Ensure the correct whisk is inserted for your desired function.

DISTINQ



The interior of the frother includes clear MAX and MIN fill level indicators for milk.

General Operation:

1. Place the frother on its power base.
2. Insert the appropriate whisk into the bottom of the frother.
3. Pour cold milk into the frother. Observe the MAX/MIN fill lines:
 - For frothing (hot or cold foam): Do not exceed the lower 'MAX' line (approx. 150 ml).
 - For heating milk (without frothing): Do not exceed the upper 'MAX' line (approx. 240 ml).
4. Place the lid on the frother.
5. Press the desired function button on the frother. The indicator light will illuminate.
6. The frother will automatically stop when the process is complete.
7. Carefully remove the frother from the base and pour out the milk.

Specific Functions:

- **Hot Dense Foam:** Use the frothing whisk (with spring). Fill milk to the lower 'MAX' line. Press the 'Hot Dense Foam' button.
- **Hot Airy Foam:** Use the frothing whisk (with spring). Fill milk to the lower 'MAX' line. Press the 'Hot Airy Foam' button.

- **Heated Milk (without foam):** Use the heating whisk (flat). Fill milk to the upper 'MAX' line. Press the 'Heated Milk' button.
- **Cold Foam:** Use the frothing whisk (with spring). Fill milk to the lower 'MAX' line. Press the 'Cold Foam' button.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your milk frother.

1. **Unplug:** Always unplug the appliance from the power outlet and allow it to cool down completely before cleaning.
2. **Interior Cleaning:** Remove the whisk. Rinse the interior of the frother with warm water immediately after use. Use a soft cloth or sponge with a small amount of mild dish soap to clean the non-stick surface. Do not use abrasive cleaners or metal scourers, as these can damage the non-stick coating.
3. **Whisk Cleaning:** Wash the whisk(s) with warm soapy water and rinse thoroughly.
4. **Exterior Cleaning:** Wipe the exterior of the frother and the power base with a damp cloth. Do not immerse the frother unit or its base in water.
5. **Drying:** Ensure all parts are completely dry before storing or next use.
6. **Storage:** Store the frother in a clean, dry place.

8. TROUBLESHOOTING

If you encounter issues with your frother, please refer to the following common problems and solutions:

- **Frother does not start:**
 - Ensure the frother is properly placed on the power base.
 - Check if the power cord is securely plugged into a working outlet.
- **Milk is not frothing or heating properly:**
 - Ensure the correct whisk is inserted for the desired function (frothing whisk for foam, heating whisk for just heating).
 - Check that the milk level is between the MIN and appropriate MAX lines. Overfilling or underfilling can affect performance.
 - Use cold milk, preferably fresh and full-fat, for best frothing results.
 - Ensure the whisk is clean and free from obstructions.
- **Milk overflows:**
 - Do not exceed the MAX fill line for frothing (150 ml) or heating (240 ml).
- **Burnt smell or residue:**
 - Clean the frother thoroughly after each use to prevent milk residue buildup.
 - Ensure the frother is not operated without milk.

If the problem persists, please contact customer support.

9. SPECIFICATIONS

Brand	DistinQ
-------	---------

Model Number	DQMF03TP
Color	Taupe
Material	Stainless Steel
Capacity (Heating)	240 Milliliters
Capacity (Frothing)	150 Milliliters
Power	450 Watts
Dimensions (L x W x H)	12 x 12 x 19 cm
Item Weight	1 Kilogram
Special Feature	Automatic Shut-off (at 65°C)

10. WARRANTY AND SUPPORT

This DistinQ product is designed for durability and performance. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer.

For technical support, questions, or assistance with your product, please contact DistinQ customer service through the contact information provided on the product packaging or the official DistinQ website.