



Manuals.plus /

› YUSIWOAL /

› YUSIWOAL Pro Hair Clipper and Nose Hair Trimmer User Manual

## YUSIWOAL 9564

# YUSIWOAL Pro Hair Clipper and Nose Hair Trimmer User Manual

Model: 9564

## INTRODUCTION

---

Thank you for choosing the YUSIWOAL Pro Hair Clipper and Nose Hair Trimmer. This 2-in-1 device is designed for efficient and comfortable grooming. Please read this manual thoroughly before first use to ensure proper operation, maintenance, and safety.

This device features a high-performance motor, stainless steel blades, and a washable design for convenience. It is suitable for both hair clipping and nose hair trimming.

## IMPORTANT SAFETY INFORMATION

---

- Keep the appliance dry. Do not immerse the device in water while charging.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the charging cable provided with the device.
- Do not use the appliance if the blades are damaged, as this may cause injury.
- Store the device out of reach of children.
- Unplug the device before cleaning.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- Hair Trimmer Body (with Hair Clipper Blade)
- USB Charging Cable

- Adjustable Limit Comb (1-10 mm)
- Nose Hair Trimming Blade
- Blade Protection Cover
- Cleaning Brush
- Comb
- Care Oil (may not be included due to shipping restrictions)



Image: All components included in the package, including the main trimmer unit, nose trimmer head, adjustable comb, USB cable, cleaning brush, comb, and oil bottle.

## SETUP AND CHARGING

---

### Initial Charge

1. Before first use, fully charge the device.
2. Connect the USB charging cable to the charging port at the bottom of the trimmer.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The charging indicator light will illuminate. A full charge takes approximately 1.5 hours.

5. Once fully charged, disconnect the charging cable. The device provides approximately 90 minutes of use on a full charge.

## Attaching/Detaching Trimmer Heads

The device comes with a hair clipper blade and a nose hair trimming blade.

1. To remove a head: Hold the trimmer body firmly. Gently push the blade head upwards with your thumb until it detaches.
2. To attach a head: Align the desired blade head with the slot on the trimmer body. Press down firmly until you hear a click, indicating it is securely fastened.



Image: The main trimmer unit with the hair clipper head attached, and a separate nose trimmer head. This illustrates the interchangeable design.

## OPERATING INSTRUCTIONS

## Power On/Off

- Press the power button once to turn the trimmer on.
- Press the power button again to turn the trimmer off.



Image: A detailed view of the power button, located on the front of the trimmer body.

## Using the Hair Clipper

1. Ensure the hair clipper blade is securely attached.
2. Attach the adjustable limit comb if desired. The comb allows for cutting lengths from 1mm to 10mm. Rotate the dial on the comb to select the desired length.
3. Turn on the trimmer.
4. For best results, use on clean, dry hair.
5. Move the clipper against the direction of hair growth, using slow, even strokes.
6. Regularly clean hair clippings from the blade during use to maintain performance.

Water washing

# BODY WASH FOR EASY REMOVAL OF HAIR CLIPPINGS

All new upgrades, all hermetically sealed, all washed in water, all ready to face any remaining hair fragments



Image: The hair clipper with the adjustable comb attached, demonstrating how to set the desired hair length from 1mm to 10mm.

## Using the Nose Hair Trimmer

1. Ensure the nose hair trimming blade is securely attached.
2. Turn on the trimmer.
3. Gently insert the trimmer tip into your nostril or ear canal.
4. Move the trimmer in a circular motion to trim unwanted hair.
5. Do not insert the trimmer too deeply to avoid injury.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your trimmer and ensure optimal performance.

### Cleaning the Blades

1. Turn off the trimmer and disconnect it from any power source.

2. Remove the blade head (hair clipper or nose trimmer).
3. Use the provided cleaning brush to remove any loose hair from the blades and the trimmer body.
4. Since the device is washable, you can rinse the blade head and the trimmer body under running water. Ensure the charging port is sealed if rinsing the entire body.
5. Allow all parts to air dry completely before reattaching or storing.



Image: The hair clipper blade assembly, highlighting its design for easy cleaning under water.



Image: The trimmer body being rinsed under water, illustrating its washable design for easy removal of hair clippings.

## Oiling the Blades

- After cleaning and drying, apply a small drop of the provided care oil (or a suitable light machine oil) to the blades.
- Turn on the trimmer for a few seconds to distribute the oil evenly.
- Wipe off any excess oil with a soft cloth.
- Oiling helps maintain blade sharpness and smooth operation.

## Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Use the blade protection cover when storing the hair clipper blade to prevent damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for 1.5 hours.
Trimmer runs slowly or pulls hair.	Blades are clogged with hair or not oiled.	Clean the blades thoroughly and apply a drop of oil.
Blade head detaches easily.	Blade head not securely attached.	Ensure the blade head clicks into place when attaching.
Charging indicator not working.	Faulty USB cable or power adapter.	Try a different USB cable or power adapter. Ensure connections are secure.

## SPECIFICATIONS

---

Feature	Detail
Model Name	08144
Item Model Number	9564
Brand	YUSIWOAL
Net Weight	132g
Body Size	15.5 x 4 x 4 cm
Charging Time	1.5 hours
Use Time	90 minutes
Voltage	100V-240V
Power	5W
Power Supply Mode	Universal USB rechargeable
Cleaning Method	Whole body washable with water
Blade Material	Stainless Steel

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. You may also visit the official YUSIWOAL website for further assistance.

Please note that statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a personal grooming appliance.