

- Manuals.plus /
- › LEADZM /
- › LEADZM Set of 3 Travel Suitcases User Manual (White Cream-Brown)

LEADZM Set de 3

LEADZM Set of 3 Travel Suitcases User Manual

Model: Set de 3 (White Cream-Brown)

1. INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your LEADZM Set of 3 Travel Suitcases. This set includes three sizes: 20-inch (cabin), 24-inch (medium), and 28-inch (large), designed for various travel needs.

The suitcases are constructed from durable ABS material with reinforced corners, equipped with 360° spinner wheels, a telescopic handle, and a 3-digit combination lock for security.

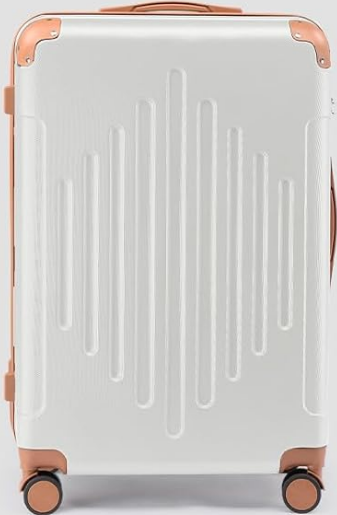 


Image 1.1: The LEADZM Set of 3 Travel Suitcases, showcasing the White Cream-Brown color and design.

2. PRODUCT FEATURES

- **Three-Piece Set:** Includes 20-inch (cabin), 24-inch (medium), and 28-inch (large) suitcases to accommodate different travel durations and requirements.
- **Durable ABS Material:** Constructed from high-quality Acrylonitrile Butadiene Styrene (ABS) for durability, shock resistance, and scratch resistance. Reinforced corners provide additional protection.
- **360° Spinner Wheels:** Each suitcase features four ultra-quiet, multi-directional spinner wheels for smooth and effortless mobility.
- **Telescopic Handle:** A robust, adjustable telescopic handle with multiple locking positions for comfortable maneuvering.
- **Integrated Combination Lock:** A 3-digit combination padlock is included on each suitcase to secure your belongings.

- **Organized Interior:** The interior features crossed elastic straps to secure contents, a zippered compartment, and a mesh pocket for efficient organization.
- **Stackable Design:** The suitcases are designed to nest within each other for compact storage when not in use.

28 inch	24 inch	20 inch
		
75x48x28 cm	65x40x26 cm	55x35x22 cm



Size Reference

Image 2.1: Size reference for the 20-inch, 24-inch, and 28-inch suitcases, showing their relative dimensions.



Strong load-bearing capacity



Exquisite and elegant appearance




Moveing easily

Image 2.2: Detail of the 360-degree silent and sturdy spinner wheels, highlighting their design and functionality.

Every opening and closing is an encounter with craftsmanship.



 zippered Compartment

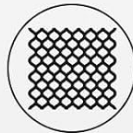

Mesh Pocket



Elastic Cross Strap

Image 2.3: Interior view of a suitcase, illustrating the zippered compartment, mesh pocket, and elastic cross straps for organized packing.

3. SETUP INSTRUCTIONS

3.1 Unpacking

1. Carefully remove all suitcases from their packaging.
2. Remove any protective films or tags.
3. Inspect each suitcase for any signs of damage. If damage is found, contact customer support immediately.
4. The smaller suitcases are nested inside the larger ones for shipping. Open the largest suitcase to access the others.

3.2 Setting the Combination Lock

Your suitcase comes with a preset combination of 0-0-0. To set your personal combination:

1. Ensure the lock is set to the default combination (0-0-0) and open the lock.
2. Locate the reset button (a small, recessed button, usually on the side or bottom of the lock). Use a pen or a pointed object to press and hold this button until you hear a click.

3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. You should hear another click, indicating the new combination is set.
5. Scramble the dials to test your new combination. Ensure it opens only with your chosen code.

Important: Remember your combination. There is no master key or override function.

4. OPERATING INSTRUCTIONS

4.1 Using the Telescopic Handle

- To extend the handle, press the button located on the top of the handle and pull upwards.
- The handle can be locked at multiple heights for comfortable use by travelers of different statures.
- To retract the handle, press the button again and push the handle downwards until it is fully recessed.

■ Robust and Customizable

3 adjustable levels

Telescoping handle



Image 4.1: Illustration of the adjustable telescopic handle, showing its three customizable levels for user comfort.

4.2 Using the Spinner Wheels

The 360° spinner wheels allow for effortless movement in any direction. You can push, pull, or roll the suitcase alongside you, reducing strain on your arm and shoulder.

- For smooth gliding, ensure the suitcase is upright on all four wheels.
- Avoid dragging the suitcase on only two wheels for extended periods, as this can cause uneven wear and damage to the wheels.

4.3 Packing Your Suitcase

- Utilize the elastic cross straps to secure clothing and prevent shifting during transit.
- Place heavier items at the bottom (near the wheels) to maintain balance.
- Use the zippered compartment and mesh pocket for smaller items, toiletries, or documents.
- Do not overpack the suitcase, as this can strain zippers and seams, and may exceed airline weight limits.

4.4 Locking and Unlocking

- To lock, align the zipper pulls with the lock mechanism, enter your 3-digit combination, and press the release button (if applicable) to secure the pulls. Scramble the dials to lock.
- To unlock, enter your 3-digit combination and press the release button to release the zipper pulls.

5. MAINTENANCE

5.1 Cleaning the Exterior

- Wipe the ABS shell with a soft cloth dampened with mild soap and water.
- Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.
- Dry thoroughly with a clean, dry cloth.

100% ABS Material

- 1 Robust ABS Composition
- 2 Strong Stress Test Passed
- 3 Comprehensive protection

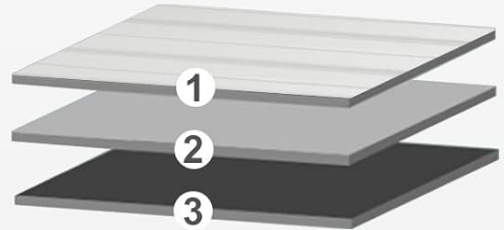


Image 5.1: Visual representation of the 100% ABS material, emphasizing its robust composition, stress test performance, and comprehensive protection against impacts.

5.2 Wheel and Handle Care

- Periodically check wheels for debris (hair, lint) and remove them to ensure smooth rolling.
- If wheels become stiff, a small amount of silicone-based lubricant can be applied to the axle.
- Ensure the telescopic handle extends and retracts smoothly. Do not force it if it gets stuck.

5.3 Interior Care

- Wipe the interior lining with a damp cloth and mild soap if necessary.
- Allow the interior to air dry completely before closing the suitcase to prevent mildew.

5.4 Storage

When not in use, store the suitcases in a clean, dry place. The stackable design allows for compact storage by nesting the smaller suitcases inside the larger ones.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Combination Lock will not open.	Incorrect combination entered or combination forgotten.	Ensure the correct 3-digit combination is entered. If forgotten, there is no master key; you may need to try common combinations or contact customer support for advice (though typically, forgotten combinations cannot be reset without the original code).
Telescopic Handle is stuck or difficult to extend/retract.	Debris in the mechanism, bent handle tubes, or excessive force applied.	Check for any visible obstructions and remove them. Ensure the button is fully pressed. Do not force the handle. If bent, contact customer support.
Wheels are not rolling smoothly or are jammed.	Debris (hair, dirt) caught in the wheels, damaged wheel, or lack of lubrication.	Clean any debris from the wheels. Apply a small amount of silicone lubricant to the wheel axles. If a wheel is visibly damaged, contact customer support.
Zippers are difficult to move or snag.	Fabric caught in the zipper, or zipper teeth are misaligned.	Carefully pull any fabric away from the zipper path. Apply a small amount of zipper lubricant (e.g., wax or silicone spray) to the zipper teeth. Avoid overpacking.

7. SPECIFICATIONS

Brand	LEADZM
Model	Set de 3
Material Type	Acrylonitrile Butadiene Styrene (ABS)
Shell Type	Hard
Color	White Cream-Brown
Wheel Type	Spinner (4 wheels per suitcase)
Lock Type	3-Digit Combination Lock
Handle Type	Telescopic Extendable Handle
Included Components	3 piece suitcase set (20 inches, 24 inches, 28 inches)
Approximate Dimensions (L x W x H)	• 20-inch: 55 x 35 x 22 cm (21.65" x 13.78" x 8.66") • 24-inch: 65 x 40 x 26 cm (25.59" x 15.75" x 10.24") • 28-inch: 75 x 48 x 28 cm (29.53" x 18.90" x 11.02")
Approximate Weight (Each)	• 20-inch: 2.7 kg (5.95 lbs) • 24-inch: 3.2 kg (7.05 lbs) • 28-inch: 4 kg (8.82 lbs)

Total Set Weight	9.9 kg (21.83 lbs)
------------------	--------------------

8. WARRANTY AND SUPPORT

LEADZM products are manufactured to high-quality standards. For specific warranty information, please refer to the documentation included with your purchase or contact the retailer where the product was acquired.

If you encounter any issues or have questions regarding your LEADZM Set of 3 Travel Suitcases, please contact the seller or manufacturer's customer support for assistance. When contacting support, please have your purchase details and product model information (LEADZM Set de 3, White Cream-Brown) available.

For general inquiries or to find more information about LEADZM products, please visit the official brand website or the retailer's product page.

© 2026 LEADZM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DZCZC4HG>

More documents and user manuals: <https://manuals.plus/>