

Invicta ACW8082-006

Invicta Digital Essentials Digital Watch ACW8082-006 User Manual

Model: ACW8082-006

INTRODUCTION

Thank you for choosing the Invicta Digital Essentials Digital Watch, model ACW8082-006. This manual provides detailed instructions for setting up, operating, and maintaining your new timepiece. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

1. INITIAL SETUP

1.1. Watch Overview and Button Functions

Familiarize yourself with the watch's layout and button functions:

- **LIGHT (Top Left):** Activates the backlight for visibility in low-light conditions.
- **MODE (Bottom Left):** Cycles through different modes such as Time, Alarm, and Chronograph (Stopwatch).
- **SPORT (Middle Left):** May have specific functions depending on the active mode, often related to sport timing or data display.
- **START (Top Right):** Used to start or increment values during setting, or to start the chronograph.
- **RESET (Bottom Right):** Used to reset values during setting, or to stop and reset the chronograph.



This image displays the Invicta Digital Essentials Digital Watch, model ACW8082-006. The watch features a digital display showing '7:42:18' and '3-15 WE' (March 15, Wednesday). Key buttons are visible: 'LIGHT' on the top left, 'MODE' on the bottom left, 'SPORT' on the middle left, 'START' on the top right, and 'RESET' on the bottom right. The watch has an army green resin band and a black plastic/resin case. Text on the watch face includes 'WATER RESIST', however, please refer to the specifications for actual water resistance level.

1.2. Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until you enter the time setting mode (often indicated by flashing digits).
2. Use the **START** button to adjust the flashing digit (hours, minutes, seconds, month, day, year).
3. Press the **RESET** button to move to the next digit or setting field.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode and return to the normal time display.

2. OPERATING YOUR WATCH

2.1. Time Display

In the default mode, your watch displays the current time, including hours, minutes, seconds, and the date (month, day, and day of the week).

2.2. Using the Chronograph (Stopwatch)

1. Press the **MODE** button until you reach the Chronograph mode (often indicated by 'CHRONO' or 'STW' on the display).
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the timing.
4. Press the **RESET** button to clear the stopwatch to zero.

2.3. Alarm Function

To set the alarm:

1. Press the **MODE** button until you reach the Alarm mode.
2. Press and hold the **RESET** button (or **MODE**, depending on the specific model) to enter alarm setting mode.
3. Use the **START** button to adjust the hour and minute digits.
4. Press the **RESET** button to move between hour and minute settings.
5. Press the **MODE** button to exit alarm setting.

To activate/deactivate the alarm, typically press the **START** button while in Alarm mode.

2.4. Backlight

Press the **LIGHT** button (top left) to illuminate the display for a few seconds, allowing you to read the time in dark environments.

3. CARE AND MAINTENANCE

3.1. Cleaning

Wipe your watch regularly with a soft, dry cloth to remove dirt and dust. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and components.

3.2. Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and functionality.

3.3. Water Resistance

Important Note: Despite any markings on the watch face, the official product specifications state that this watch is **NOT** water resistant. To prevent damage, avoid all exposure to water, including rain, splashes, showering, swimming, or submersion.

4. TROUBLESHOOTING

4.1. Display is Blank or Faint

- The battery may be low or depleted. Consider battery replacement.

- Ensure the watch has not been exposed to extreme temperatures.

4.2. Time is Incorrect

- Re-set the time and date following the instructions in Section 1.2.
- Check if the watch has been subjected to strong magnetic fields, which can affect accuracy.

4.3. Buttons Not Responding

- Check for any debris or foreign objects lodged around the buttons.
- A low battery can sometimes affect button responsiveness.

If these steps do not resolve the issue, please contact customer support.

5. PRODUCT SPECIFICATIONS

Model Number	ACW8082-006
Display Type	Analog-Digital
Watch Movement Type	Quartz
Power Source	Battery Powered
Water Resistance Level	Not Water Resistant
Additional Features	Scratch Resistant
Band Material Type	Resin (<i>Note: Product image and included components indicate resin band, despite other listed material types.</i>)
Case Material Type	Plastic/Resin (<i>Note: Product image indicates plastic/resin case, despite other listed material types.</i>)
Crystal	Mineral Glass
Clasp Type	Buckle
Department	Unisex-Adult
Item Weight	0.15 Kilograms

6. WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your purchase or contact Invicta customer service directly. Warranty terms and conditions may vary by region and retailer.

7. CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact your retailer or visit the official Invicta website for support. Please have your watch model number (ACW8082-006) ready when contacting support.

