

SVAKOM Echo 2

SVAKOM Echo 2 Finger Vibrator User Manual

Model: Echo 2 (5406480000)

1. INTRODUCTION

Thank you for choosing the SVAKOM Echo 2. This device is designed to provide external stimulation with its unique finger-worn design, offering both vibration and heating functions. It is app-compatible, waterproof, and rechargeable, ensuring a versatile and convenient experience. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image 1: The SVAKOM Echo 2 Finger Vibrator, shown in a light blue color, featuring its ergonomic, curved design and control buttons.

2. IMPORTANT SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the device:

- Do not use if the device appears damaged.
- Keep out of reach of children.
- Consult a healthcare professional before use if you have any medical conditions or concerns.
- Discontinue use immediately if you experience any discomfort or pain.
- Use only water-based lubricants with this device. Oil-based lubricants may damage the silicone material.
- Do not expose the device to extreme temperatures or direct sunlight for prolonged periods.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- SVAKOM Echo 2 Finger Vibrator
- USB Charging Cable

- User Manual (this document)
- Storage Pouch (may vary by region)

4. PRODUCT OVERVIEW


The SVAKOM Echo 2 features a flexible, curved design intended to be worn on the finger. It incorporates a textured finger sleeve for enhanced sensation and easy handling.



Image 2: Close-up of the SVAKOM Echo 2 showing the control buttons (heating and vibration) and the USB charging port at the base. Battery indicator lights are also visible.

スリーブ螺旋
デザイン

ECHO2
おしゃれやつ

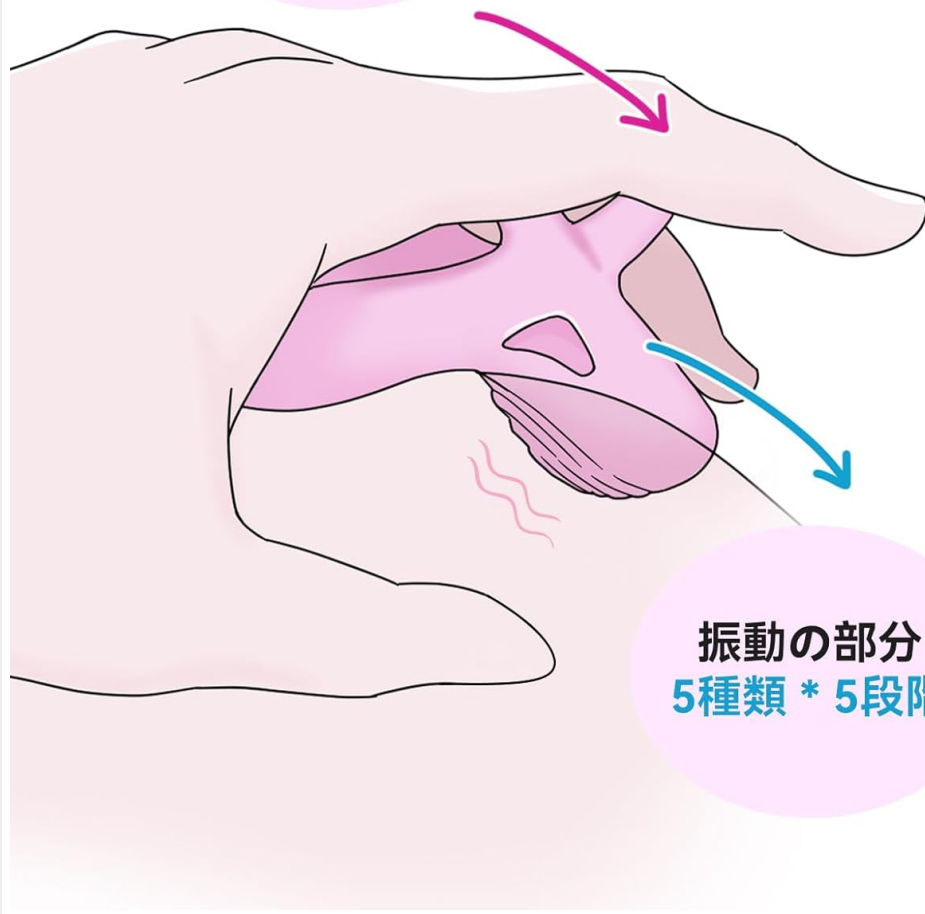

アプリ遠隔操作



バッテリー残量ライト



柔らかい液状シリコン

Image 3: Illustration of the SVAKOM Echo 2 being worn on a finger, highlighting the removable, stretchy finger sleeve and the textured vibration area designed for external stimulation.

- **Power/Vibration Button:** Controls power on/off and vibration modes.
- **Heat Button:** Activates and deactivates the heating function.
- **LED Indicators:** Display battery status and operational mode.
- **Charging Port:** Located at the base, for USB charging.
- **Finger Sleeve:** Removable and stretchy, designed for comfortable wear and secure fit.

5. CHARGING THE DEVICE

Before first use, fully charge the SVAKOM Echo 2. The device uses a rechargeable Lithium-Ion battery.

1. Locate the charging port at the base of the device.
2. Connect the provided USB charging cable to the device's charging port.
3. Connect the other end of the USB cable to a USB power source (e.g., computer, USB wall adapter).
4. The LED indicators will illuminate to show charging progress. They will typically stop blinking or change color when fully charged.
5. A full charge usually takes approximately 2-3 hours.
6. Disconnect the cable once charging is complete.

Note: The device features convenient battery lights to indicate remaining power.

6. SETUP AND APP PAIRING

6.1 Initial Setup

Ensure the device is fully charged before initial use. Clean the device as described in the "Maintenance" section.

6.2 App Pairing

The SVAKOM Echo 2 can be controlled via the SVAKOM App, offering extended features and customization.

1. Download the "SVAKOM App" from your device's app store (iOS App Store or Google Play Store).
2. Ensure your smartphone's Bluetooth is enabled.
3. Turn on the SVAKOM Echo 2 by pressing and holding the Power/Vibration button until the LED indicators light up.
4. Open the SVAKOM App and follow the on-screen instructions to search for and connect to your Echo 2 device.
5. Once paired, you can control vibration patterns, intensity, and heating functions directly from the app.

おしゃれな指型

振動加熱 

バイブ

アプリ遠隔操作

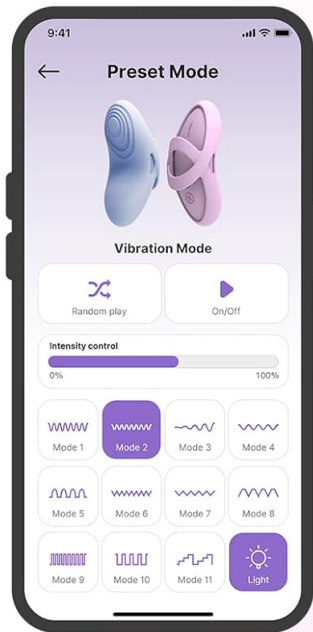 


Image 4: Screenshot of the SVAKOM App interface, showing various vibration modes, intensity control, and options for solo or partnered play.

7. OPERATING THE DEVICE

7.1 Basic Operation (Manual Control)

To use the SVAKOM Echo 2, slip the device onto your finger. The curved design and textured ridges are intended for external stimulation.

ECHO2 おしゃれやつ



工夫されたデザイン
肌の表面より
も深いところまで届く

ちょっといい角度
螺旋波紋隆起

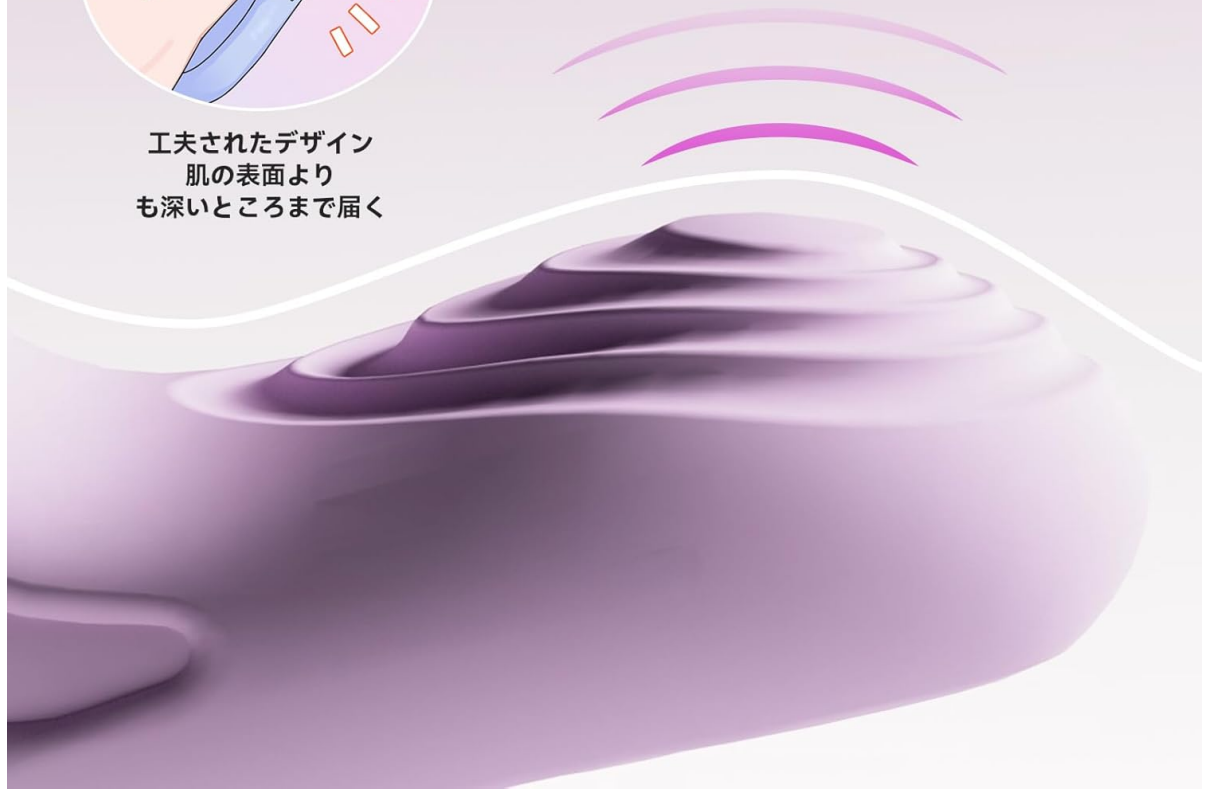 


Image 5: Close-up view of the SVAKOM Echo 2's textured surface, showing the spiral ridges designed to enhance sensation during use.

- **Power On/Off:** Press and hold the Power/Vibration button for 2 seconds.
- **Change Vibration Mode:** While powered on, short press the Power/Vibration button to cycle through available vibration patterns.
- **Activate/Deactivate Heat:** Press and hold the Heat button for 2 seconds to turn the heating function on or off. The device heats to approximately 38°C.

7.2 App Control

Once paired with the SVAKOM App, you can access advanced controls:

- **Custom Vibration Patterns:** Create and save your own vibration sequences.
- **Intensity Adjustment:** Precisely control vibration intensity via a slider.
- **Long-Distance Play:** Connect with a partner for remote control.
- **Memory Function:** The device remembers your last used settings.
- **Travel Lock:** Activate the travel lock feature via the app or by pressing and holding both buttons simultaneously for 3 seconds to prevent accidental activation during travel.



Image 6: The SVAKOM Echo 2 highlighting its memory function, which recalls previous settings, and the travel lock feature for secure transport, preventing accidental activation.

8. MAINTENANCE

8.1 Cleaning

The SVAKOM Echo 2 is waterproof, making cleaning simple and hygienic.

1. After each use, wash the device with warm water and a mild, toy-safe soap.
2. Rinse thoroughly to remove all soap residue.
3. Pat dry with a lint-free cloth or allow to air dry completely before storage.
4. The finger sleeve can be removed for separate cleaning if desired.

8.2 Storage

Store the device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or travel lock activated.	Charge the device. Deactivate travel lock by pressing and holding both buttons for 3 seconds.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device fully.
Device does not connect to app.	Bluetooth off, device not on, or app issue.	Ensure Bluetooth is on. Turn device on. Restart app and device. Try re-pairing.
Heating function not working.	Not activated or low battery.	Press and hold the Heat button. Ensure device is charged.

10. SPECIFICATIONS

- **Model:** Echo 2
- **Item Model Number:** 54064800000
- **Material:** Body-safe Silicone
- **Battery:** Rechargeable Lithium-Ion
- **Charging:** USB (2.5mm cable)
- **Waterproof:** Yes
- **Heating Temperature:** Up to 38°C
- **App Compatibility:** SVAKOM App (iOS/Android)
- **Dimensions:** Approximately 5.71 x 3.07 x 2.44 inches
- **Weight:** Approximately 7.76 ounces

11. WARRANTY AND SUPPORT

For warranty information, product support, or to contact customer service, please visit the official SVAKOM website or refer to the warranty card included with your purchase. You may also contact your retailer for assistance.

Manufacturer: SVAKOM

Website: www.svakom.com (Note: This is a placeholder URL, please refer to actual product packaging for official support channels.)