

[Manuals.plus](#) /

› [Sonew](#) /

› Sonew Hair Dryer Brush Instruction Manual

Sonew HZU-Sonew-JM08518-02

Sonew Hair Dryer Brush Instruction Manual

Model: HZU-Sonew-JM08518-02

1. INTRODUCTION

Thank you for choosing the Sonew Hair Dryer Brush. This innovative styling tool combines the functions of a hair dryer, straightener, and detangler into a single, convenient device. Designed to reduce frizz and provide smooth, salon-quality results, this manual provides essential information for safe and effective use, maintenance, and troubleshooting.



Image 1.1: The Sonew Hair Dryer Brush, showcasing its design and how it is held during use.

One-Step Dryer & Styler



Image 1.2: Visual representation of the Sonew Hair Dryer Brush's multi-functional capability, combining drying, straightening, and detangling into one tool.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury to persons, always follow basic safety precautions when using electrical appliances.

- Do not use this appliance near water or while bathing.
- Always unplug the appliance immediately after use.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
- Do not use an extension cord with this appliance.
- Always ensure the voltage (110 volts) and wattage (1000 watts) match your power supply.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. (Note: This disclaimer is from the product information and may not be directly relevant to the hair dryer brush, but is included as per

3. PRODUCT FEATURES

The Sonew Hair Dryer Brush is engineered with several features to enhance your hair styling experience:

- **Less Damage:** Combines drying and smoothing functions to style hair in one step, reducing heat exposure.
- **Ionic Smooth Frizz:** Utilizes negative ion technology to neutralize hair's charge, resulting in smoother, shinier hair with reduced frizz and static.
- **Comfortable Design:** Features a large paddle design for efficient drying and smoothing, flexible padding, and a lightweight build (approximately 0.9 pounds) for easy handling.
- **3 Temperature Settings:** Offers Low, High, and Cool settings for versatile styling suitable for various hair types.
- **Ergonomic Handle:** Designed for a non-slip grip and comfortable use.
- **360° Swivel Cord:** Provides flexibility and prevents tangling during use.

Innovation Design Makes Styling Easier


Large paddle brush & air holes, dries and smooths hair quickly
One step styling with less heat-related damage




Image 3.1: Depiction of the negative ion technology at work, showing how it contributes to smoother, frizz-free hair.

Ionic Technology

Negative ions help smooth hair and reduce frizz for shiny hair

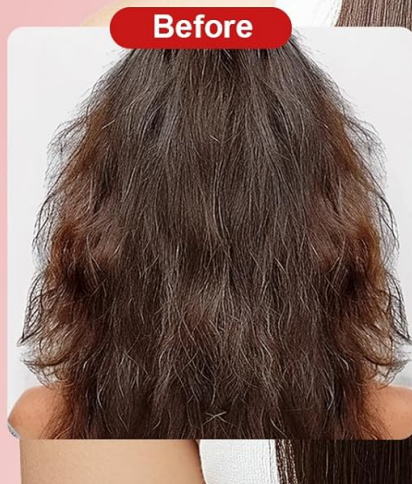

Before

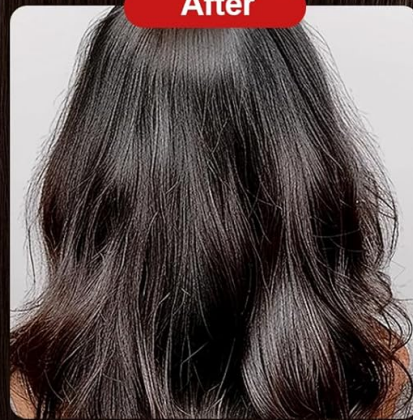

After

Image 3.2: Overview of the three temperature settings available on the device, allowing for customized styling based on hair type.



Image 3.3: Features contributing to the brush's lightweight and comfortable design, including detangling bristles and the swivel cord.

4. SETUP

1. **Unboxing:** Carefully remove the Sonew Hair Dryer Brush from its packaging. Inspect the device for any visible damage.
2. **Power Connection:** Ensure your hands are dry. Plug the power cord into a standard 110-volt electrical outlet.
3. **Hair Preparation:** For best results, use the hair dryer brush on damp, towel-dried hair. You may pre-dry your hair roots with a high-speed hair dryer if desired.

5. OPERATING INSTRUCTIONS

Follow these steps for effective styling:

1. **Turn On:** Rotate the control dial located at the base of the handle to select your desired setting:
 - **COOL:** Low heat with high speed, ideal for fine/short hair or setting a style.
 - **LOW:** Warm heat and low speed, suitable for normal hair.
 - **HIGH:** Hot heat and high speed, recommended for thick, coarse hair and quick drying.

2. **Section Hair:** Divide your damp hair into manageable sections using clips.
3. **Styling:** Place the brush close to the roots of a hair section and glide it downwards towards the ends. The large paddle design allows for quick drying and smoothing. Repeat until the section is dry and smooth.
4. **Detangling:** The detangling bristles help to smooth out knots as you style.
5. **Turn Off:** Once styling is complete, rotate the control dial to the "OFF" position and unplug the appliance from the outlet.

3 Temp Settings

suitable for all hair types



COOL

Low heat with high speed
for fine hair/short hair



LOW

Warm heat and low speed
for normal hair



HIGH

Hot heat and high speed for
thick coarse hair/ quick drying

Image 5.1: The hair dryer brush in action, illustrating its ergonomic design and how it simplifies the styling process.

6. MAINTENANCE AND CARE

Proper care ensures the longevity and performance of your Sonew Hair Dryer Brush:

- **Cleaning:** Ensure the appliance is unplugged and completely cool before cleaning. Use a soft, damp cloth to wipe the body of the brush. Remove any hair tangled in the bristles regularly. Do not immerse the appliance in water.
- **Storage:** Store the brush in a cool, dry place, away from direct sunlight and moisture. Do not wrap the cord tightly around the appliance, as this can damage the cord. Use the 360° swivel cord feature to prevent tangles during storage.
- **Air Vents:** Periodically check and clean the air intake and exhaust vents to prevent dust and hair

buildup, which can affect performance.

7. TROUBLESHOOTING

If you encounter issues with your Sonew Hair Dryer Brush, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; internal fault.	Ensure the plug is fully inserted into a working outlet. Test the outlet with another appliance. If still not working, contact customer support.
No heat or insufficient heat.	Incorrect temperature setting; blocked air vents; internal heating element issue.	Check that the control dial is set to LOW or HIGH. Clean any blockages from the air vents. If the problem persists, discontinue use and contact support.
Excessive frizz after use.	Hair not damp enough; improper technique; product buildup on bristles.	Ensure hair is towel-dried and damp, not soaking wet or completely dry. Glide the brush slowly and evenly through sections. Clean the bristles thoroughly.
Unusual noise or smell.	Internal malfunction; debris inside.	Immediately unplug the appliance. Do not attempt to repair. Contact customer support.

If the problem persists after attempting these solutions, please contact Sonew customer support.

8. SPECIFICATIONS

- **Model Number:** HZU-Sonew-JM08518-02
- **Product Dimensions:** 1 x 1 x 1 inches
- **Weight:** 1.1 Pounds
- **Brand:** Sonew
- **Color:** Black
- **Material:** Plastic
- **Wattage:** 1000 watts
- **Bulb Voltage:** 110 volts
- **Power Source:** Corded Electric

9. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the warranty card included with your product or visit the official Sonew website. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance or inquiries, please contact Sonew customer service through the contact information provided on the product packaging or the official brand website.

