

[Manuals.plus](#) /

› [Hesitroad](#) /

› Hesitroad Cordless String Trimmer User Manual

Hesitroad B0DZGYHY2S

Hesitroad Cordless String Trimmer User Manual

Model: B0DZGYHY2S

INTRODUCTION

Thank you for choosing the Hesitroad Cordless String Trimmer. This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your new tool. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Always wear safety glasses and gloves when using. Keep bystanders at a safe distance to avoid injury from flying debris. Do not operate if the blade is damaged or if the guard is missing. Always unplug or remove the battery before performing any maintenance or cleaning.

General Safety Rules:

- Familiarize yourself with how to control and operate this equipment correctly.
- The cutting part will continue to rotate after the motor is turned off.
- Do not allow children or people who are not familiar with these instructions to use this machine. Local regulations restrict operators' age.
- Do not have anyone (especially children) or pets nearby. Use this machine in the case.
- It can only be used with sufficient light or good lighting. Please avoid bad weather, especially thunder and lightning.
- Before using the machine or after the machine is hit, check for worn or damaged parts. If necessary, repair.
- Be careful not to be scratched by the lawn mowing equipment.
- After cutting the wire, be sure to restore the device before turning it on.
- Return to the normal operation position.
- Never install metal cutting parts unless specified for the model.
- This equipment shall not be provided by persons who are not familiar with the operation instructions (including children) and physical, sensory and mental inadequacy. Or use by someone who lacks experience and knowledge, except by. The personal responsible for their safety enter them when they are in use.
- Under supervision and guidance. Take good care of the children and don't let them go. Play this tool.
- Be extremely cautious when using tools.
- Please only operate in good physical condition tools. Do everything calmly and carefully. Use common sense and

keep in mind, if you give others to.

- Don't be tired, physically uncomfortable or drink or take medicine. In the case, the operation tool.
- If the tool shows signs of failure, it should be turned off immediately. Close the tool.
- Do not operate tools and move between operation positions. When, keep your finger away from the switch trigger.

Personal Protection:

- Always wear goggles when using electric tools. Avoid hurting the eyes. The goggles must comply with the ANSI of the United States. Z87.1, European EN166 or Australia/New. The provisions of AS/NZS 1336 in Zealand. At the University of Australia Lawn/New Zealand, the law requires wearing a mask for protection. The face.
- Pay attention to the clothes. Dressing should be practical and appropriate, if it should be worn. Clothes that are tight but should not interfere with operation. Do not wear jewelry or clothing that may be entangled with Grass Service. Wear a protective helmet to protect long hair.
- When using tools, be sure to wear a mat with a non-slip bottom. Real boots. This can avoid injury and ensure a foothold. Stable.

Electrical and Battery Safety:

- Avoid dangerous environments. Do not be wet or wet with rain rings. Use tools in the context. The dampness of the tool will increase electric shock. Danger.
- Please charge only with the charger specified by the manufacturer. Electricity will charge for a certain type of battery pack. When the device is used in other types of battery packs, it may lead to Caused a fire.
- Power tools can only use specially designated battery packs. Using other types of batteries may cause people to injury or fire.
- When you don't use the battery pack, please keep it away from paper clips and hand. Coins, keys, nails, screws or other small metals. The placement of these objects may cause the battery terminal to Short circuit. These objects may shorten the battery terminals. Read, causing a burning or fire.
- Do not place the battery pack in water or make it wet. The short circuit of the battery will generate a large current, resulting in overheating. It may cause fire or even be blown.
- Do not put tools and batteries at temperatures that may reach or more than 50°C (122°F).
- Even if the battery pack is not badly damaged or completely worn, please do not burn the battery pack. The battery pack will be in the fire. Explosion.
- Be careful not to hit or drop the battery.
- Do not use a damaged battery.
- Lithium-ion batteries included with this tool need to be eligible for dangerous goods. Regulatory requirements. When a third party or transshipment agent carries out commercial transportation. Special packaging and marking requirements should be followed. Preparation of transportation projects, consultation or dangerous goods. Professionals in the field. At the same time, please abide by the possible detailed national regulations.
- Please use type protected contact letters that do not cover the surface. Breath and security. Encapsulate the battery so that it is in the package. Move.
- For discarding discarded batteries, please follow the local regulations.

PRODUCT COMPONENTS AND OVERVIEW

Your Hesitroad Cordless String Trimmer comes with several components designed for efficient and versatile lawn maintenance.



Figure 1: Overview of the Hesitroad Cordless String Trimmer and its included accessories, such as safety gear, different cutting blades (plastic, metal, saw blade), and two rechargeable batteries.



Figure 2: Detail of the handle with the double switch mechanism, designed to enhance user safety by preventing accidental activation.



Figure 3: The adjustable button on the trimmer head allows for 180-degree angle adjustments, making it suitable for various trimming scenarios.



Figure 4: The telescopic pole design allows for easy length adjustment, providing greater comfort and adaptability for users of different heights and postures.



Figure 5: Product dimensions: 140cm (55.1in) total length and 25cm (9.8in) cutting width, illustrating its compact and portable design.

Key Features:

- **Spacer Guard:** Protects flowers and lawn ornaments from accidental damage during trimming.
- **Adjustable Length:** Telescopic pole for user height and posture customization.
- **Portable Electric Lawn Mower:** Lightweight, high efficiency, energy-saving, and easy to operate. Foldable design for convenient use and storage.
- **Detachable Auxiliary Wheel:** Transforms the string trimmer into a lawn mower for versatile use.
- **Safety Lock Design:** Prevents accidental activation.
- **Grass Baffle:** Prevents splash during operation.
- **Ergonomic Design:** Enhances comfort and efficiency during use.

SETUP AND ASSEMBLY

Follow these steps to assemble your Hesitroad Cordless String Trimmer. Ensure the battery is removed before assembly.

1. **Attach the Handle:** Secure the auxiliary handle to the main shaft at a comfortable position using the provided fasteners.
2. **Connect the Telescopic Pole:** Extend the telescopic pole to your desired length and secure it firmly. Refer to Figure 4 for visual guidance.
3. **Install the Guard:** Attach the protective grass baffle/guard to the trimmer head assembly. Ensure it is securely fastened to prevent debris splash.
4. **Select and Install the Blade:**

- For plastic blades: Align the plastic blade with the mounting point on the trimmer head and snap it into place.
- For metal blades or saw blade: Place the chosen metal blade onto the spindle.
- Secure the blade with the provided nut and washer. Tighten the nut firmly using a wrench. Refer to the diagram below for blade installation.

5. Attach Auxiliary Wheels (Optional): If using the trimmer as a lawn mower, attach the detachable auxiliary wheels to the designated points on the trimmer head assembly.

6. Insert Battery: Once assembly is complete, insert a fully charged 21V battery into the battery slot on the handle until it clicks into place.

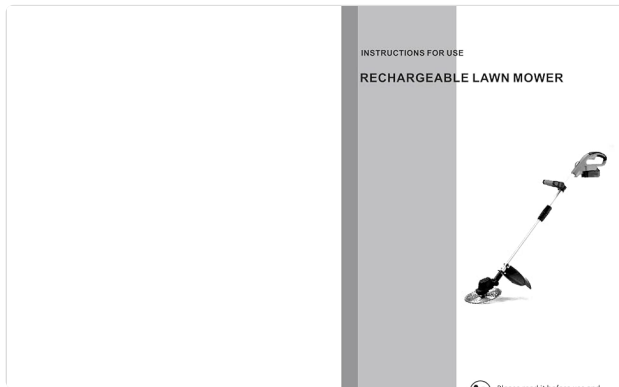


Figure 6: Step 1: Insert the blade onto the spindle.

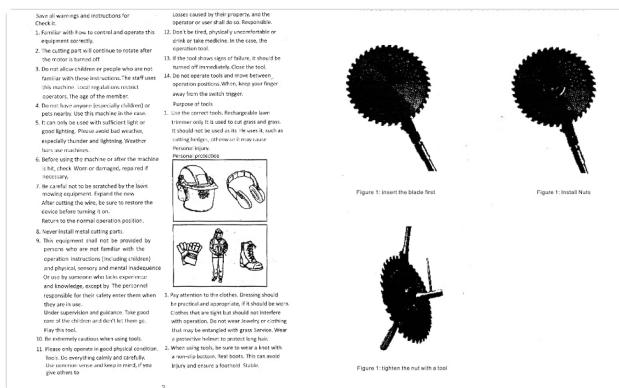


Figure 7: Step 2: Install the nut to secure the blade firmly.

OPERATION

Before Starting:

- Ensure all components are securely assembled and the battery is fully charged.
- Wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and sturdy footwear.
- Clear the work area of any obstacles, debris, or bystanders.

Starting and Stopping:

- To start: Press the safety lock button (if applicable) and then squeeze the trigger switch.
- To stop: Release the trigger switch. The blade will continue to spin for a short period before stopping completely.

Trimming Techniques:

For optimal results and safety, use the following techniques:



Figure 8: The 21V brushless motor provides strong power for efficient grass cutting with the 10-inch blade.



Figure 9: The detachable auxiliary wheels allow the trimmer to be used as a portable lawn mower, making work easier and more efficient.

- **Pruning Grass:** Catch the lawn mower at an angle of about 30-50 degrees from the ground. Follow the contour of the ground. Move the cloud straw machine slowly from right to left, with a nylon rope or the blade is trimmed several times from the top of the grass.
- **Note:** Don't try to make it from the roots of the tall grass. One-time trimming. Repair it at one time near the root. Cutting tall grass may cause nylon to hit the grass or a plastic knife. The opening of the film is entangled in grass. This will cause the motor to be overloaded and melt. In the end, the lawn measuring machine was damaged.
- **Trimming around obstacles:** Trim close to trees, bricks, tanks, or stones. Hold and tilt the lawn mower at a certain height. Do not use the spool or the material knife head touches the ground. Use the end of material or nylon rope. The blade trims the grass with an action similar to hitting the ground.
- **Do not trim too deep:** Avoid digging into the soil, which can damage the blade and motor.
- **Do not force it in overly dense grass:** If the grass is too thick, take smaller passes or consider using a more robust blade type.

Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your string trimmer. Always remove the battery before performing any maintenance.

- **Cleaning:** After each use, clean the trimmer head, guard, and housing with a damp cloth. Remove any grass clippings, dirt, or debris. Do not use harsh chemicals or abrasive cleaners.
- **Blade Inspection:** Regularly inspect the cutting blade (plastic, metal, or saw blade) for wear, damage, or dullness. Replace worn or damaged blades immediately.
- **Guard Inspection:** Ensure the grass baffle/guard is intact and securely attached. A damaged or missing guard can pose a safety risk.
- **Battery Care:**
 - Charge batteries in a well-ventilated area, away from flammable materials.
 - Do not expose batteries to extreme temperatures or moisture.
 - Store batteries in a cool, dry place when not in use.
 - If the battery is damaged or leaking, dispose of it properly according to local regulations.
- **Storage:** Store the trimmer in a dry, secure location, out of reach of children. If storing for an extended period, remove the battery.

Troubleshooting

If you encounter issues with your Hesitroad Cordless String Trimmer, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Trimmer does not start.	• Battery not inserted correctly or not charged. • Safety lock not engaged. • Trigger switch faulty.	• Ensure battery is fully charged and properly seated. • Press the safety lock button before squeezing the trigger. • Contact customer service for assistance.
Blade does not spin or spins slowly.	• Blade is jammed by grass or debris. • Blade is damaged or worn. • Battery charge is low.	• Remove battery, then clear any obstructions from the blade area. • Replace the blade. • Recharge the battery.
Excessive vibration during operation.	• Blade is unbalanced or damaged. • Loose components.	• Inspect and replace the blade if necessary. • Check all fasteners and tighten any loose parts.

Problem	Possible Cause	Solution
Short battery life.	- Battery not fully charged. - Battery is old or damaged. - Operating in very dense grass.	- Ensure battery is fully charged before use. - Consider replacing the battery. - Adjust trimming technique for dense areas.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Hesitroad
Model	B0DZGYHY2S
Item Weight	4500 Grams (9.92 pounds)
Cutting Width	9 Inches
Speed	7000 RPM
Number of Items	1
Size	Orange

WARRANTY AND CUSTOMER SUPPORT

Hesitroad is committed to providing you with the best shopping experience possible. While specific warranty details are not provided in this manual, we encourage you to contact us directly for any questions or problems with your tool.

Contact Information: Please refer to your purchase documentation or the Hesitroad official website for the most current customer service contact details.

We are always ready to help you solve any problems you may encounter.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DZGYHY2S>

More documents and user manuals: <https://manuals.plus/>