

Trimmer Plus Zero Gap

Generic Trimmer Plus Zero Gap Hair Clipper User Manual

Model: Trimmer Plus Zero Gap

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Generic Trimmer Plus Zero Gap Hair Clipper. Please read this manual thoroughly before first use and keep it for future reference. This device is designed for personal hair trimming and styling.

2. SAFETY INFORMATION

- Keep the appliance dry. Do not use it near water or in wet conditions.
- Do not disassemble the unit. For repairs, contact qualified service personnel.
- Keep out of reach of children.
- Use only the provided USB cable for charging.
- Ensure the appliance is switched off before cleaning or maintenance.
- Avoid dropping the trimmer, as this may damage the blades or internal components.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Trimmer Host
- 3 x Limit Combs (1mm, 2mm, 3mm)
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Oil Bottle

Product accessories

Product Parts



Figure 3.1: Included accessories with the Trimmer Plus Zero Gap Hair Clipper.

4. PRODUCT OVERVIEW

The Trimmer Plus Zero Gap Hair Clipper is designed for precise grooming, offering features for sharp lines and smooth finishes.



Figure 4.1: Zero-Gapped Blade for precision.

Key features include:

- **Zero-Gapped Blade:** Designed for creating sharp lines and close cuts without scratching the skin.
- **Powerful Motor:** Provides consistent performance for efficient trimming.
- **Cordless Design:** Offers flexibility and ease of use.
- **USB Charging:** Convenient and fast charging.
- **Non-slip Grip:** Ensures secure handling during use.

Features “Zero-Gapped” Blade Ready to Cut Straight out of the Box

Instantly gives crisp lines
Without scratching
the skin



Figure 4.2: Product features and design elements.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the trimmer.
2. Connect the USB charging cable to the trimmer's charging port.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer USB port.
4. The indicator light will illuminate during charging. A full charge typically takes approximately 3 hours and provides up to 180 minutes of use.

5.2 Blade Inspection

Before each use, inspect the blades for any damage or debris. Ensure the blades are clean and properly aligned for optimal performance and safety.

6. OPERATING INSTRUCTIONS

6.1 Basic Trimming

1. Ensure the trimmer is fully charged.
2. Press the power button to turn on the trimmer.
3. Hold the trimmer at a comfortable angle and gently guide it against the direction of hair growth.
4. For best results, use slow, controlled movements.



Figure 6.1: Demonstrating precise trimming for crisp lines.

6.2 Using Guide Combs

The trimmer comes with three limit combs (1mm, 2mm, 3mm) for varying hair lengths.

1. Select the desired guide comb (1mm, 2mm, or 3mm).
2. Align the comb with the trimmer blade and snap it securely into place.
3. Turn on the trimmer and begin trimming, moving against the direction of hair growth.
4. To remove the comb, gently pull it away from the blade.

**MATCHING THREE LIMITED-SLOT COMBS
THE LENGTHS ARE 1MM, 2MM, AND 3MM, RESPECTIVELY**



Figure 6.2: Guide combs for various hair lengths.

7. MAINTENANCE

7.1 Cleaning the Blades

1. Ensure the trimmer is switched off and unplugged before cleaning.
2. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer head.
3. For a more thorough cleaning, the blade assembly can be carefully detached (refer to specific instructions if provided by manufacturer, otherwise proceed with caution).
4. Do not rinse the trimmer under water unless explicitly stated as waterproof.

7.2 Lubricating the Blades

1. After cleaning, apply a small drop of the provided oil (or a suitable clipper oil) to the blades.
2. Turn on the trimmer for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth. Regular oiling helps maintain blade sharpness and extends the life of the trimmer.

7.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Ensure it is fully charged before long-term storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 3 hours.
Blades are pulling hair or cutting poorly.	Blades are dirty or not lubricated. Blades may be dull.	Clean and oil the blades. If problem persists, blades may need replacement.
Trimmer makes unusual noise.	Blades are obstructed or misaligned.	Clean the blades thoroughly. Ensure blades are properly seated.

9. SPECIFICATIONS

Feature	Detail
Model	Trimmer Plus Zero Gap
Color	Black
Power Source	Battery Powered
Material	Metal
Battery Capacity	1200 mAh
Charging Time	Approx. 3 hours
Operating Time	Up to 180 minutes
Dimensions	7.09 x 2.36 x 2.36 inches (18 x 6 x 6 cm)
Weight	10.58 ounces (approx. 300g)

SIZE



Figure 9.1: Product dimensions.

10. WARRANTY AND SUPPORT

This product is manufactured by GNYBRNN77. For warranty information or technical support, please refer to the contact information provided with your purchase or contact the retailer.

Please note: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a personal grooming appliance.