

[Manuals.plus](#) /

> [FYIOGXG](#) /

> FYIOGXG Replacement Battery for Proscenic S1 / ROBIT H600 Vacuum (PN: H600-C409-A)

FYIOGXG H600-C409-A

FYIOGXG Replacement Battery User Manual

For Proscenic S1 and ROBIT H600 Handheld Vacuum Cleaners (Model: H600-C409-A)

1. PRODUCT OVERVIEW

This document provides essential instructions for the safe and effective use of your FYIOGXG replacement battery, designed for compatibility with the Proscenic S1 and ROBIT H600 handheld vacuum cleaners. This battery features a new, fully decoded chip that functions identically to the original battery.



Image 1: FYIOGXG Replacement Battery.

Compatibility

- **Compatible Models:** ROBIT H600, Proscenic S1 Handheld Vacuum.
- **Part Number:** H600-C409-A.

Before purchase and installation, carefully verify the model number of your device and the part number of your original battery to ensure compatibility.

2. IMPORTANT SAFETY INSTRUCTIONS

Read all safety warnings and instructions before using this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.



Image 2: Battery showing warning labels and specifications.

- **Do not attempt to disassemble, open, or service the battery pack.** Warranty is void if the label is removed.
- **Replace only with the battery pack designed for this product.**
- **Do not crush, puncture, short external contacts, or dispose of in fire or water.**
- **Do not store above 60°C (140°F).**
- **Attention:** New battery pack must be fully charged before use.
- To reduce risk of fire or burns, read instructions in operating guide before using the battery.
- This battery includes overcharge, over-discharge, over-voltage, and short-circuit protection for enhanced safety and battery life.



Image 3: General Battery Guidelines. This image illustrates common battery safety practices, including warnings against disassembling, crushing, heating, or short-circuiting batteries, and emphasizes proper disposal.

3. INSTALLATION

Follow these steps to install the replacement battery into your vacuum cleaner.

1. **Power Off Device:** Ensure your vacuum cleaner is completely powered off and unplugged from any charging source before beginning installation.
2. **Remove Old Battery:** Locate the battery compartment on your vacuum cleaner. Follow your vacuum cleaner's original manual for instructions on safely removing the old battery.
3. **Insert New Battery:** Carefully align the new FYIOGXG battery with the battery compartment. Ensure the connector is properly aligned and securely connected to your device.
4. **Secure Battery:** Close the battery compartment cover, ensuring it is latched or screwed into place according to your vacuum cleaner's design.

Many installation videos are available online for general guidance if you require visual assistance.

4. FIRST USE AND CHARGING

For optimal performance, follow these guidelines for the initial use and charging of your new battery.

- **Initial Charge:** A new battery will achieve its best performance after 2 or 3 complete charge and discharge cycles. Fully charge the battery before its first use.
- **Charging Adapter:** Use only the original or a high-quality, compatible charger designed for your vacuum cleaner. Using low-quality third-party adapter chargers can shorten the battery's life and pose safety risks.
- **Charging Indicator:** Refer to your vacuum cleaner's manual for information on its charging indicator lights and expected charging times.

5. MAINTENANCE AND STORAGE

Proper maintenance and storage will help extend the life of your battery.

- **Regular Use:** Avoid leaving the battery fully discharged for extended periods.
- **Temperature:** Store the battery in a cool, dry place, away from direct sunlight and extreme temperatures. Do not store above 60°C (140°F).
- **Cleaning:** Keep the battery contacts clean and free from dust or debris.
- **Disposal:** Dispose of old or damaged batteries responsibly according to local regulations. Do not dispose of in household waste or fire.

6. TROUBLESHOOTING

If you encounter issues with your new battery, consider the following common solutions:

- **Battery Not Charging:**
 - Ensure the charger is properly connected to both the wall outlet and the vacuum cleaner.
 - Verify that the charging adapter is functional and compatible.
 - Check for any visible damage to the battery or charging port.
- **Short Run Time:**
 - Ensure the battery has completed 2-3 full charge/discharge cycles to reach optimal performance.
 - Confirm the battery is fully charged before use.
 - Check for blockages in the vacuum cleaner that might cause the motor to work harder, consuming more power.
- **Battery Not Fitting:**
 - Double-check the compatibility of the battery model (H600-C409-A) with your specific vacuum cleaner model (Proscenic S1 or ROBIT H600).
 - Ensure correct orientation during installation.

If problems persist, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the FYIOGXG H600-C409-A replacement battery.



Image 4: Top view of the battery, showing model and rating information.

Specification	Value
Model Number	H600-C409-A
Battery Type	Lithium Polymer
Capacity	2200mAh / 24.42Wh
Voltage	11.1V
Dimensions	148.00 x 45.50 x 37.60mm
Weight	190.0g
Reusability	Yes
Manufacturer	CS

8. WARRANTY AND SUPPORT

Your FYIOGXG replacement battery comes with a warranty and dedicated customer support.

- **Warranty:** This product is covered by a 12-month warranty from the date of purchase.
- **Customer Support:** For any questions, concerns, or warranty claims, please contact our customer support. We aim to provide an email reply within 24 hours.