



[Manuals.plus](#) /

> [LEVOLOR](#) /

> LEVOLOR Basics 2" Faux Wood Horizontal Blinds User Manual (Model 1049269)

LEVOLOR 1049269

LEVOLOR Basics 2" Faux Wood Horizontal Blinds User Manual

Model: 1049269

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your LEVOLOR Basics 2" Faux Wood Horizontal Blinds. Please read these instructions thoroughly before beginning installation or operation to ensure proper function and longevity of your product.

SAFETY INFORMATION

The LEVOLOR Basics 2" Faux Wood Horizontal Blinds feature a cordless operating system. This design eliminates dangling cords, providing a safer solution for homes with children and pets. Always ensure the blinds are operated smoothly and without excessive force.

SIZING AND MEASUREMENT

Accurate measurements are crucial for proper fit and function. Please follow these guidelines carefully:

Inside Mount

For inside mount installations, the finished blind will arrive approximately ½" narrower than the selected size to ensure a true-fit installation within the window frame. Measure your window's width at the top, middle, and bottom. Order using your **narrowest** measurement. For height, measure at the left, center, and right. Order using your **tallest** measurement. A minimum depth of ¾" between the windowpane and frame is required.

Outside Mount

For outside mount installations, order a size 2 to 4 inches wider than your window's actual width to ensure adequate coverage and light blockage.

HOW TO MEASURE FAUX WOOD BLINDS

Blinds arrive $\frac{1}{2}$ " narrower than size selected to account for mounting brackets.

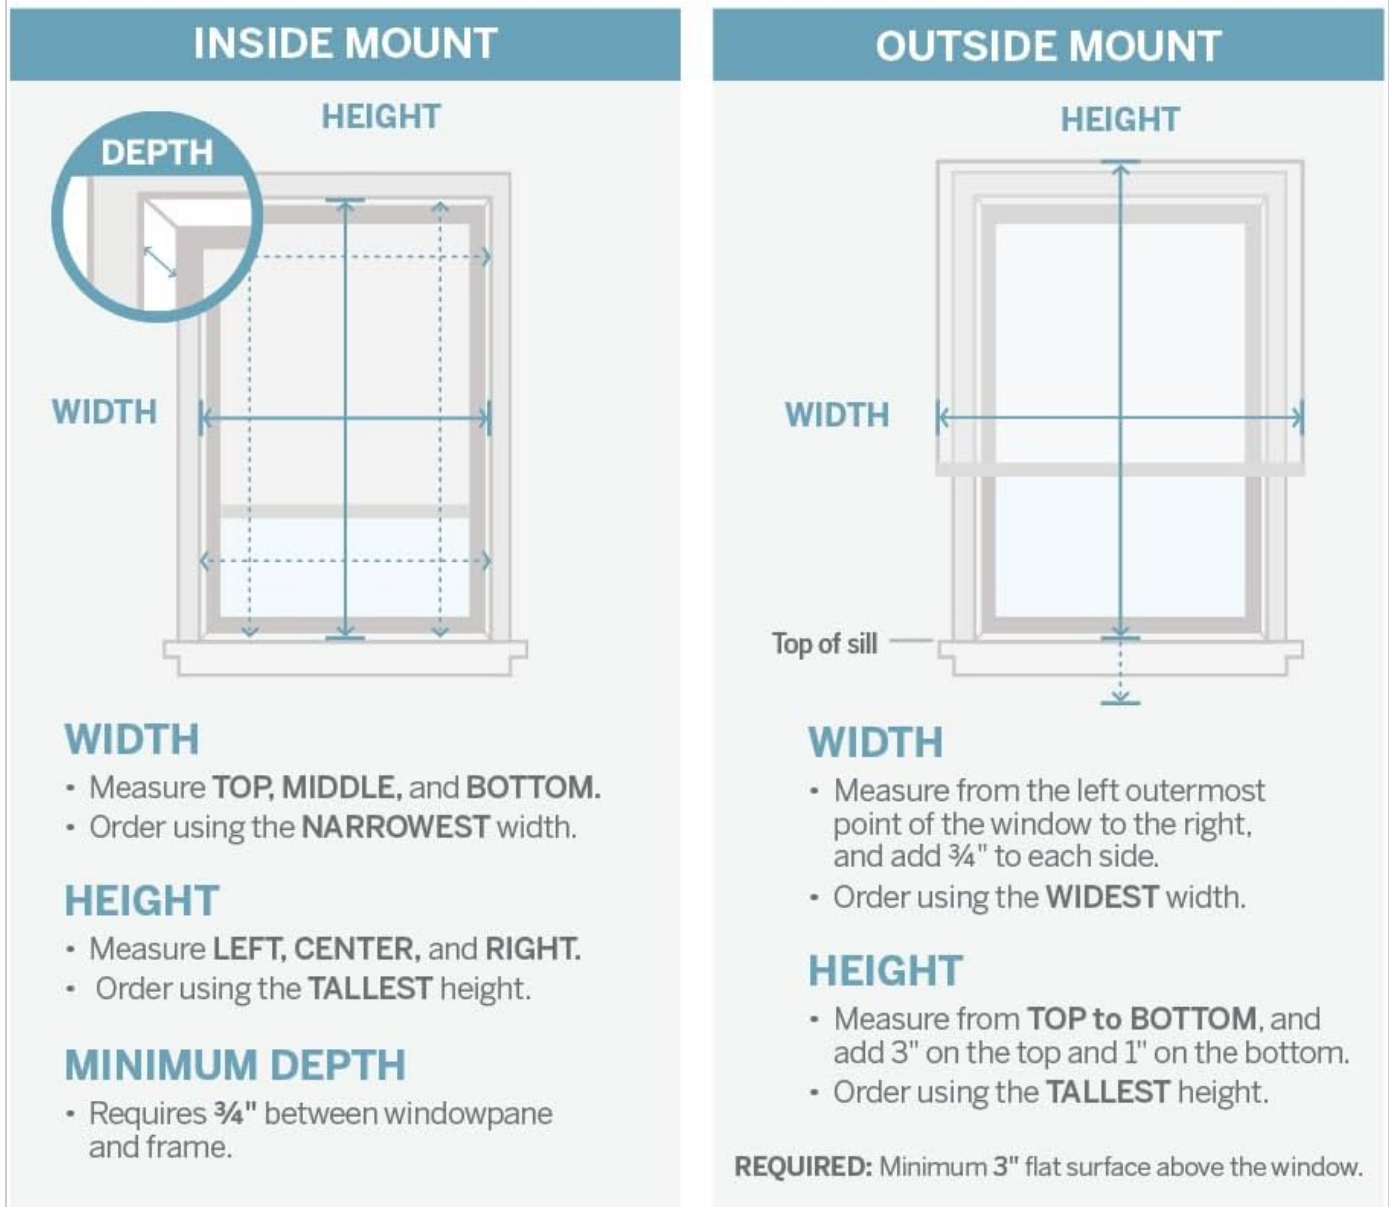


Figure 1: Measurement Guide for Inside and Outside Mount Blinds. This diagram illustrates the correct points to measure for both inside and outside window frame installations, highlighting width, height, and minimum depth requirements.

WHAT SIZE FITS MY WINDOW?

Inside Mount

Window Width	Order This Blind Width
23" - 24"	23"
27" - 28"	27"
29" - 30"	29"
30" - 31"	30"
31" - 32"	31"
32" - 33"	32"
33" - 35"	34"
35" - 36"	35"
36" - 37"	36"
38" - 39"	38"
39" - 40"	39"
46" - 47"	46"
47" - 48"	47"
71" - 72"	71"

Outside Mount

For best light control and privacy, add 2"-6" inches to window width.

Figure 2: Recommended Blind Widths for Inside Mount. This table provides a quick reference for selecting the correct blind width based on your window's measured width for inside mount applications.

Video: How to Measure for Blinds and Shades

Video 1: Official LEVOLOR guide on how to accurately measure your windows for both inside and outside mount blinds and shades. This video demonstrates the measuring process step-by-step.

INCLUDED COMPONENTS

Your package should contain the following items. Quantities of support brackets may vary by blind size (support brackets are provided for blinds wider than 36 inches).

- Box Bracket
- Support Bracket (if applicable)
- Screws
- Valance Clip
- Wand
- Valance

- Blind Assembly

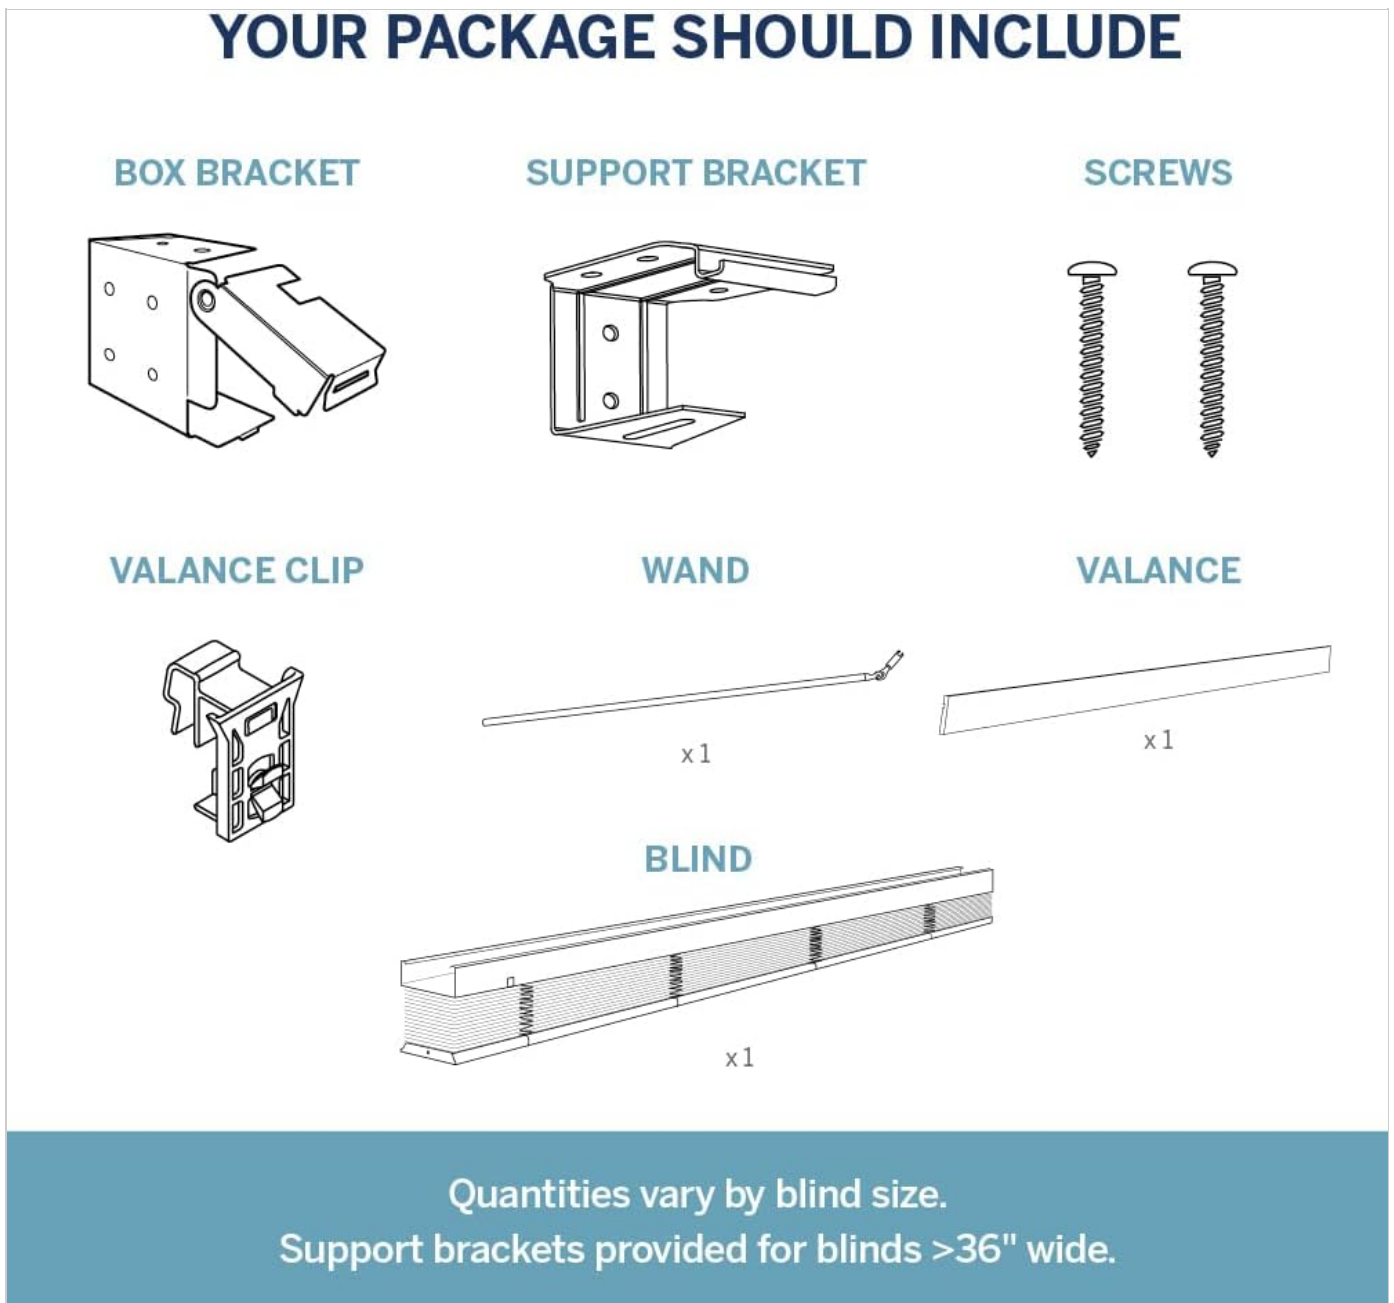


Figure 3: Included Components. This illustration details all parts typically included with your LEVOLOR Basics Faux Wood Blinds, such as mounting hardware, valance, and the operating wand.

INSTALLATION

Installation of your LEVOLOR Basics blinds is designed to be straightforward. Simple instructions are provided to facilitate quick setup. The capped crescent valance covers the corners and hardware for a finished appearance.

Video: Easy Installation Demonstration

Video 2: A user demonstrates the simple and quick installation process for LEVOLOR 2-inch Faux Wood Blinds, highlighting the ease of setup.

OPERATING INSTRUCTIONS

Your cordless blinds are designed for easy and reliable operation.

Adjusting Slats

Use the convenient wand to precisely adjust the angle of the slats. Rotate the wand to open the slats and filter light into the room, or close them for increased privacy and light blockage. The no-hole 2" privacy slat design offers a tighter closure, eliminating route holes for improved light control.

Raising and Lowering Blinds

To raise the blinds, gently push the bottom rail upwards. The cordless mechanism will hold the blinds in place at your desired height. To lower the blinds, gently pull the bottom rail downwards. The blinds will smoothly descend.



Figure 4: Key Features of LEVOLOR Blinds. This image highlights the clean aesthetic, the ease of slat adjustment using the wand, and the convenient cordless lift mechanism.



Figure 5: Light Control Options. This visual demonstrates the difference between open slats for light filtering and closed privacy slats for room darkening, showcasing the enhanced light control.

Video: Cordless Blind Operation


Video 3: A user demonstrates the smooth operation of the cordless faux wood blinds, including opening and closing the slats and raising/lowering the entire blind.

MAINTENANCE AND CLEANING

The blinds are constructed from Polyvinyl Chloride (PVC), making them durable and resistant to moisture. This material ensures long-lasting quality and performance.

Cleaning Instructions

- For routine cleaning, simply dust the slats with a soft cloth or duster.
- For deeper cleaning, the blinds can be easily removed and sprayed off with water. Ensure they are completely dry before re-installing.

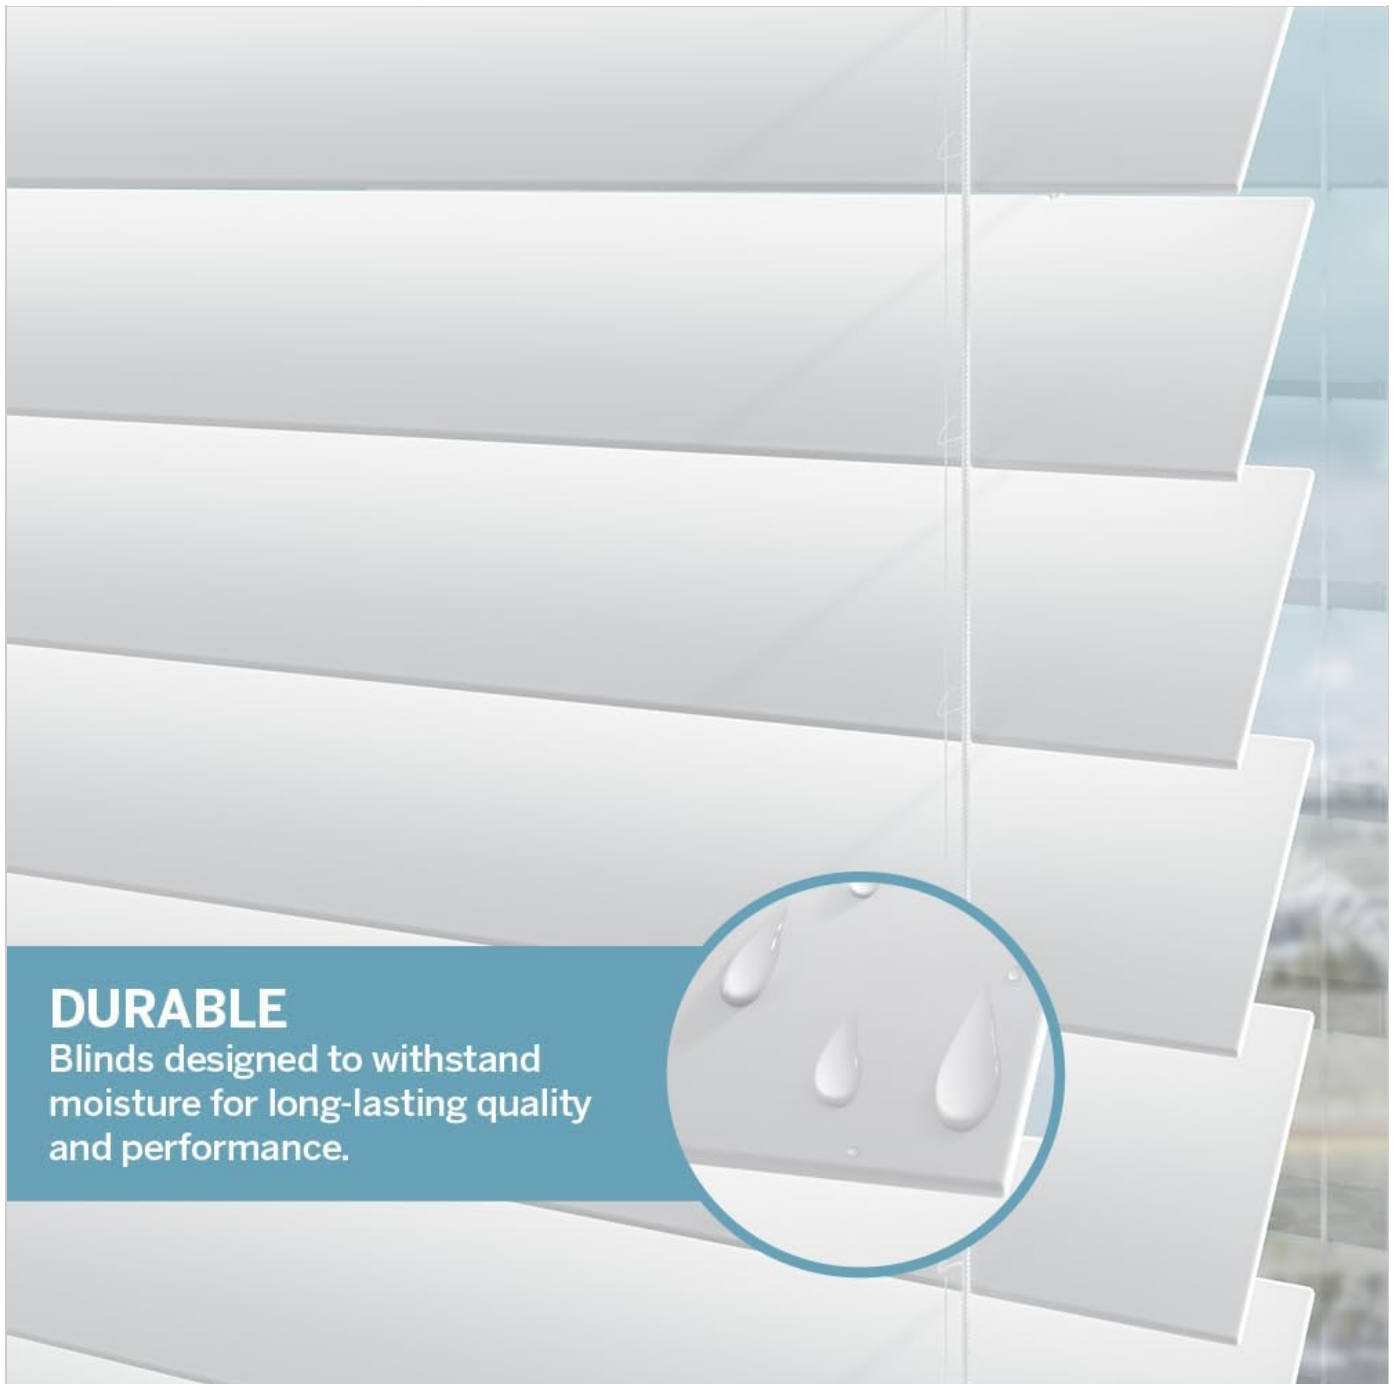

DURABLE

Blinds designed to withstand moisture for long-lasting quality and performance.

Figure 6: Durable and Moisture-Resistant Slats. This close-up image highlights the PVC material's ability to withstand moisture, ensuring durability and ease of cleaning.

TROUBLESHOOTING

If you encounter any issues with your blinds, please review the following common solutions:

- **Blinds not raising/lowering smoothly:** Ensure there are no obstructions in the window frame or along the path of the blinds. Gently operate the bottom rail to reset the cordless mechanism.
- **Slats not rotating:** Check that the wand is securely attached and rotate it fully in both directions to ensure proper engagement with the tilt mechanism.
- **Uneven blinds:** If the blinds appear uneven, gently adjust the bottom rail to level them. The cordless system is designed to maintain an even position.

SPECIFICATIONS

Feature	Detail
Brand	LEVOLOR
Model Number	1049269
Material	Polyvinyl Chloride (PVC)
Product Dimensions (L x W)	64"L x 35"W
Color	White
Opacity	Light Filtering (0.8 inches slat width)
Operation Mode	Manual, Cordless Lift
Control Type	Wand (for slat adjustment)
Mounting Type	Inside Mount (standard)
Additional Features	Routless, Capped Crescent Valance
Item Weight	5.15 Kilograms

WARRANTY AND SUPPORT

Your LEVOLOR Basics 2" Faux Wood Horizontal Blinds are backed by a 1-year Limited Lifetime Warranty. For any questions or support, please contact LEVOLOR customer service.

Contact: 1-800-LEVOLOR

Video: LEVOLOR Customer Support

Video 4: LEVOLOR's official video encouraging customers to contact their support line for any questions regarding their window treatments.

