

[Manuals.plus](#) /

> [Vortex](#) /

> VORTEX V18-Plus 18-inch Pedestal Fan User Manual

Vortex V18 Plus

VORTEX V18-Plus 18-inch Pedestal Fan User Manual


Model: V18 Plus

1. INTRODUCTION AND OVERVIEW

The VORTEX V18-Plus 18-inch Pedestal Fan is engineered for robust, reliable, and high-performance air circulation. Constructed with durable metal grilles, this fan ensures longevity and consistent operation, making it an excellent choice for both residential and commercial environments. Its powerful motor generates significant airflow, providing efficient cooling throughout any room. Key features include three adjustable speeds for personalized airflow and a sturdy build designed to withstand demanding conditions.

2. PRODUCT COMPONENTS

Before assembly, ensure all components are present and undamaged. The package includes the fan head with blades and grille, the adjustable height pole, and the stable base.

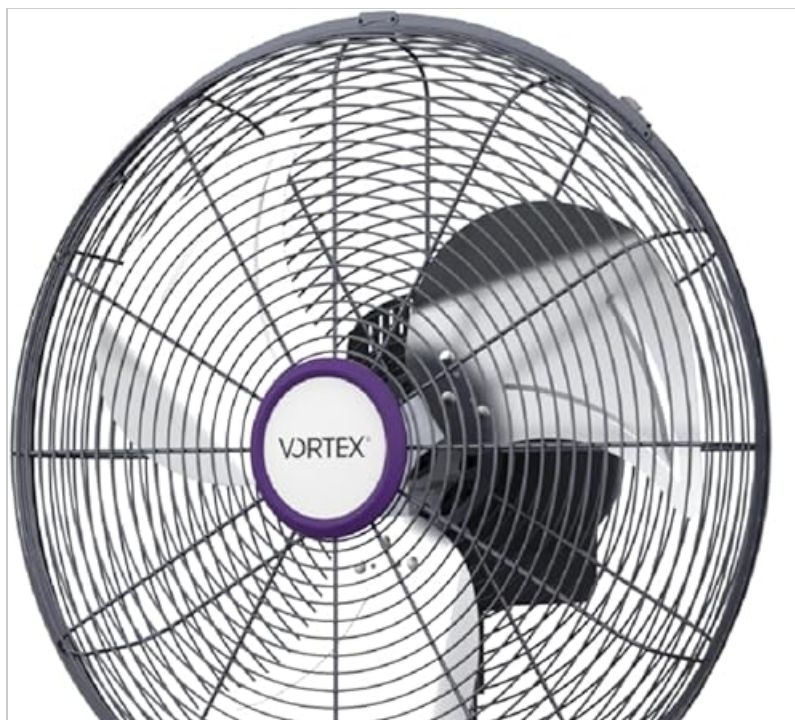 

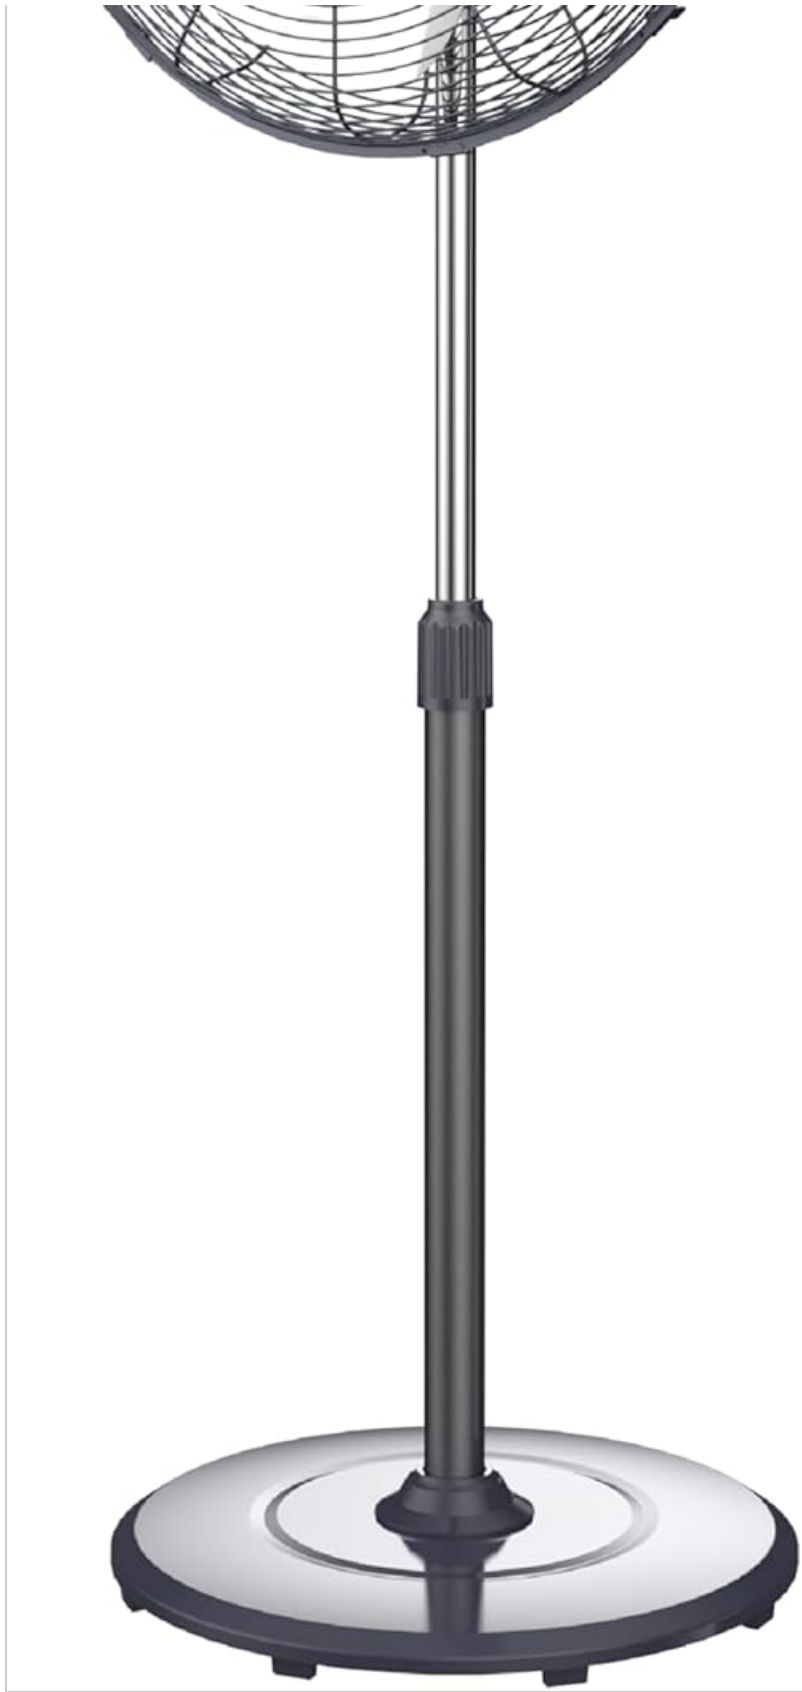 


Figure 1: Front view of the VORTEX V18-Plus 18-inch Pedestal Fan, showcasing its metal grille and overall design.

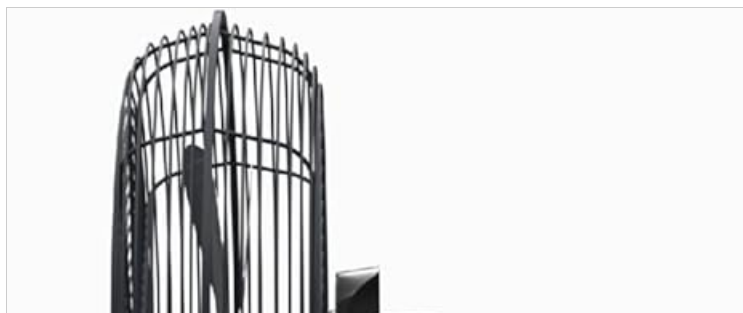 




Figure 2: Side view of the VORTEX V18-Plus 18-inch Pedestal Fan, highlighting its adjustable pole and sturdy base.

3. SETUP AND ASSEMBLY

1. **Attach the Base:** Place the fan base on a flat, stable surface. Insert the bottom section of the adjustable pole into the base and secure it firmly using the provided fasteners.
2. **Adjust Height:** Loosen the height adjustment collar on the pole, extend the pole to your desired height, and then tighten the collar securely.
3. **Mount Fan Head:** Carefully attach the fan head assembly to the top of the adjustable pole. Ensure it clicks into place or is securely fastened according to the instructions in the packaging.
4. **Secure Grille:** Verify that the front and rear metal grilles are properly aligned and securely fastened to prevent accidental contact with the blades.
5. **Power Connection:** Plug the fan's power cord into a standard AC electrical outlet.

4. OPERATING INSTRUCTIONS

The VORTEX V18-Plus fan features tactile controls for ease of use.

- **Power On/Off:** Rotate the tactile control knob located on the fan motor housing to turn the fan on or off.
- **Adjust Speed:** The fan offers 3 adjustable speeds. Rotate the control knob to select your preferred airflow intensity (Low, Medium, High).
- **Oscillation:** To activate the oscillation feature, press down the small pin located on top of the motor housing. To stop oscillation, pull the pin up. The fan oscillates up to 90 degrees to cover a wider area.
- **Tilt Adjustment:** The fan head can be manually tilted up or down to direct airflow precisely where needed. Gently push or pull the fan head to adjust its angle.



Figure 3: Close-up of the tactile control knob for power and speed selection.

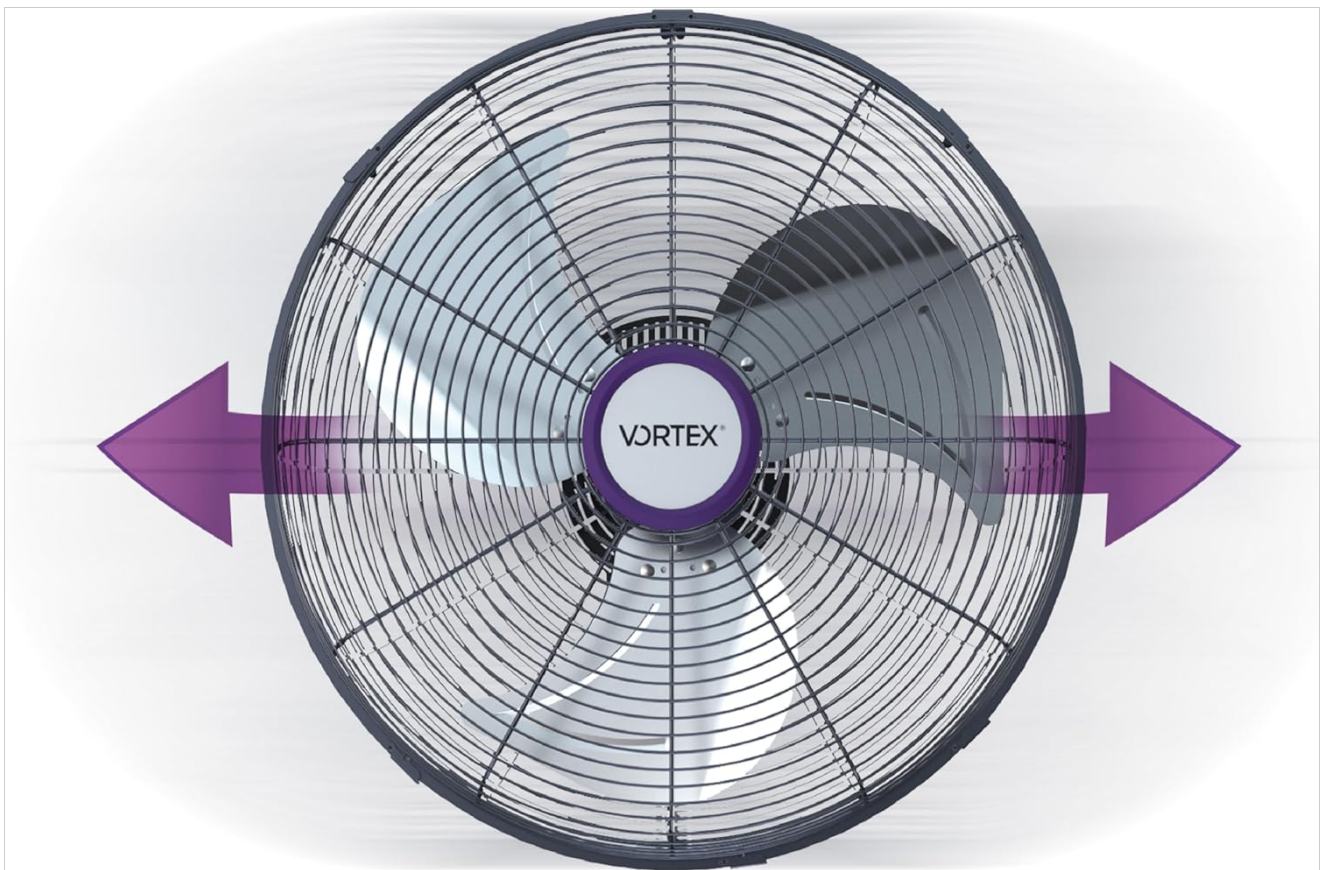 


Figure 4: Top-down view illustrating the fan's 90-degree oscillation capability.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. For the grilles and blades, use a vacuum cleaner with a brush attachment or a soft brush to remove dust and debris. Do not use abrasive cleaners or solvents.
- **Blade Cleaning:** If necessary, the front grille can be removed (refer to assembly instructions in the full manual) to access and clean the fan blades more thoroughly. Ensure all parts are dry before reassembling.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

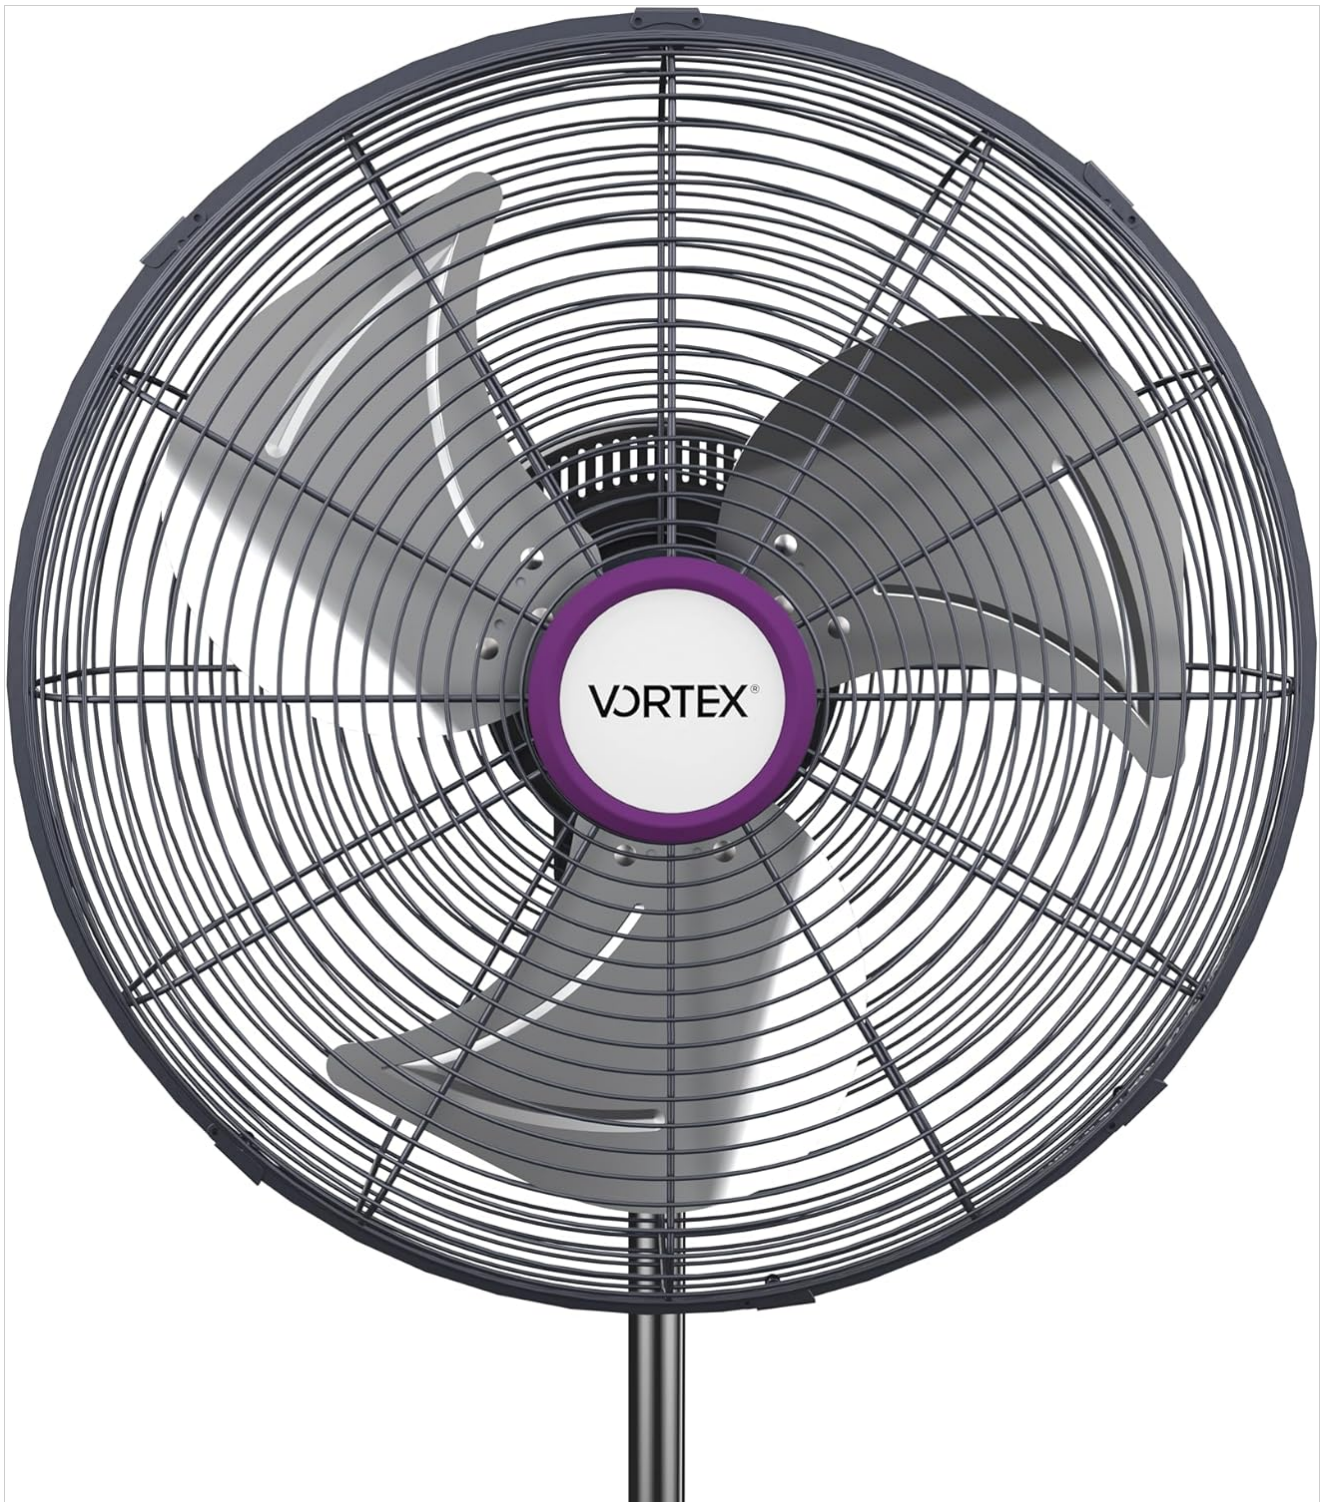 


Figure 5: Close-up of the fan blades and protective metal grille, emphasizing the importance of regular cleaning.

6. TROUBLESHOOTING

If you encounter any issues with your VORTEX V18-Plus fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply; Power cord not plugged in; Control knob is off	Check power outlet; Plug in power cord securely; Turn control knob to desired speed setting
Weak or no airflow	Fan blades or grille are dirty; Incorrect speed setting	Clean fan blades and grille; Select a higher speed setting

Problem	Possible Cause	Solution
Unusual noise during operation	Loose parts; Fan not on a stable surface; Debris caught in blades	Check for and tighten any loose parts; Place fan on a flat, stable surface; Unplug and remove any debris from blades

7. SPECIFICATIONS

- **Brand:** Vortex
- **Model Name:** V18 Plus
- **Electric Fan Design:** Pedestal Fan / Floor Fan
- **Power Source:** AC
- **Style:** Modern
- **Product Dimensions:** 18 cm (Depth) x 60 cm (Width) x 51 cm (Height)
- **Special Feature:** Three Adjustable Speeds
- **Mounting Type:** Floor Mount
- **Material:** Metal
- **Number of Speeds:** 3
- **Control Method:** Tactile
- **Efficiency:** High Efficiency
- **Wireless:** No
- **Number of Power Levels:** 3
- **Installation Type:** Standalone
- **Color:** Grey

8. WARRANTY AND SUPPORT

Your VORTEX V18-Plus Pedestal Fan comes with a standard manufacturer's warranty. For specific warranty details and duration, please refer to the documentation included with your purchase or contact the retailer. Additionally, a 30-day free return policy is available through Amazon.

For further assistance, technical support, or to inquire about replacement parts, please visit the official Vortex website or contact their customer service department. You may also refer to the product's detail page on Amazon for additional information and support options.

Thank you for choosing VORTEX.