

[Manuals.plus](#) /

› [Jaspertronics](#) /

› Jaspertronics™ Replacement Air Filter for Epson EB-X350 Projector User Manual

Jaspertronics EB-X350-FILTER

Jaspertronics™ Replacement Air Filter for Epson EB-X350 Projector

User Manual

INTRODUCTION

This manual provides essential information for the installation, maintenance, and proper use of your Jaspertronics™ Replacement Air Filter for the Epson EB-X350 Projector. Regular maintenance of your projector's air filter is crucial for optimal performance and longevity of the device.

PRODUCT OVERVIEW

The Jaspertronics™ Replacement Air Filter is designed to fit the Epson EB-X350 Projector and a range of other compatible models. It serves as a critical component in preventing dust and debris from entering the projector's internal components, ensuring clear image quality and preventing overheating.



Figure 1: Top view of the Jaspertronics replacement air filter, showing the dark grey foam material within a black plastic frame.



Figure 2: Bottom view of the Jaspertronics replacement air filter, revealing the grid structure that supports the foam filtration material.

COMPATIBILITY

This replacement air filter is compatible with the Epson EB-X350 Projector and many other models. A comprehensive list of compatible projectors includes, but is not limited to:

- 1557759, 880X, CB-X03, EB-108, EB-940H, EB-945, EB-945H, EB-950WH, EB-955W, EB-955WH, EB-965, EB-965H, EB-97H, EB-98H, EB-995W, EB-FH06, EB-S01, EB-S02, EB-S03, EB-S04, EB-S05, EB-S11, EB-S120, EB-S12, EB-S130, EB-S17, EB-S18, EB-S200, EB-S21, EB-S27, EB-S29, EB-S300, EB-S31, EB-S41, EB-U04, EB-U05, EB-U130, EB-U32, EB-U42, EB-W01, EB-W02, EB-W03, EB-W04, EB-W05, EB-W120, EB-W12, EB-W18, EB-W22, EB-W28, EB-W29, EB-W31, EB-W32, EB-W39, EB-W41
- EB-W42, EB-W49, EB-X02, EB-X03, EB-X04, EB-X05, EB-X11, EB-X11H, EB-X120, EB-X12, EB-X130, EB-X14, EB-X14G, EB-X14H, EB-X15, EB-X18+, EB-X18, EB-X200, EB-X20, EB-X21, EB-X24, EB-X25, EB-X27, EB-X29, EB-X300, EB-X30, EB-X31, EB-X350, EB-X36, EB-X39, EB-X41, EB-X49, EH-TW480, EH-TW490, EH-TW5200, EH-TW5300, EH-TW570, EH-TW610, EH-TW650, ELPAF32, ELPAF32 / V13H134A32, ELP-LP78, ELP-LP88, EX3210, EX3212, EX3220, EX3240, EX3260, EX3280

INSTALLATION

Replacing the air filter is a straightforward process. Follow these steps to ensure proper installation:

1. **Power Off and Unplug:** Before beginning, ensure your projector is completely powered off and unplugged from the electrical outlet. Allow it to cool down if it has been recently in use.
2. **Locate the Filter Compartment:** Refer to your projector's specific user manual to locate the air filter compartment. This is typically found on the side or bottom of the projector.
3. **Remove the Old Filter:** Carefully open the filter compartment cover. Gently pull out the old air filter. Note its orientation to ensure the new filter is inserted correctly.



Figure 3: A hand carefully removing the old air filter from the projector's designated compartment.

4. **Insert the New Filter:** Take your new Jaspertronics™ Replacement Air Filter. Align it with the compartment opening and slide it in firmly until it is securely seated. Ensure it is fully inserted and flush with the projector's surface.

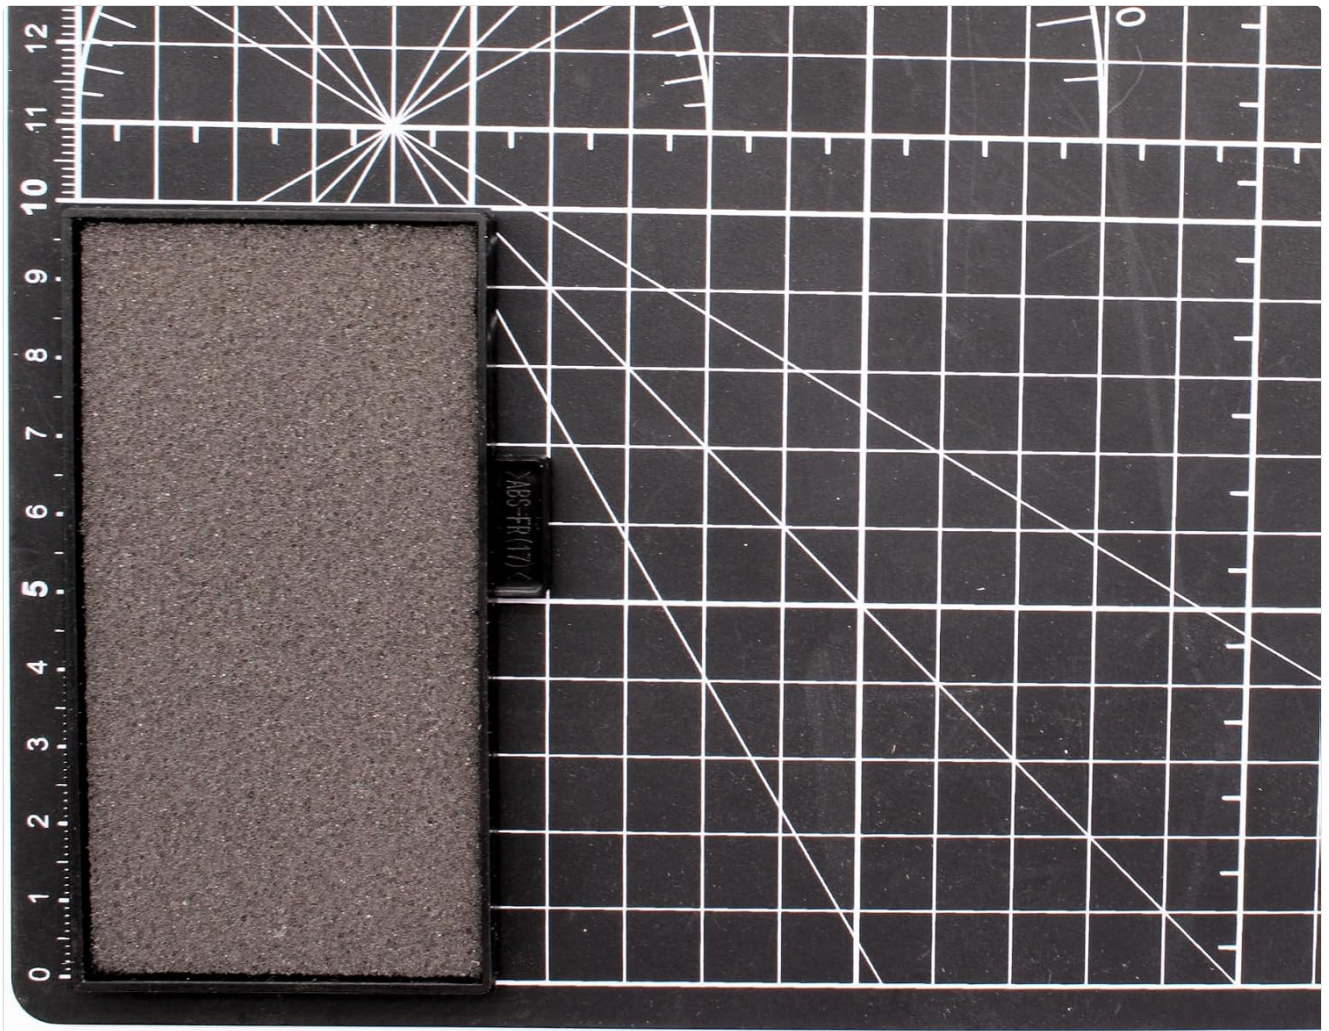


Figure 4: A hand inserting the new Jaspertronics air filter into the projector, ensuring proper alignment.

5. **Close the Compartment:** Close the air filter compartment cover securely.
6. **Reset Filter Counter (if applicable):** Some projectors have an internal filter usage counter. Consult your projector's manual on how to reset this counter after replacing the filter.
7. **Power On:** Plug in your projector and power it on.

MAINTENANCE

Regular cleaning and timely replacement of the air filter are essential for maintaining your projector's performance and extending its lifespan. Dust buildup can lead to overheating and degraded image quality.

- **Cleaning Frequency:**

- For *lamp projectors*, clean the filter regularly (e.g., monthly or bi-monthly, depending on usage and environment).
- For *laser projectors*, aim to replace the filter every 3-6 months.

- **Replacement Frequency:**

- For *lamp projectors*, it is recommended to replace the air filter with every lamp change.
- For *laser projectors*, replace the filter every 3-6 months, or sooner if operating in dusty environments.

- **Cleaning Procedure:** To clean the filter, gently remove it from the projector. Use a soft brush or a low-power vacuum cleaner to remove accumulated dust. **Do not wash the filter with water or cleaning solutions** as this can damage the filtration material.

TROUBLESHOOTING

If you encounter issues after replacing or cleaning your air filter, consider the following:

- **Overheating Warnings:** If your projector displays an overheating warning shortly after filter replacement, ensure the new filter is correctly installed and not obstructed. Verify that the filter compartment cover is fully closed.
- **Dust Spots on Projection:** If you notice new dust spots on your projected image, the filter may not be properly seated, or dust may have entered during the replacement process. Re-check the installation and clean the filter again if necessary.
- **Reduced Airflow:** If you feel less air being expelled from the projector's vents, the filter might be clogged or incorrectly installed. Ensure the filter is clean and properly seated.
- **Filter Life Indicator:** If your projector's filter life indicator does not reset, consult your projector's specific user manual for instructions on how to manually reset it. This is often a menu option within the projector's settings.

SPECIFICATIONS

Attribute	Detail
Product Name	Jaspertronics™ Replacement Air Filter
Compatible Projector Model	Epson EB-X350 (and others listed in Compatibility section)
Item Model Number	EB-X350-FILTER
Manufacturer	Jaspertronics
Item Weight	1.6 ounces
ASIN	B0DZJ3MKMX
Contents	1 x Air Filter

WARRANTY AND SUPPORT

For specific warranty information regarding your Jaspertronics™ Replacement Air Filter, please refer to the product packaging or contact Jaspertronics customer support directly. General support and inquiries can be directed to the manufacturer's official channels.

For further assistance with your projector, please consult your projector's original user manual or contact the projector manufacturer's support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question