

[Manuals.plus](#) /

> [Ninja](#) /

> Ninja Crispi 4-in-1 Portable Glass Air Fryer Cooking System FN101MT User Manual

Ninja FN101MT

Ninja Crispi 4-in-1 Portable Glass Air Fryer Cooking System User Manual

Model: FN101MT

1. INTRODUCTION

Welcome to the Ninja Crispi 4-in-1 Portable Glass Air Fryer Cooking System. This compact appliance combines the power of a full-sized air fryer with the convenience of portable, non-toxic glass containers. It is designed for versatile cooking, offering Max Crisp, Bake, Air Fry, and Recrisp functions. This manual provides essential information for safe operation, maintenance, and optimal use of your new cooking system.



Image: The Ninja Crispi PowerPod with a 4-quart glass container filled with cooked chicken wings and a 6-cup container with salmon and broccoli.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Ninja Crispi system to prevent property damage, personal injury, or death. Keep this manual for future reference.

- Always ensure the PowerPod is securely seated on the container before operation.
- Do not immerse the PowerPod in water or other liquids.

- Use only Ninja Crispi approved accessories and containers.
- Ensure adequate ventilation around the appliance during use.
- The PowerPod generates high heat. Avoid touching hot surfaces. Use oven mitts when handling hot containers.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- The glass containers are designed for non-toxic cooking and storing, free from PFAS and PTFE.
- The system features fixed heat protection feet, allowing safe placement on various countertop materials like granite, laminate, quartz, butcher block, and marble.



Image: The Ninja Crispi PowerPod and a glass container on a kitchen counter, illustrating the fixed heat protection.

3. WHAT'S INCLUDED

Your Ninja Crispi 4-in-1 Portable Glass Air Fryer Cooking System includes the following components:

- **Ninja Crispi PowerPod:** The main heating and control unit.
- **4-Quart CleanCrisp Glass Container:** For larger meals and batches.
- **6-Cup CleanCrisp Glass Container:** Ideal for personal-sized meals.
- **Crispi Container Adapter:** Allows the PowerPod to be used with the larger 4-quart container.
- **2 Storage Lids:** Leak-proof snap-lock lids for convenient food storage and transport.

Perfect for entertaining

Cook entrees in the big-batch container and snacks, sides, and desserts in the small-batch container.



Image: An exploded view showing the Ninja Crispi PowerPod, 6-cup container, 4-quart container, adapter, and storage lids.

4. SETUP

Before first use, wash all glass containers, crisper plates, and lids in warm, soapy water, then rinse and dry thoroughly. The PowerPod should be wiped clean with a damp cloth.

4.1 Assembling for Small-Batch Cooking (6-Cup Container)

1. Place the 6-cup CleanCrisp glass container on a stable, heat-resistant surface.
2. Ensure the crisper plate is inserted into the container if desired for air frying.
3. Align the Ninja Crispi PowerPod directly onto the 6-cup container. Press down gently until it clicks securely into place.
4. Plug the PowerPod into a 120V electrical outlet.

4.2 Assembling for Big-Batch Cooking (4-Quart Container)

1. Place the 4-quart CleanCrisp glass container on a stable, heat-resistant surface.
2. Insert the Crispi Container Adapter onto the 4-quart container, ensuring it sits flush.
3. Ensure the crisper plate is inserted into the container if desired for air frying.
4. Align the Ninja Crispi PowerPod onto the adapter. Press down gently until it clicks securely into place.
5. Plug the PowerPod into a 120V electrical outlet.

Snap it

1500-watt air fryer in a lightweight, handheld pod



Crisp it

Up to 450°F superheated air for evenly crispy results



Serve it

Easy-grip handles let you serve directly from the cooking bowl



Store it

Leak-resistant BPA-free dishwasher-safe lids



Image: A hand placing the Ninja Crispi PowerPod onto a glass container filled with food, demonstrating assembly.



Image: The Ninja Crispi PowerPod lifted from the small container, revealing the adapter for the larger container, with the larger container in the background.

5. OPERATION

The Ninja Crispi offers four cooking functions: Max Crisp, Bake, Air Fry, and Recrip. The control panel features a digital display, mode button, temperature/time adjustment buttons, and a start/stop button.

5.1 Control Panel Overview

- **MODE Button:** Press to cycle through Max Crisp, Bake, Air Fry, and Recrip functions.
- **+/- Buttons:** Adjust cooking time or temperature.
- **START/STOP Button:** Begin or end a cooking cycle.



Take meals on the go

The small-batch CleanCrisp™ container comes with a snap-lock, leak-resistant lid for easy, mess-free transport.

Image: A close-up of the Ninja Crispi PowerPod's control panel, showing the digital display and function buttons.

5.2 Cooking Functions

The system utilizes 1500W of power to deliver superheated air up to 450°F for efficient cooking.

- **Max Crisp:** Ideal for achieving maximum crispiness on foods like frozen fries or chicken wings.
- **Bake:** Perfect for baking small items such as cookies or reheating pastries.
- **Air Fry:** For cooking a variety of foods with little to no oil, resulting in a crispy exterior and tender interior.
- **Recrisp:** Revitalize leftovers, restoring their original crisp texture.

Easy to clean

The Ninja CRISPi® adapter and CleanCrisp™ glassware and lids are dishwasher safe for quick and easy cleanup.

Image: A graphic illustrating the four cooking functions: Recrisp (cookies), Bake (salmon and bok choy), Air Fry (chicken wings), and Max Crisp (french fries).

5.3 Cooking Process

1. Prepare your food and place it in the appropriate CleanCrisp glass container.
2. Ensure the PowerPod is securely attached to the container (with adapter for 4-quart).
3. Press the **MODE** button to select your desired cooking function.
4. Use the **+/-** buttons to adjust the cooking time and temperature as needed.
5. Press the **START/STOP** button to begin cooking.
6. The appliance will beep when cooking is complete. Carefully remove the PowerPod and then the container.



Image: A split image showing a small-batch meal (salmon and vegetables) and a big-batch meal (whole chicken and vegetables) being cooked.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your Ninja Crispi system.

6.1 Cleaning the PowerPod

- Always unplug the PowerPod and allow it to cool completely before cleaning.

- Wipe the exterior of the PowerPod with a clean, damp cloth.
- Do not immerse the PowerPod in water or place it in a dishwasher.
- For stubborn residue on the heating element, use a non-abrasive brush or sponge.

6.2 Cleaning Glass Containers, Crisper Plates, and Lids

- All CleanCrisp glass containers, crisper plates, and storage lids are dishwasher safe.
- Alternatively, wash them in warm, soapy water using a non-abrasive sponge.
- Rinse thoroughly and dry before storing.



Image: A dishwasher rack containing Ninja Crispi glass containers and lids, indicating they are dishwasher safe.



Image: A graphic highlighting CleanCrisp Glassware, designed for non-toxic cooking and storing, free from PFAS and PTFE.

7. STORAGE

The Ninja Crispi system is designed for convenient, mess-free storage with its nesting components.

- Ensure all components are clean and dry before storing.
- The PowerPod, adapter, and glass containers are designed to nest together, minimizing cabinet space.
- Store the appliance in a cool, dry place.



Image: The Ninja Crispi PowerPod and glass containers nested together and stored neatly inside a kitchen cabinet.

8. TROUBLESHOOTING

If you encounter any issues with your Ninja Crispi system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; PowerPod not securely attached.	Ensure the power cord is firmly plugged into a 120V outlet. Verify the PowerPod is clicked into place on the container/adaptor.
Food is not cooking evenly.	Overcrowding the container; incorrect temperature/time.	Avoid overcrowding; cook in smaller batches. Adjust temperature and time as per recipe or desired doneness. Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease or food residue on heating element.	Unplug and allow to cool. Clean the heating element and interior of the PowerPod. Ensure food is not touching the heating element.
Food is not crispy.	Too much moisture; not enough oil (if applicable); overcrowding.	Pat food dry before cooking. Lightly coat food with oil for enhanced crispiness. Do not overcrowd the container. Use the Max Crisp function.

If the problem persists, please contact Ninja Customer Support.

9. SPECIFICATIONS

- **Model:** FN101MT
- **Voltage:** 120 Volts
- **Output Wattage:** 1500 Watts
- **Capacity:** 4 Quarts (large container), 6 Cups (small container)
- **Max Temperature Setting:** 450 Degrees Fahrenheit
- **Control Method:** Touch (Push Button Controller)
- **Product Dimensions:** 13.39"D x 11.97"W x 13.58"H

- **Item Weight:** 13.67 pounds
- **Material:** Metal (PowerPod), Glass (Containers)
- **Special Features:** Programmable, Temperature Control, Timer, Fixed Heat Protection
- **Dishwasher Safe Components:** Glass containers, crisper plates, adapter, and lids.
- **UPC:** 622356691147

10. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Ninja website. Ninja is committed to product quality and customer satisfaction.

If you require assistance, have questions, or need to register your product, please contact Ninja Customer Support:

- **Website:** www.ninjakitchen.com
- **Phone:** Refer to your product registration or the Ninja website for the most current contact number.

© 2025 Ninja. All rights reserved. Ninja is a registered trademark of SharkNinja Operating LLC.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DZK1DSH9>

More documents and user manuals: <https://manuals.plus/>