

Tek Styz TS-1937

Tek Styz Portable Bluetooth Speaker Instruction Manual

Model: **TS-1937**

Portable Bluetooth Speaker Clip-On Compatible with Samsung Galaxy S10/S10e/S10+/S10 Plus/10 5G/Lite IPX5 Stereo & Mic Setup/Magnet Mount/ 18 Hours+ Indoor/Home/Party/Outdoor/Beach/Travel

1. PRODUCT OVERVIEW

The Tek Styz TS-1937 is a compact and versatile portable Bluetooth speaker designed for on-the-go audio. Featuring a clip-on and magnetic mount, it offers hands-free listening for various activities. With IPX5 water resistance, a built-in microphone for calls, and up to 18 hours of battery life, it's suitable for both indoor and outdoor use.



MINI Wearable Bluetooth Speaker

The Ultimate Portable Bluetooth Speaker – Compact, Durable & Powerful

Clip-On

Magnetic Mount

Waterproof

18+ Hours Battery

Dual Stereo Pairing

Image: The Tek Styz Mini Wearable Bluetooth Speaker, highlighting its compact, durable, and powerful design with features like clip-on, magnetic mount, waterproof rating, 18+ hours battery, and dual stereo pairing.

Key features include:

- **Portable Magnetic Clip-On Design:** Easily attachable to clothing, bags, or other magnetic surfaces for convenient, hands-free use.
- **Durable IPX5 Water Resistance:** Built to withstand splashes and light rain, making it ideal for outdoor activities.
- **Long Battery Life:** Up to 18 hours of playtime on a single charge, with fast USB-C charging.
- **High-Quality Audio:** Delivers crisp and clear stereo sound with a 3W output.
- **Built-in Microphone:** Supports hands-free calling with noise-canceling technology.

- **Bluetooth 5.4 Connectivity:** Ensures stable, low-latency connections with a range of up to 800 feet.
- **Voice Assistant Compatibility:** Works with popular voice assistants like Alexa, Siri, Google Voice, and ChatGPT.

2. SETUP GUIDE

2.1. Charging the Speaker

Before first use, fully charge the speaker. Use the included USB Type-C charging cable. A charger block/adaptor is not included; you may use your existing cell/mobile phone's charger.

- Connect the USB-C end of the cable to the speaker's charging port.
- Connect the USB-A end to a compatible USB power source (e.g., wall adapter, computer USB port).
- The charging indicator light will show the charging status. A full charge typically takes about 1 hour.



Image: Visual representation of the speaker's long-lasting 18+ hours battery life and fast 600mAh USB-C charging in just 1 hour.

2.2. Powering On/Off

- **To Power On:** Long press the power button (located on top) for 3 seconds. You will hear an audible prompt, and the indicator light will illuminate.
- **To Power Off:** Long press the power button for 3 seconds. You will hear an audible prompt, and the indicator light will turn off.

LARGE BUTTONS EASY TO OPERATE

Simple and fashion,meeting your needs



Power on: Long press 3 seconds
Power off: Long press 3 seconds
Short press to talk/hang up



short press symbol volume up,
long press previous song



short press the symbol
volume down,
long press the next song



Image: A close-up diagram of the speaker's top panel, illustrating the power button and volume/track control buttons with their respective functions.

2.3. Bluetooth Pairing

The speaker will automatically enter pairing mode when powered on for the first time or if no device is connected.

1. Ensure the speaker is powered on and the indicator light is blinking, indicating it's in pairing mode.
2. On your device (e.g., smartphone, tablet), go to Bluetooth settings and turn on Bluetooth.
3. Search for available devices. Select "Tek Styz TS-1937" (or similar name) from the list.
4. Once connected, the indicator light on the speaker will become solid, and you will hear a confirmation sound.

Dual Stereo Pairing (TWS): To achieve true wireless stereo sound, you can pair two TS-1937 speakers together. Refer to the specific instructions for TWS pairing, usually involving powering on both speakers and initiating pairing on one of them to connect to the other before connecting to your device.

3. OPERATING INSTRUCTIONS

3.1. Basic Controls

Button/Action	Function
Power Button (Top)	Long press 3 seconds: Power On/Off Short press: Answer/End Call
"+" Button	Short press: Volume Up Long press: Previous Song
"-" Button	Short press: Volume Down Long press: Next Song

3.2. Hands-Free Calling

The built-in microphone allows for clear hands-free communication.

- **Answering a Call:** When a call comes in, short press the Power button.
- **Ending a Call:** During a call, short press the Power button.
- **Rejecting a Call:** Long press the Power button when a call comes in.



Smart Voice Assistant and Hands-Free Calling

- Built-In Mic & AI Voice Assistant Compatible
- Works with Alexa, Siri, Google Voice, ChatGPT
- Noise-canceling microphone for clear hands-free calls

Image: A visual demonstrating the speaker's capability for smart voice assistant integration and clear hands-free calling, featuring a person using the speaker while working.

3.3. Mounting and Portability

The TS-1937 speaker offers multiple ways to carry and use it:

- **Clip-On:** Use the integrated spring clip to attach the speaker to clothing (e.g., collar, pocket), bags, or other suitable surfaces.
- **Magnetic Mount:** The speaker features a strong magnet, allowing it to securely attach to magnetic surfaces or be used with the included magnetic clip for double-sided magnetic attachment to fabric.
- **Tabletop:** Its compact design allows it to stand freely on flat surfaces.

Clip it. Stick it. Carry it Anywhere.

- Magnetic base & clip-on mount for hands-free use
- Attach to bikes, backpacks, clothing, or gym gear



Image: An illustration showing the speaker's magnetic base and clip-on mount, demonstrating how it can be attached to various items like bikes, backpacks, clothing, or gym gear for hands-free use.

4. MAINTENANCE

Proper care ensures the longevity of your Tek Styz TS-1937 speaker.

- **Cleaning:** Wipe the speaker with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the ports. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance (IPX5):** The speaker is IPX5 water-resistant, meaning it can withstand splashes and light rain. Do not submerge the speaker in water or expose it to strong jets of water. Ensure the charging port cover is securely closed when near water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to about 50% to preserve battery health.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the speaker when the low battery indicator appears.

5. TROUBLESHOOTING

Problem	Possible Cause / Solution
Speaker does not power on.	Battery is depleted. Charge the speaker for at least 1 hour. Power button not pressed long enough. Long press for 3 seconds.

Problem	Possible Cause / Solution
Cannot pair with device.	Speaker is not in pairing mode. Ensure the indicator light is blinking. Bluetooth is off on your device. Enable Bluetooth. Speaker is already connected to another device. Disconnect from the other device or turn off its Bluetooth. Too far from the speaker. Keep devices within 33 feet (10 meters). Try restarting both the speaker and your device.
No sound or low volume.	Volume on speaker or device is too low. Adjust volume on both. Speaker is not connected. Re-pair the speaker with your device. Audio source issue. Try playing different audio.
Poor call quality.	Speaker is too far from your mouth. Ensure the speaker is positioned appropriately. Interference from other devices. Move away from other electronic devices. Weak Bluetooth connection. Move closer to your paired device.

6. SPECIFICATIONS

Feature	Detail
Model Name	TS-1937
Brand	Tek Styz
Mounting Type	Clip-On, Magnetic to Clothing, Bag, Hang, TableTop
Material	Aluminum, Hi Strength Plastic
Speaker Type	Portable, Travel, Clip-One, Waterproof
Special Feature	Digital IC Chip, Heavy Duty, Lightweight, Tangle Free Cord, Water Resistant
Recommended Uses	Audio Amplification, Hearing Aid, Listening to Music, Sports
Compatible Devices	Android, IOS, Mac, Samsung Galaxy S10/S10e/S10+/S10 Plus/10 5G/Lite, Windows
Surround Sound Channel	2.0 (Stereo)
Color	Black
Product Dimensions	2.87"D x 1.11"W x 1.68"H
Item Weight	4 Ounces
Impedance	25.94 Ohm
Maximum Range	800 Feet (Wireless)
Control Method	Touch Buttons
Wireless Technology	Bluetooth 5.4
Power Source	Battery Powered

Feature	Detail
Water Resistance Level	IPX5 Water Resistant
Battery Type	1 Nonstandard Battery (included)
Battery Capacity	600 Milliamp Hours
Charging Time	1 Hour
Audio Driver Type	Dynamic Driver
Audio Driver Size	72 Millimeters
Audio Latency	6 Milliseconds
Speaker Max Output Power	3 Watts
Frequency Response	17 KHz
Indoor/Outdoor Usage	Indoor, Outdoor
Included Components	Hi Power Clip-One Bluetooth 5.3 Speaker, Manual, Charging Cable

Specifications

Sound & Performance
3W Stereo Output | 72mm Dynamic Driver | 6ms Low Latency

Connectivity
Bluetooth 5.4 | 800ft Range | USB, Car Adapter, Wireless

Battery & Power
600mAh Battery | Up to 18H Playtime | 1-Hour Fast Charging

Durability & Design
IPX5 Water-Resistant | Shockproof | Clip-On, Magnetic Mount

Smart Features
Built-in Mic | AI Voice Assist | Alexa, Siri, Google, ChatGPT

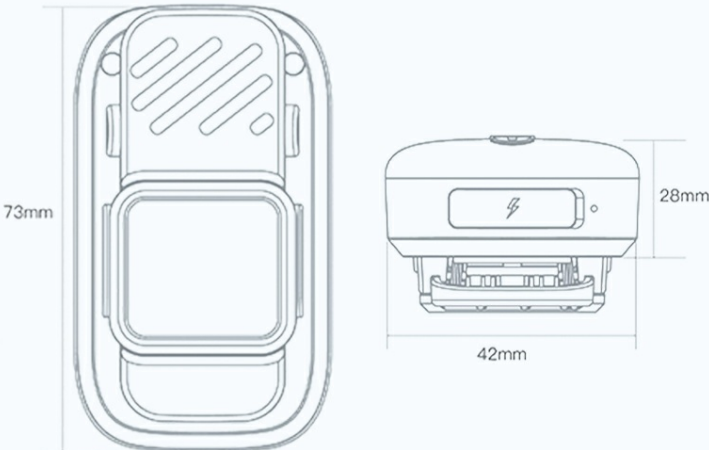


Image: Detailed technical specifications and dimensions of the speaker, including sound, connectivity, battery, durability, and smart features.

7. WARRANTY AND SUPPORT

Tek Styz products are designed for reliability and performance. For any questions, technical support, or warranty claims, please refer to the contact information provided with your purchase or visit the official Tek Styz website. Please retain your proof of purchase for warranty purposes.

For additional information, you may visit the [Tek Styz Store on Amazon](#).

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DZK6PJRK>

More documents and user manuals: **<https://manuals.plus/>**